



Safe construction - Dokadek 30


Take note of allowed bracing points!

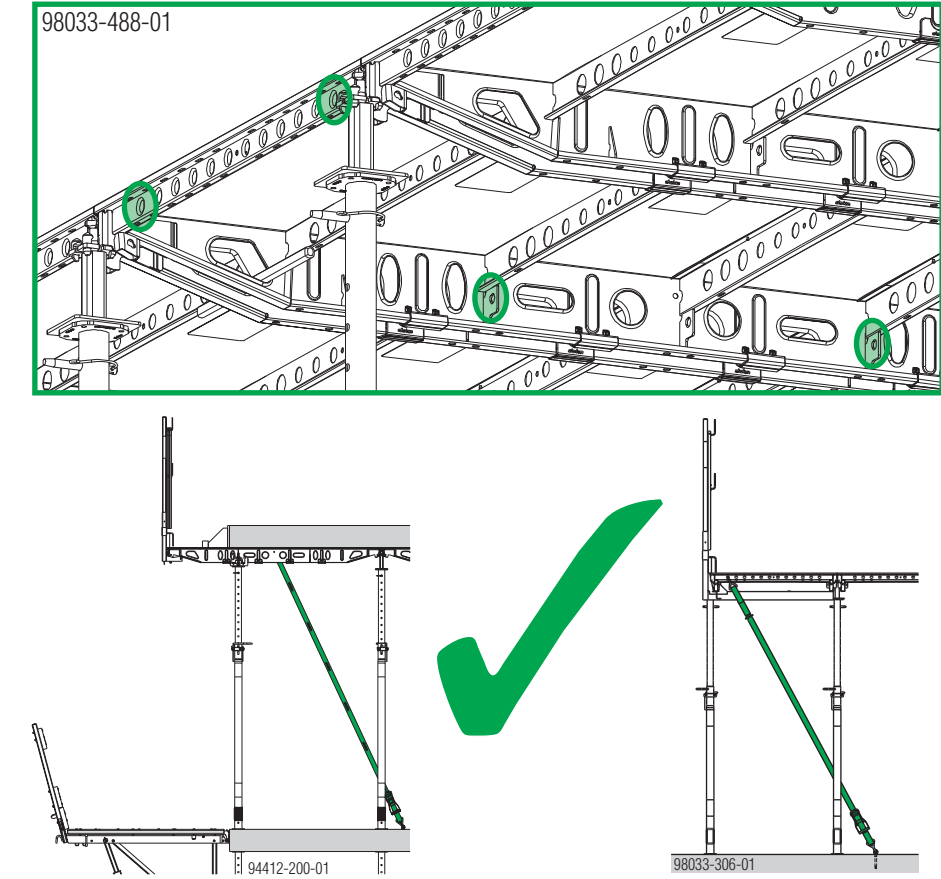


Closing the formwork at typical section

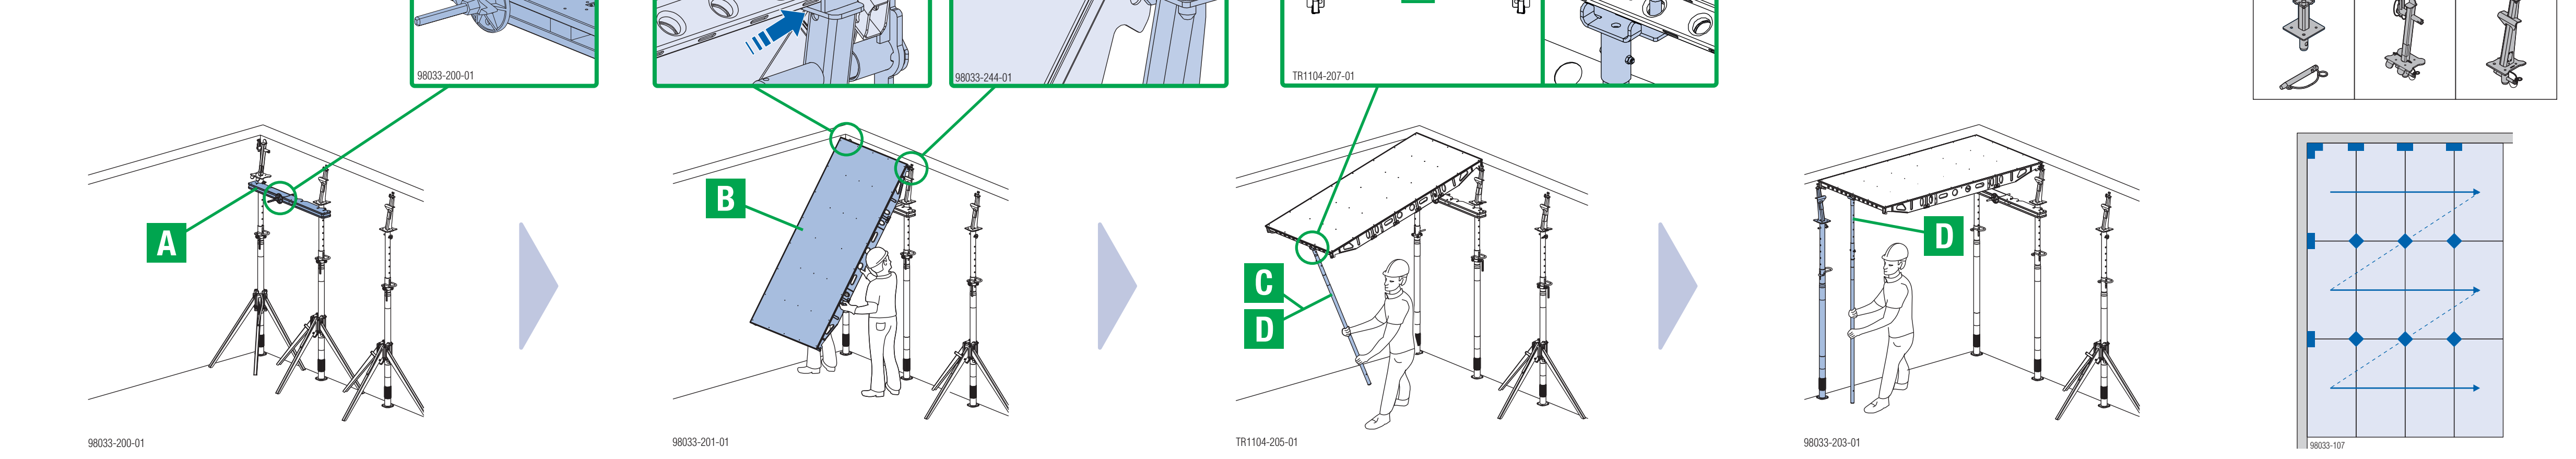


Avoid collision!

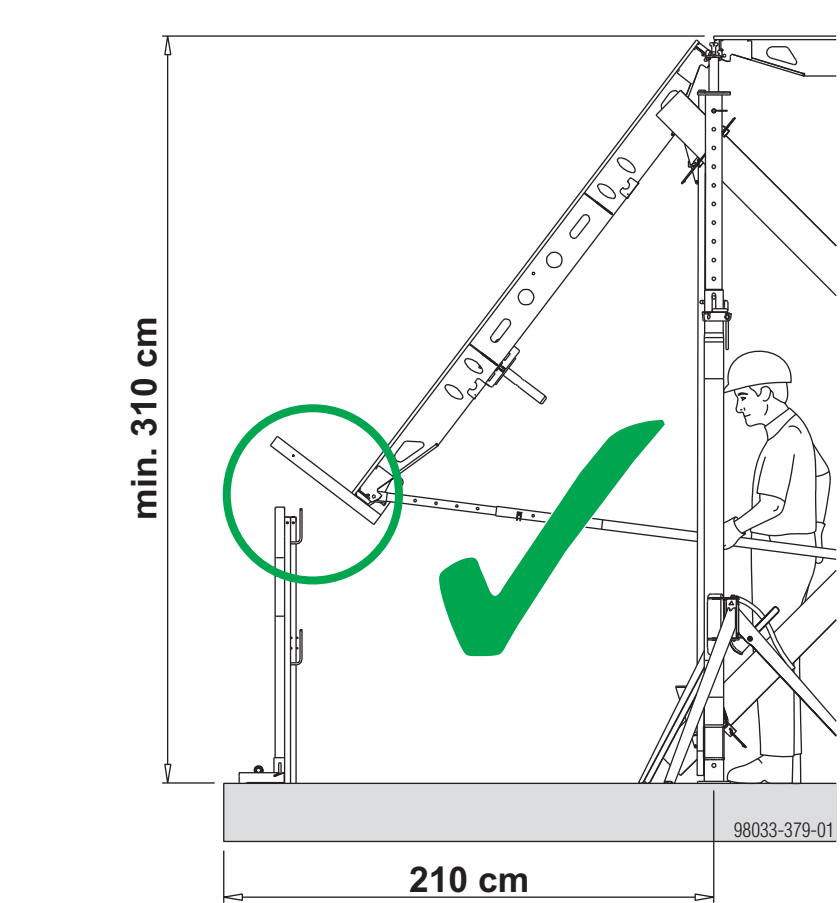


Closing the formwork at structure edge

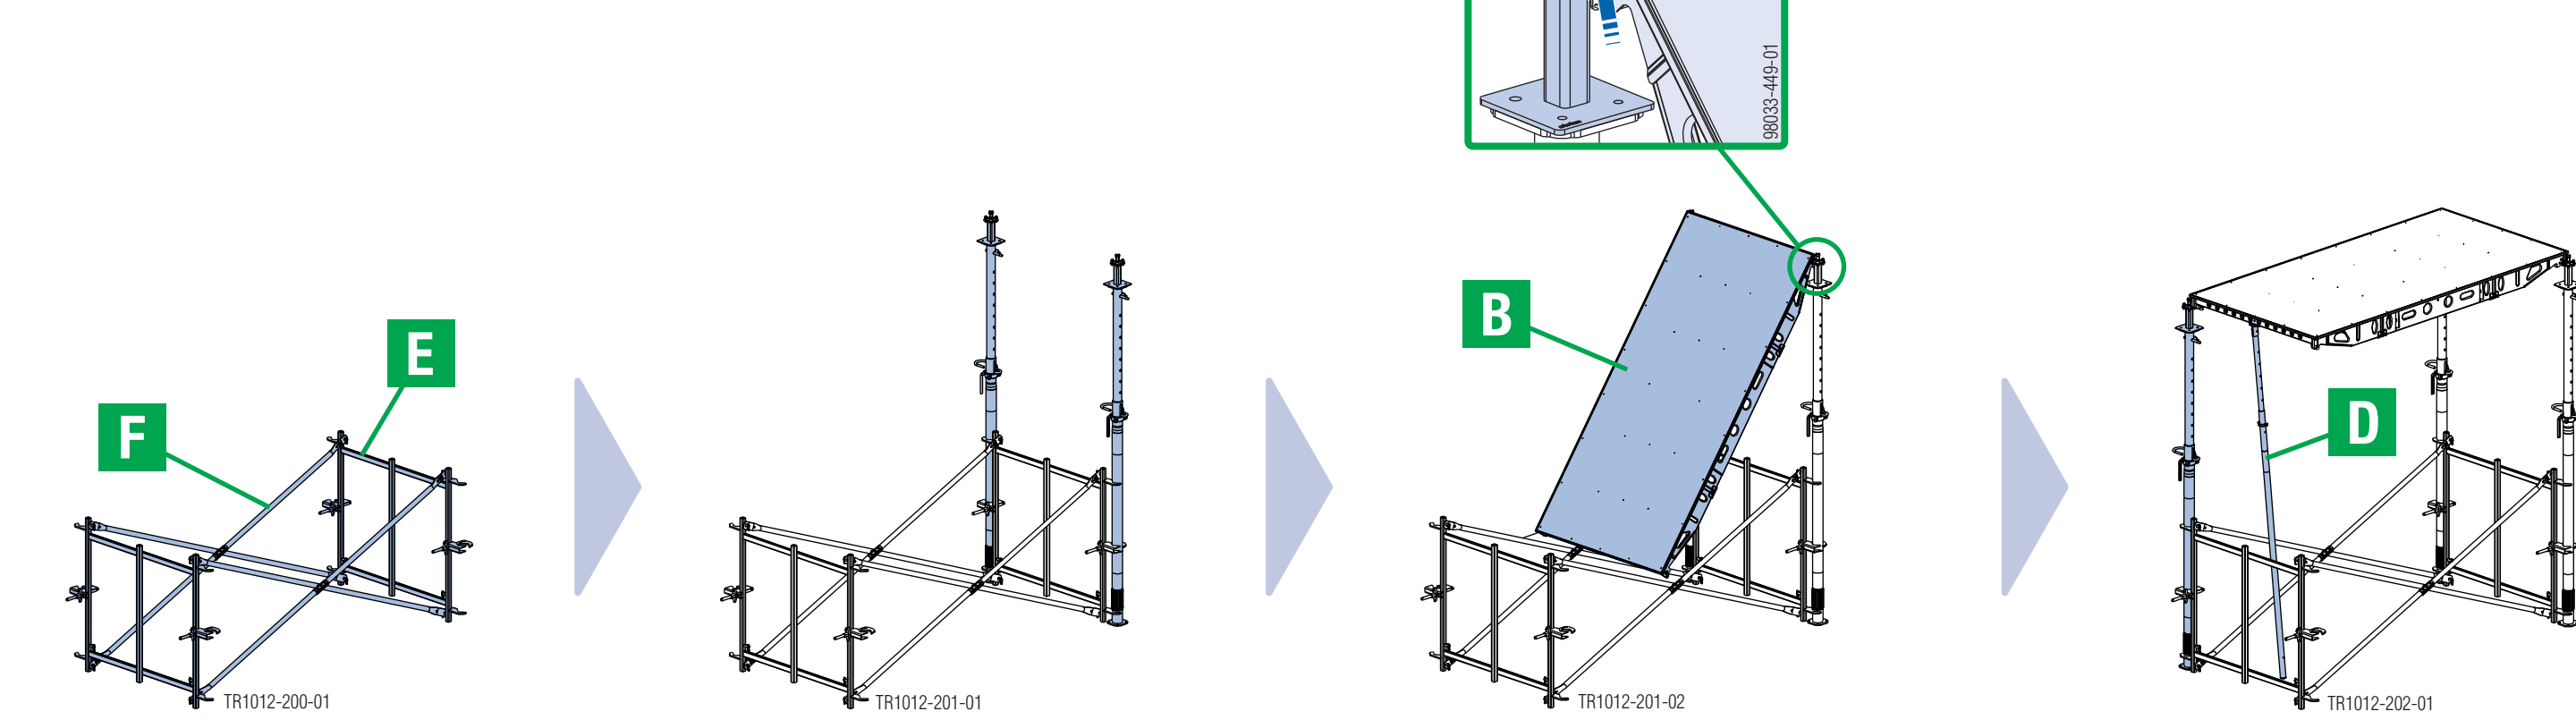

Alternative bracing method

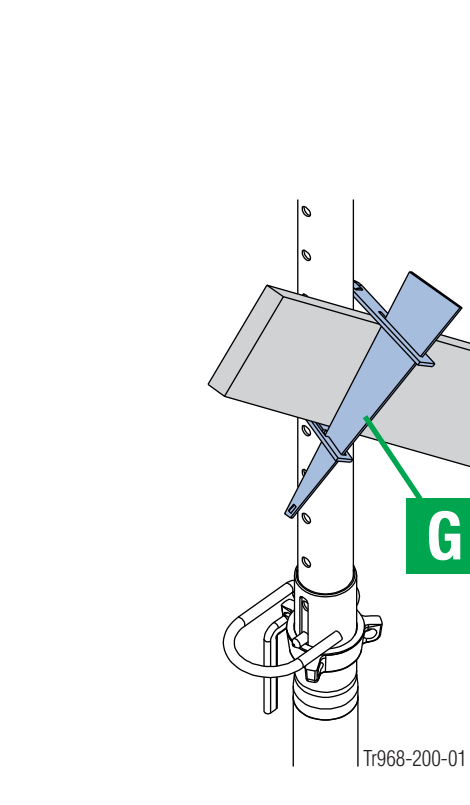

Use assembling tool!

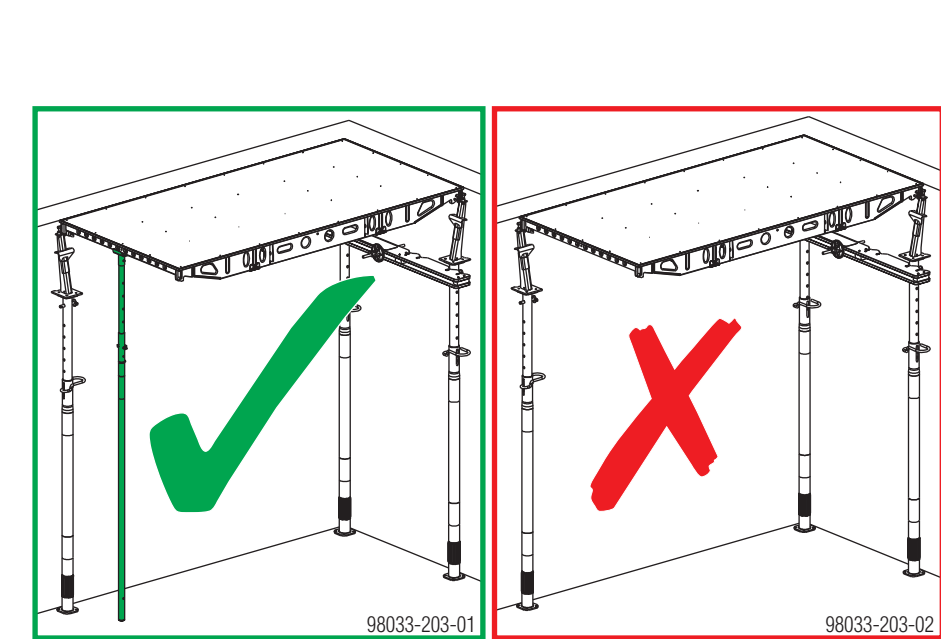

Stripping out

