

Framed formwork Framax Xlife plus

User Information

Instructions for assembly and use (Method statement)



98112-207-01

Contents

4 Introduction

- 4 Elementary safety warnings
- 8 Intended use

9 Wall formwork

- 10 Instructions for assembly and use for room-high formwork
- 14 Instructions for assembly and use for high formwork
- 18 Framax Xlife plus panel in detail
- 20 System grid
- 22 Inter-panel connections
- 25 Panel bracing with Framax universal waling
- 28 Vertical stacking of panels
- 54 Tie rod system Framax Xlife plus
- 67 Length adjustment using closures
- 69 90 degree corners
- 83 Acute & obtuse-angled corners
- 89 Shaft formwork
- 100 Inter-panel connections for increased tensile loads
- 101 Stop-end formwork
- 104 Wall junctions, offsets and steps
- 108 Wall thickness >45 and up to 60 cm
- 111 Window and door openings
- 112 Plumbing accessories
- 116 Pouring platforms
- 123 Pouring platforms with single brackets
- 139 Opposing guardrail
- 142 Wall formwork at the edge of the structure
- 150 Ladder system
- 154 Tools for plumbing and aligning and for stripping the formwork
- 156 Lifting by crane
- 159 Transporting, stacking and storing

167 General

- 167 Areas of use
- 168 Framax Xlife plus combined with . . .
- 170 Cleaning and care of your equipment
- 173 Fall protection on the structure

174 Article list

Introduction

Elementary safety warnings

User target groups

- This booklet is aimed at all persons who will be working with the Doka product or system that it describes. It contains information on the standard design for setting up this system, and on correct, compliant utilisation of the system.
- All persons working with the product described herein must be familiar with the contents of this booklet and with all the safety instructions it contains.
- Persons who are incapable of reading and understanding this booklet, or who can do so only with difficulty, must be instructed and trained by the customer.
- The customer is to ensure that the information materials provided by Doka (e.g. User Information booklets, Instructions for Assembly and Use, Operating Instruction manuals, plans etc.) are up to date and available to all users, and that they have been made aware of them and have easy access to them at the usage location.
- In the relevant technical documentation and formwork utilisation plans, Doka shows the workplace safety precautions that are necessary in order to use the Doka products safely in the usage situations shown.
In all cases, users are obliged to ensure compliance with national laws, standards and regulations throughout the entire project and to take appropriate additional or alternative workplace safety precautions where necessary.

Hazard assessment

- The customer is responsible for drawing up, documenting, implementing and continually updating a hazard assessment at every job-site.
This booklet serves as the basis for the site-specific hazard assessment, and for the instructions given to users on how to prepare and utilise the system. It does not substitute for these, however.

Remarks on this booklet

- This document can be used as general Instructions for Assembly and Use (Method Statement) or be incorporated into site-specific Instructions for Assembly and Use (Method Statement).
- **The graphics, animations and videos in this document or app sometimes depict partially assembled assemblies and may require additional safety equipment and/or measures to comply with safety regulations.**
The customer must ensure all applicable regulations are complied with, even if they are not shown or implied in the graphics, animations and videos provided.
- **Individual sections contain further safety instructions and/or special warnings as applicable.**

Planning

- Provide safe workplaces for those using the formwork (e.g. for when it is being erected/dismantled, modified or repositioned etc). It must be possible to get to and from these workplaces via safe access routes!
- **If you are considering any deviation from the details and instructions given in this booklet, or any application which goes beyond those described in the booklet, then revised static calculations must be produced for checking, as well as supplementary assembly instructions.**

Regulations; industrial safety

- All laws, Standards, industrial safety regulations and other safety rules applying to the utilisation of our products in the country and/or region in which you are operating must be observed at all times.
- If a person or object falls against, or into, the side-guard component and/or any of its accessories, the component affected may only continue in use after it has been inspected and passed by an expert.

Rules applying during all phases of the assignment

- The customer must ensure that this product is erected and dismantled, reset and generally used for its intended purpose in accordance with the applicable laws, standards and rules, under the direction and supervision of suitably skilled persons. These persons' mental and physical capacity must not in any way be impaired by alcohol, medicines or drugs.
- Doka products are technical working appliances which are intended for industrial / commercial use only, always in accordance with the respective Doka User Information booklets or other technical documentation authored by Doka.
- The stability and load-bearing capacity of all components and units must be ensured during all phases of the construction work!
- Do not step on or apply strain to cantilevers, closures, etc. until suitable measures to ensure their stability have been correctly implemented (e.g. by tie-backs).
- Strict attention to and compliance with the functional instructions, safety instructions and load specifications are required. Non-compliance can cause accidents and severe injury (risk of fatality) and considerable damage to property.
- Sources of fire in the vicinity of the formwork are prohibited. Heaters are permissible only when used correctly and situated at a correspondingly safe distance from the formwork.
- Customer must give due consideration to any and all effects of the weather on the equipment and regards both its use and storage (e.g. slippery surfaces, risk of slipping, effects of the wind, etc.) and implement appropriate precautionary measures to secure the equipment and surrounding areas and to protect workers.
- All connections must be checked at regular intervals to ensure that they are secure and in full working order.
In particular threaded connections and wedged connections have to be checked and retightened as necessary in accordance with activity on the jobsite and especially after out-of-the-ordinary occurrences (e.g. after a storm).
- It is strictly forbidden to weld Doka products – in particular anchoring/tying components, suspension components, connector components and castings etc. – or otherwise subject them to heating.
Welding causes serious change in the microstructure of the materials from which these components are made. This leads to a dramatic drop in the failure load, representing a very great risk to safety.
It is permissible to cut individual tie rods to length with metal cutting discs (introduction of heat at the end of the rod only), but it is important to ensure that flying sparks do not heat and thus damage other tie rods.
The only articles which are allowed to be welded are those for which the Doka literature expressly points out that welding is permitted.

Assembly

- The equipment/system must be inspected by the customer before use, to ensure that it is in an acceptable condition. Steps must be taken to exclude components that are damaged, deformed, or weakened due to wear, corrosion or rot (e.g. fungal decay).
- Using our safety and formwork systems together with those of other manufacturers can create risks that may lead to injury and damage to property. This requires separate verification by the user.
- The equipment/system must be assembled and erected in accordance with the applicable laws, standards and rules by trained customer personnel whilst maintaining any applicable safety inspections that may be required.
- It is not permitted to modify Doka products; such modifications constitute a safety risk.

Closing the formwork

- Doka products and systems must be set up so that all loads acting upon them are safely transferred!

Pouring

- Do not exceed the permitted fresh-concrete pressures. Over-high pouring rates overload the formwork, cause greater deflection and risk breakage.

Stripping the formwork

- Do not strip out the formwork until the concrete has reached sufficient strength and the person in charge has given the order for the formwork to be stripped out!
- When stripping out the formwork, never use the crane to break concrete cohesion. Use suitable tools such as timber wedges, special pry-bars or system features such as Framax stripping corners.
- When stripping out the formwork, do not endanger the stability of any part of the structure, or of any scaffolding, platforms or formwork that is still in place!

Transporting, stacking and storing

- Observe all country-specific regulations applying to the handling of formwork and scaffolding. For system formwork the Doka slinging means stated in this booklet must be used – this is a mandatory requirement.
If the type of sling is not specified in this document, the customer must use slinging means that are suitable for the application envisaged and that comply with the regulations.
- When lifting, always make sure that the unit to be lifted and its individual parts can absorb the forces that occur.
- Remove loose parts or secure them so that they cannot slip out of position and drop.
- When lifting formwork or formwork accessories with a crane, no persons must be carried along, e.g. on working platforms or in multi-trip packaging.
- All components must be stored safely, following all the special Doka instructions given in the relevant sections of this document!

Maintenance

- Only original Doka components may be used as spare parts. Repairs may only be carried out by the manufacturer or authorised facilities.

Miscellaneous

The weights as stated are averages for new material; actual weights can differ, depending on material tolerances. Dirt accretions, moisture saturation, etc. can also affect weight.

We reserve the right to make alterations in the interests of technical progress.

Eurocodes at Doka

The permissible values stated in Doka documents (e.g. $F_{perm} = 70 \text{ kN}$) are not design values (e.g. $F_{Rd} = 105 \text{ kN}$), unless specified!

- It is essential to avoid confusing permissible values with design values!
- Doka documents will continue to state the permissible values.

Allowance has been made for the following partial factors:

- $\gamma_F = 1.5$
- $\gamma_{M, \text{timber}} = 1.3$
- $\gamma_{M, \text{steel}} = 1.1$
- $k_{mod} = 0.9$

Consequently, all the design values for an EC design calculation can be determined from the permissible values.

Symbols used

The following symbols are used in this document:



DANGER

This is a notifier drawing attention to an extremely dangerous situation in which non-compliance with this notifier will lead to death or severe, irreversible injury.



WARNING

This is a notifier drawing attention to a dangerous situation in which non-compliance with this notifier can lead to death or severe, irreversible injury.



CAUTION

This is a notifier drawing attention to a dangerous situation in which non-compliance with this notifier can lead to slight, reversible injury.



NOTICE

This is a notifier drawing attention to a situation in which non-compliance with this notifier can lead to malfunctions or damage to property.



Instruction

Indicates that actions have to be performed by the user.



Sight-check

Indicates that you need to do a sight-check to make sure that necessary actions have been carried out.




Tip

Points out useful practical tips.



Reference

Cross-references other documents.

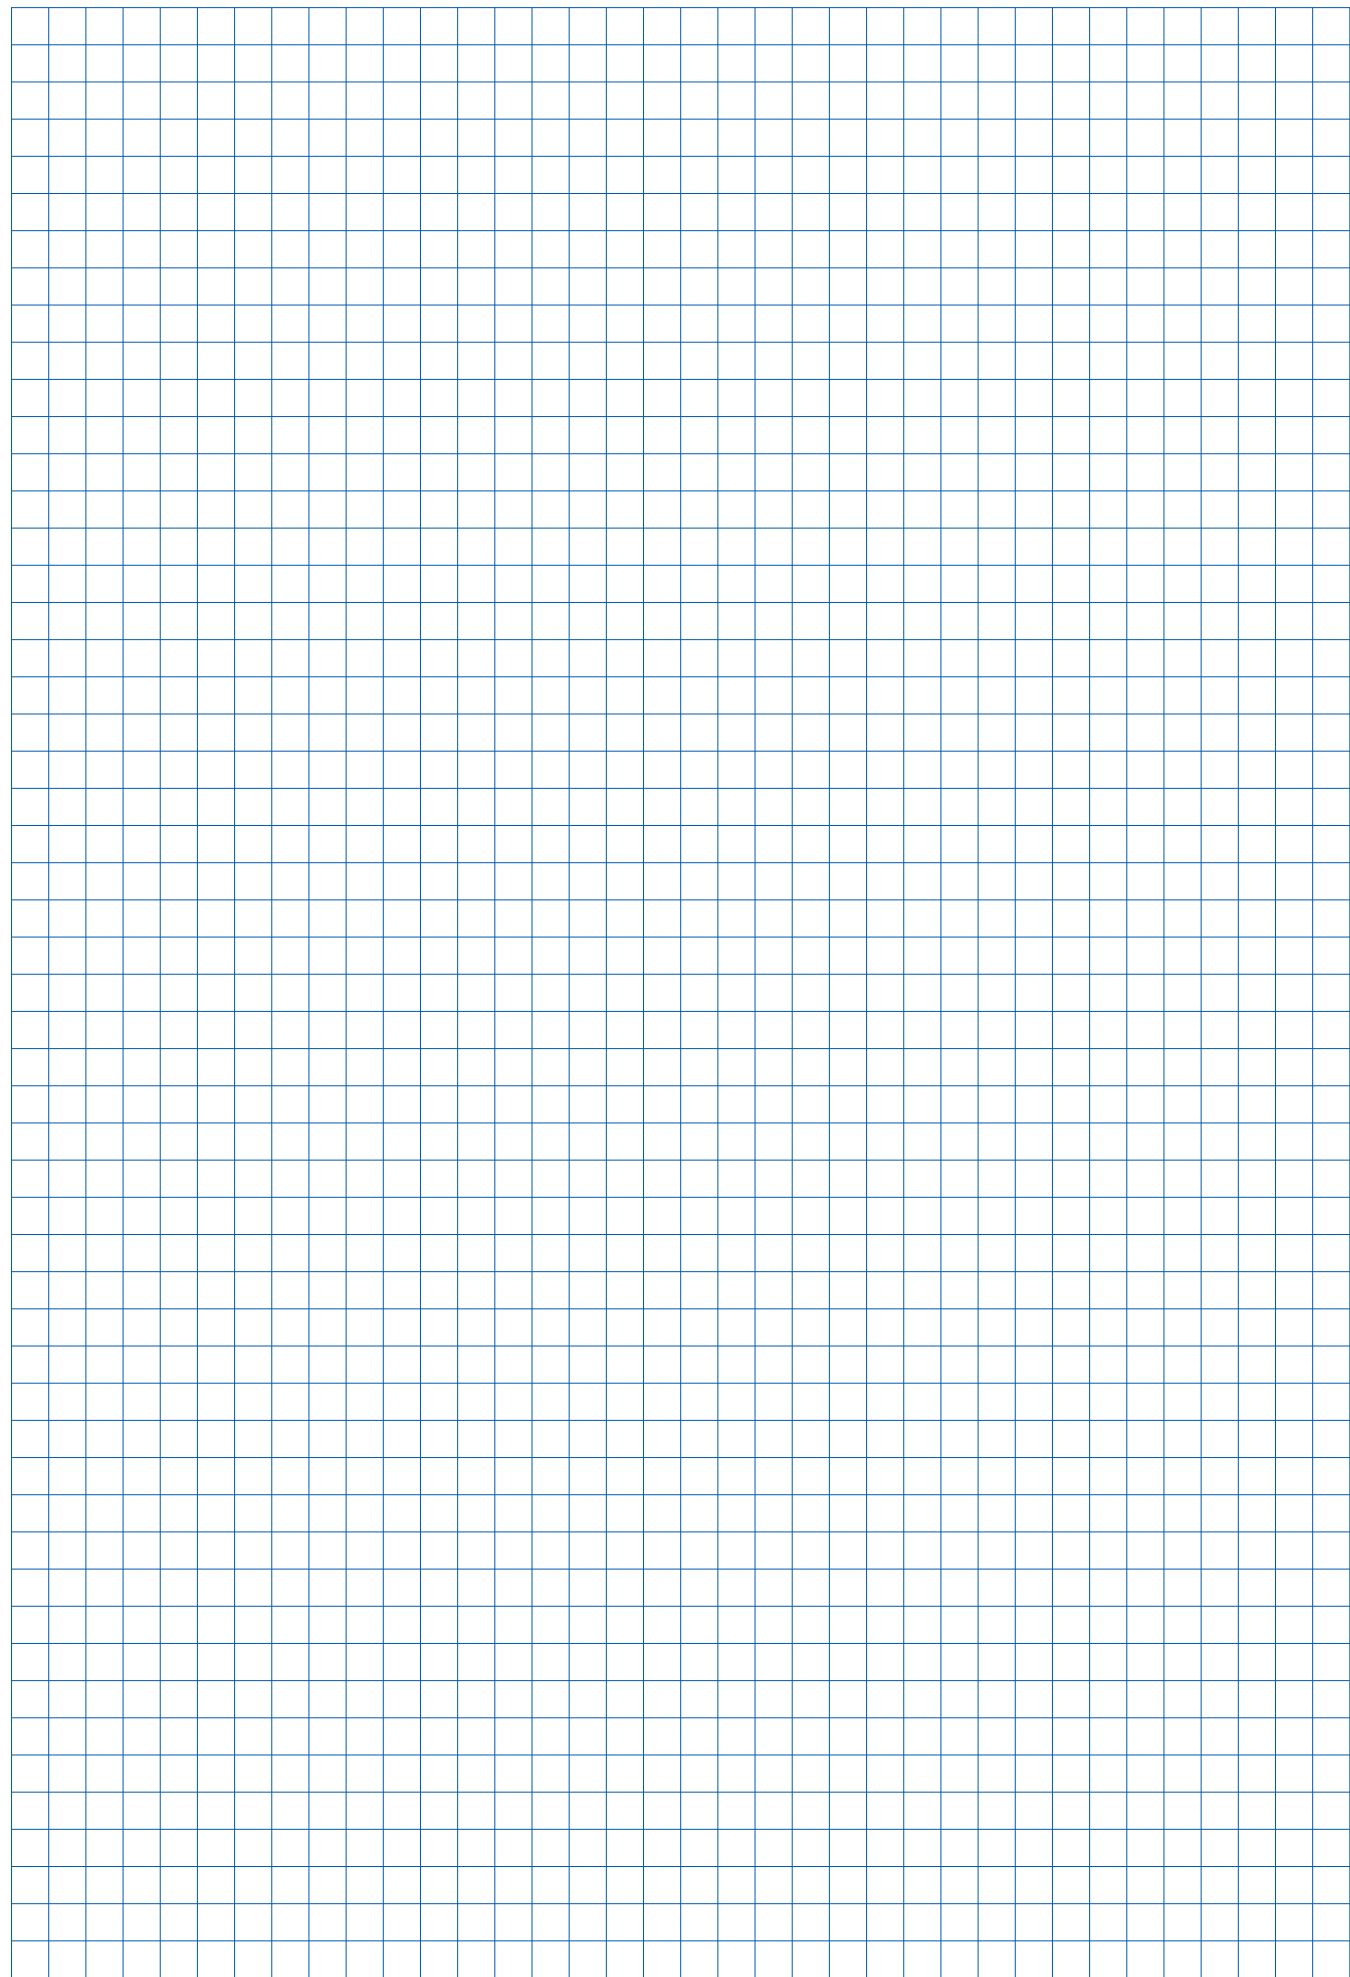

Intended use

The Framed formwork Framax Xlife plus is a formwork system for the cast-in-place concrete construction of walls, foundations and shafts.


The Framed formwork Framax Xlife plus is designed for setting up using a crane.

Boundary conditions for use:


- Max. formwork height: 8.10 m
- Max. wall thickness: 60 cm

In special cases, boundary conditions can vary. The relevant information in the Doka technical documents must be observed.

Other use or use not in conformity with that stated above is non-intended use and requires the prior written approval of the Doka company!

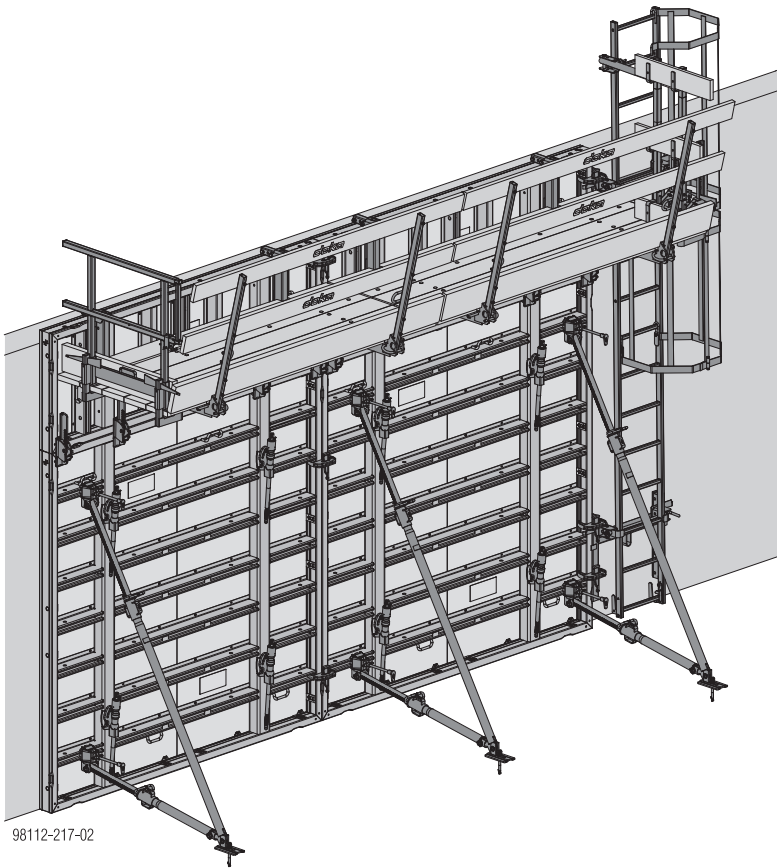

Wall formwork

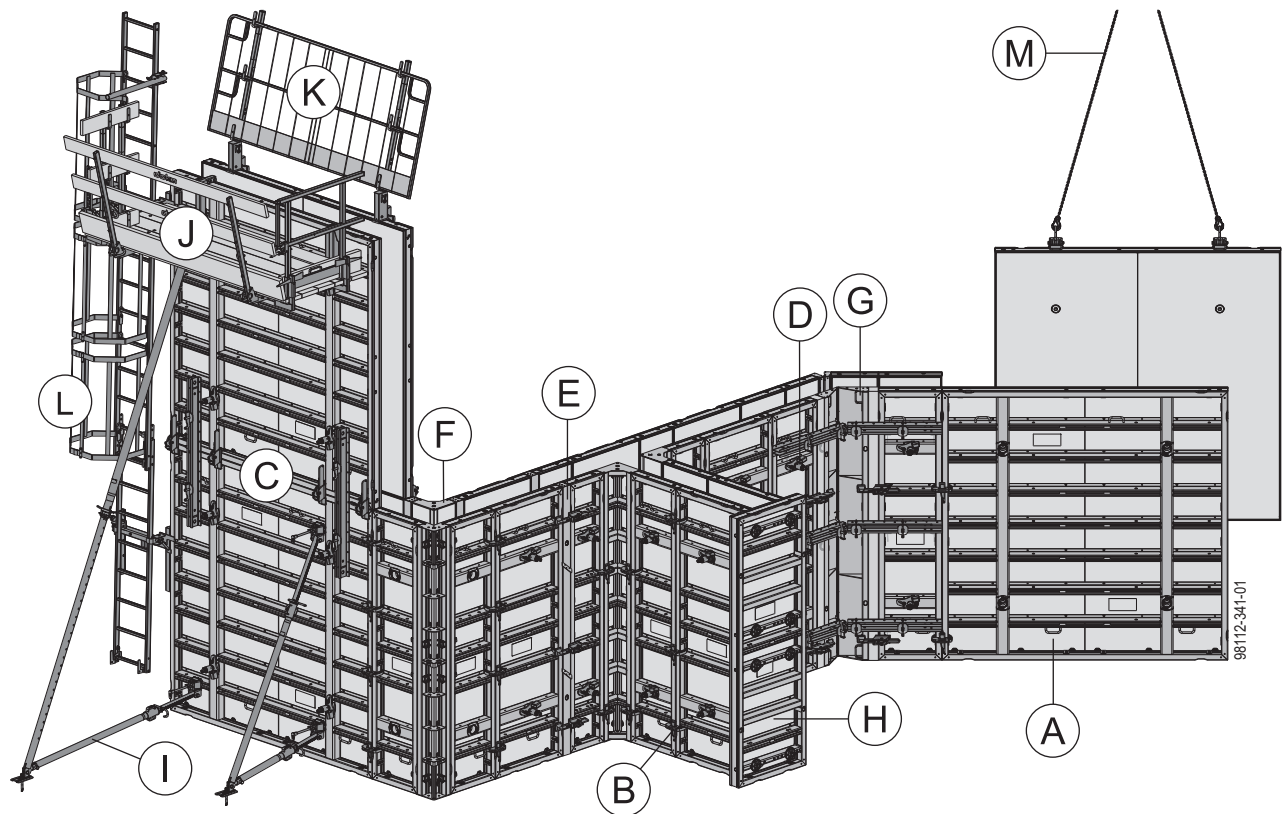

Section:

- A [Framax Xlife plus panel in detail](#)
- B [Inter-panel connections](#)
- C [Vertical stacking of panels](#)
- D [Tie rod system Framax Xlife plus](#)
- E [Length adjustment using closures](#)
- F [90 degree corners](#)
- G [Acute & obtuse-angled corners](#)
- H [Stop-end formwork](#)
- I [Plumbing accessories](#)
- J [Pouring platforms](#)
- K [Opposing guardrail](#)
- L [Ladder system](#)
- M [Lifting by crane](#)

Permitted fresh-concrete pressure:

See the sections headed [Framax Xlife plus panel in detail](#) and [Tie rod system Framax Xlife plus](#)

Instructions for assembly and use for room-high formwork

The sequence shown here is based on a straight wall. However, you should always start to form from the corner outwards.

Ladders must be located so as to create viable 'traffic routes' in the horizontal. (On a straight wall, for example, one ladder on the first element and another on the last).


If single brackets are used instead of pouring platforms, follow the instructions in the section headed [Pouring platforms with single brackets](#).

Transporting / handling the panels

- For offloading panels from a truck, or lifting them on-site (see the section headed [Transporting, stacking and storing](#)).
- To separate the panels, use Framax transport bolts and the Doka 4-part chain 3.20m (see the section headed [Transporting, stacking and storing](#)).

Pre-assembly

- Pre-assemble gang-forms face-down on a prepared flat area (see the section headed [Inter-panel connections](#)).
- With the gang-form still flat, mount panel struts to it (see the section headed [Plumbing accessories](#)).
- Install distance protectors with form tie in 'parked' position (see the section headed [Tying the panels](#)).
- Install Ladder system XS (including ladder cage, if necessary) (see the section headed [Ladder system](#)).

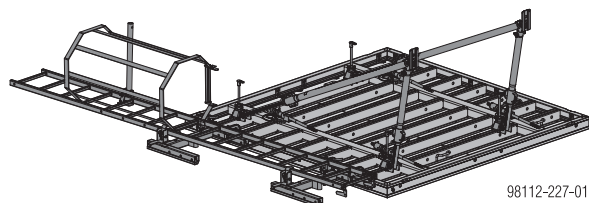

98112-227-01


Closing the formwork



NOTICE

- For working at heights that cannot be reached from the floor, use a suitable elevated platform (e.g. Platform stairway 0.97m, Wheel-around scaffold DF or mobile scaffold tower)!
- Always comply with the country-specific safety regulations!
- Do not step on to the pouring platform until an all-round guardrail system (including counter railing) is in place! Otherwise wear a personal fall-arrest system (e.g. safety harness)!

- Attach the gang-form to the crane with Framax lifting hooks (see the section [Lifting by crane](#)).

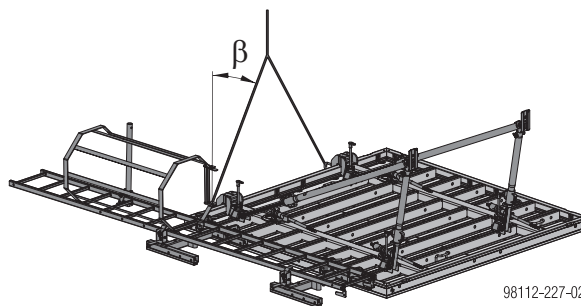

98112-227-02

- Raise the gang-form by crane.
- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Fly the gang-form to its new location.




NOTICE

Never use a sledge hammer to plumb and align the panels!

This would damage the profiles of the gangs.

- Use only proper plumbing tools (e.g. a special pry-bar) that cannot cause any damage (see the section [Tools for plumbing and aligning and for stripping the formwork](#)).
- Fix the panel struts firmly to the ground (see the section [Plumbing accessories](#)).

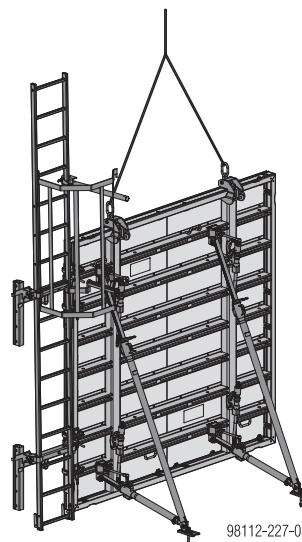


98112-227-03



The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.

- Use the Framax assembling tool to disengage the gang-form from the crane (see the section [Lifting by crane](#)).

- ▶ Engage the pouring platform with pre-installed end-of-platform sideguard (see the section [Pouring platform forms](#)).

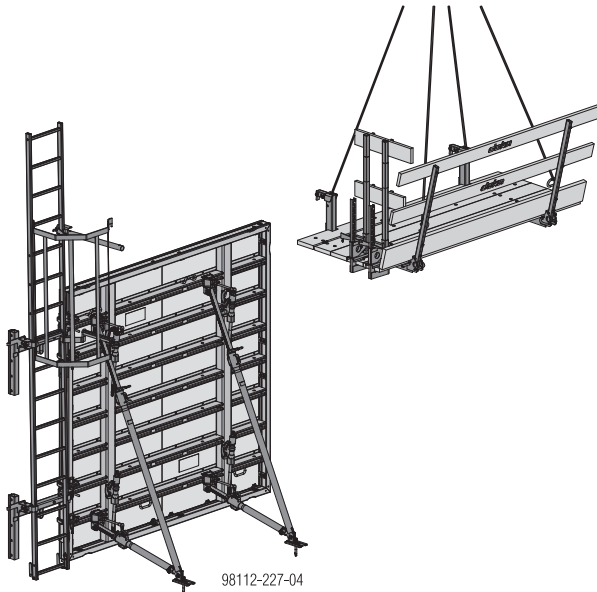


- ▶ Detach the pouring platform from the crane. The crew can reach the lifting points by standing on an elevated platform (for access, flip up the formwork-side deck-board).
- ▶ Continue lining up further gang-forms in this way, and link them together (see the section [Inter-panel connections](#)).

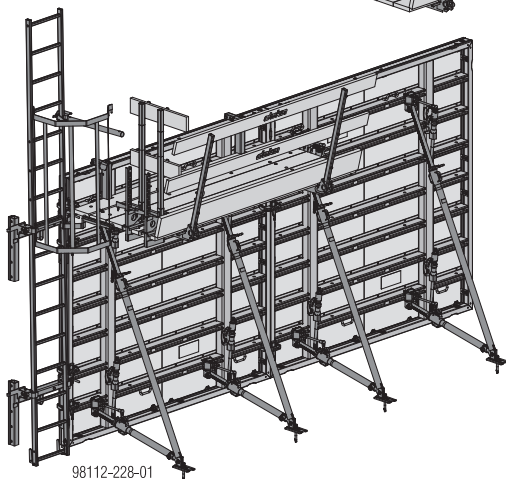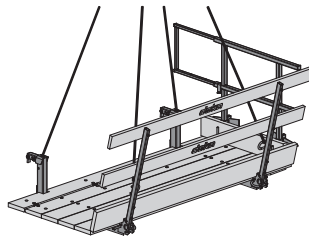

Erecting the opposing formwork:

Once the reinforcement has been placed, the formwork can be closed.

- ▶ With the gang-form of the opposing formwork laid flat, install form-tie nuts and counter railings (see the sections headed [Tying the panels](#) and [Opposing guardrail](#)).
- ▶ Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- ▶ Lift the opposing formwork by crane to its next location (see the section headed [Lifting by crane](#)).

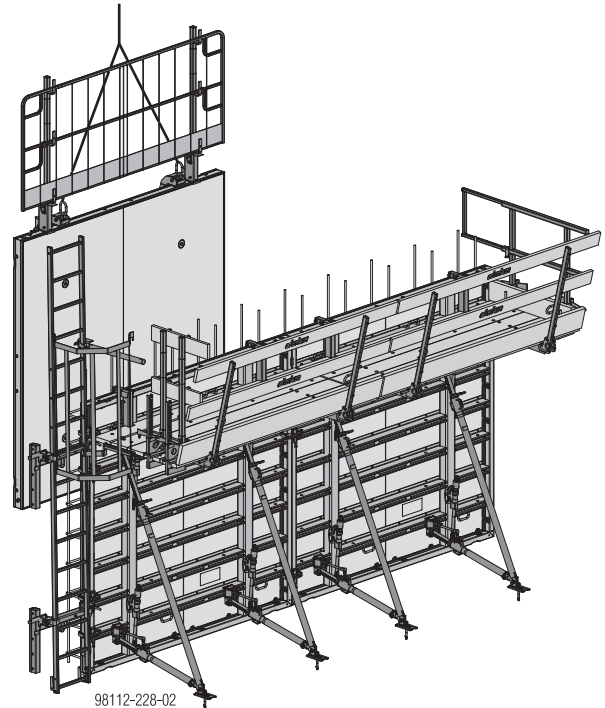

- ▶ Fit the form ties (see the section headed [Tie rod system Framax Xlife plus](#)).



WARNING

No panel struts on the opposing formwork!
Risk of the formwork tipping over!

- ▶ Do not disconnect the gang-form from the crane until a large enough number of form ties have been installed to keep it safely in the upright.

- ▶ Use the Framax assembling tool to disengage the crane tackle with Framax lifting hooks from the gang-form (see the section headed [Lifting by crane](#)).
- ▶ Continue lining up further gang-forms in this way, and link them together (see the section headed [Inter-panel connections](#)).

Pouring

Permitted fresh-concrete pressure:

See the sections headed [Framax Xlife plus panel in detail](#) and [Tie rod system Framax Xlife plus](#).

Observe the following **guidelines**:


- The section headed 'Pressure of fresh concrete on vertical formwork, DIN 18218' in the Calculation Guide 'Doka formwork engineering'
- DIN 4235 Part 2 - 'Compacting of concrete by vibrating'



NOTICE

- Do not exceed the maximum permissible rate of placing.

- Pour the concrete.
- Make only moderate use of vibrators, carefully coordinating the times and locations of vibrator use.

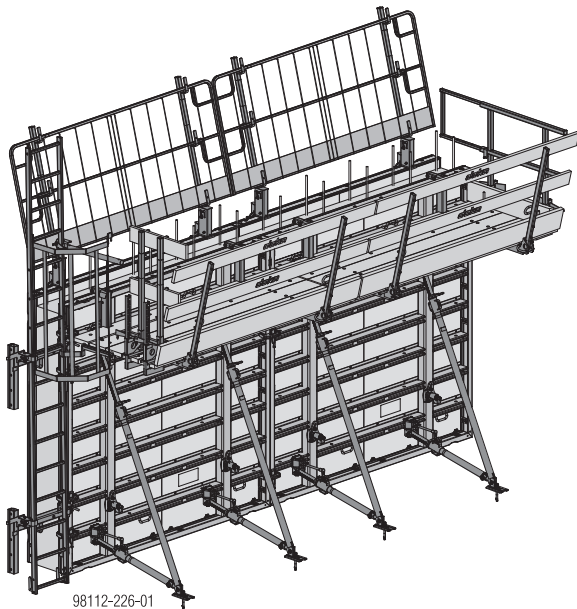


98112-226-01

Stripping the formwork



NOTICE

- Comply with the stipulated stripping times.
- Remove any loose items from the formwork and platforms, or secure them firmly.
- Use the Framax assembling tool to position the crane tackle with Framax lifting hooks at the gang-form (see the section headed [Lifting by crane](#)).
- Take out the form ties (see the section headed [Tie rod system Framax Xlife plus](#)) and undo the connectors to the adjacent panels.

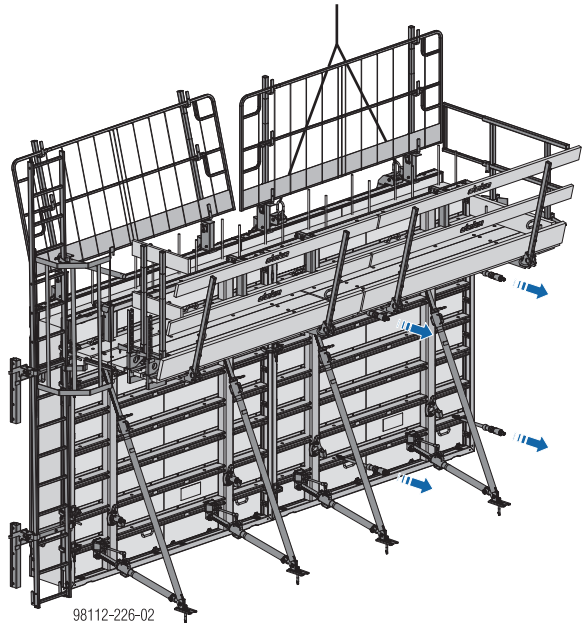

98112-226-02



In order to speed up operations when lifting and repositioning by crane, most of the form ties can be taken out in advance.

Important!

There must be at least as many form ties left in place as are needed to keep the panels safely in the upright.




WARNING

The formwork tends to adhere to the concrete. When stripping the formwork, do not try to break concrete cohesion using the crane!

Risk of crane overload.

- Use suitable tools to detach the formwork from the concrete (see the section headed [Tools for plumbing and aligning and for stripping the formwork](#)).
- Lift the gang-form away and to its next location. If the gang-form is 'parked' prior to its next use, it must have sufficient stability (see the section headed [Plumbing accessories](#)). Gang-forms with only one panel strut must not be 'parked' upright, but placed face-down.
- Clean residual concrete off the formwork sheet (see the section headed [Cleaning and care of your equipment](#)).

- Where the gang-form has panel struts and a pouring platform attached to it, first attach this gang-form to the crane, and only then detach the floor anchorages of the panel struts.

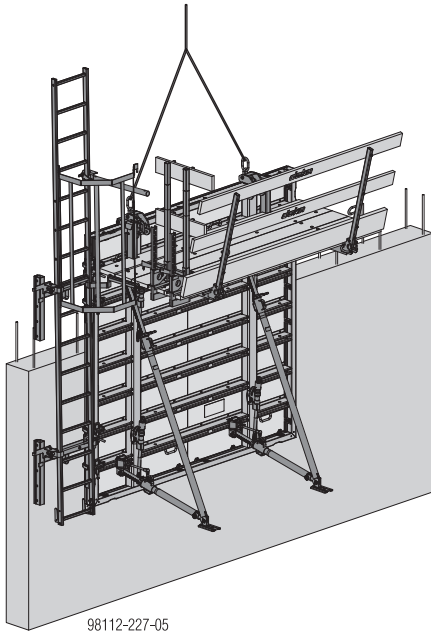

Instructions for assembly and use for high formwork

The sequence shown here is based on a straight wall. However, you should always start to form from the corner outwards.

Ladders must be located so as to create viable 'traffic routes' in the horizontal. (On a straight wall, for example, one ladder on the first element and another on the last).



Follow the directions in the 'Xsafe platform system plus' User Information booklet.



If single brackets are used instead of pouring platforms, follow the instructions in the section headed [Pouring platforms with single brackets](#).

Transporting / handling the panels


- For offloading panels from a truck, or lifting them on-site (see the section headed [Transporting, stacking and storing](#)).
- To separate the panels, use Framax transport bolts and the Doka 4-part chain 3.20m (see the section headed [Transporting, stacking and storing](#)).

Pre-assembly

- Pre-assemble gang-forms face-down on a prepared flat area (see the section headed [Inter-panel connections](#)).
- Attach the Tie-off set PPE type A for the personal fall-arrest system to the frame profile or function profile.

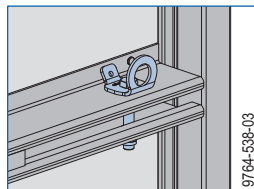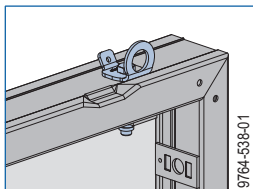

- Install distance protectors with form tie in 'parked' position (see the section headed [Tying the panels](#)).
 - Install platforms, ladders (incl. ladder cages, as necessary) and panel struts on the gang-form while it is laid flat (see the sections headed [Pouring platforms](#) and [Plumbing accessories](#)).
- The Xsafe plus counter railing must be in the pushed-in position.

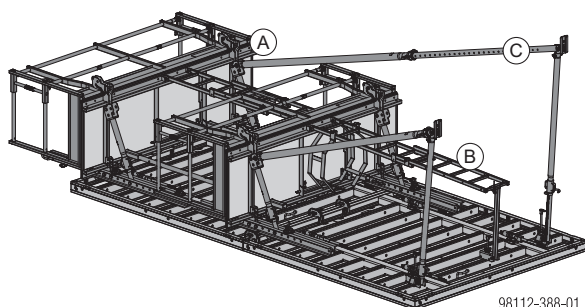

B Access system

C Panel strut

Closing the formwork



NOTICE

- For working at heights that cannot be reached from the floor, use a suitable elevated platform (e.g. Platform stairway 0.97m, Wheel-around scaffold DF, mobile scaffold tower or scissor-type elevated work platform)!
- Always comply with the country-specific safety regulations!
- Do not step on to the pouring platform until an all-round guardrail system (including counter railing) is in place! Otherwise wear a personal fall-arrest system (e.g. safety harness)!

- Install Xsafe plus lifting walers on the gang-form.
- Attach the crane to the Xsafe plus lifting walers (see the section headed [Lifting by crane](#)).
- Raise the gang-form by crane.
- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Lift the gang-form to its new location.



NOTICE

Never use a sledge hammer to plumb and align the panels!

This would damage the profiles of the gangs.

- Use only proper plumbing tools (e.g. a special pry-bar) that cannot cause any damage (see the section headed [Tools for plumbing and aligning and for stripping the formwork](#)).
 - Fix the panel struts firmly to the ground (see the section headed [Plumbing accessories](#)).
- The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.


A Platform

**WARNING**


No all-round guardrail system present on the pouring platform!

Danger to life from fatal falls!

- Use a personal fall-arrest system (e.g. safety harness)
The Tie-off set PPE type A (**A**) connected to the framed formwork panel serves as attachment point.

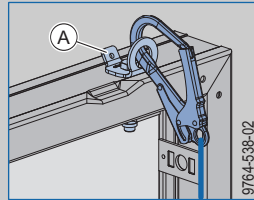

- Extend the Xsafe plus counter railing.

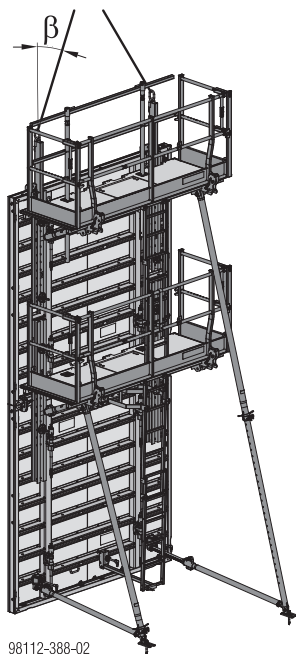


- Detach the gang-form from the crane.
- Continue lining up further gang-forms in this way, and link them together (see the section headed [Inter-panel connections](#)).

Erecting the opposing formwork:

Once the reinforcement has been placed, the formwork can be closed.

- With the gang-form of the opposing formwork laid flat, install form-tie nuts, counter railings and intermediate platforms (see the sections headed [Tying the panels](#), [Opposing guardrail](#) and [Pouring platforms](#)).
- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Lift the opposing formwork by crane to its next location (see the section headed [Lifting by crane](#)).

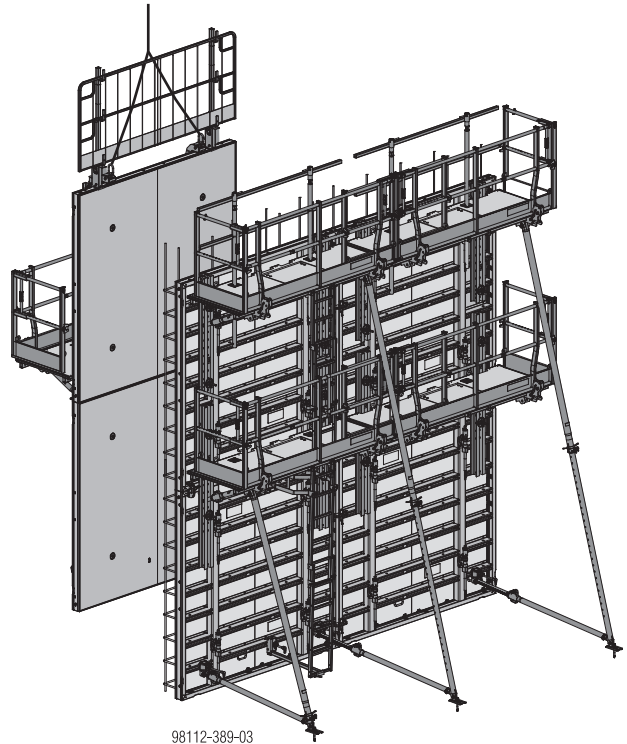

- Working from the ground, insert the bottom two rows of form ties (see the section headed [Tie rod system Framax Xlife plus](#)).



Before disconnecting from the crane:

- If there are no panel struts on the opposing formwork, do not disconnect the panel from the crane until a large enough number of form ties have been installed to keep it safely in the upright.

- Detach the gang-form from the crane.
- Insert the remaining form ties (see the section headed [Tie rod system Framax Xlife plus](#)). These form-tie points can be reached from the platforms.
- Continue lining up further gang-forms in this way, and link them together (see the section headed [Inter-panel connections](#)).

Pouring

Permitted fresh-concrete pressure:

See the sections headed [Framax Xlife plus panel in detail](#) and [Tie rod system Framax Xlife plus](#).


Observe the following **guidelines**:

- The section headed 'Pressure of fresh concrete on vertical formwork, DIN 18218' in the Calculation Guide 'Doka formwork engineering'
 - DIN 4235 Part 2 - 'Compacting of concrete by vibrating'
- Lower the Xsafe plus counter railing.



NOTICE

- Do not exceed the maximum permissible rate of placing.
- Pour the concrete.
- Make only moderate use of vibrators, carefully coordinating the times and locations of vibrator use.

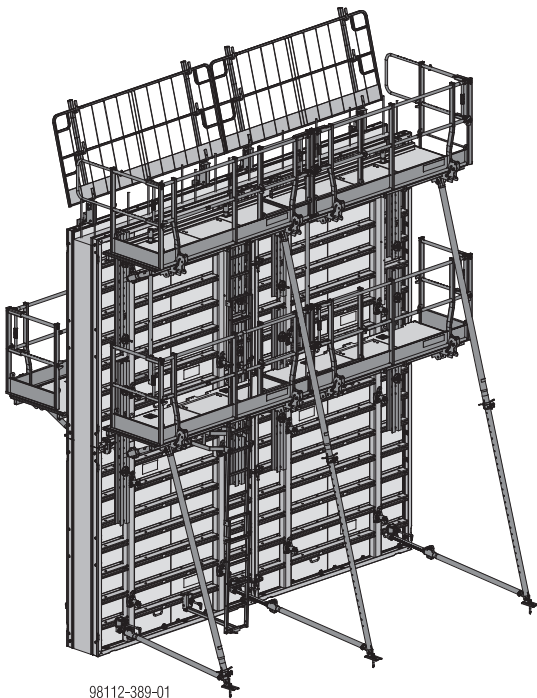

98112-389-01

Stripping the formwork




NOTICE

- Comply with the stipulated stripping times.
 - Remove any loose items from the formwork and platforms, or secure them firmly.
- Begin work on stripping the formwork on the opposing formwork:**



WARNING

- There must be at least as many form ties left in place as are needed to keep the panel safely in the upright.
- Take out the form ties from the two top rows of ties (see the section headed [Tie rod system Framax Xlife plus](#)). These form-tie points can be reached from the platforms.
- Attach the gang-form of the opposing formwork to the crane.
- Working from the floor, remove the bottom two rows of form ties (see the section headed [Tie rod system Framax Xlife plus](#)) and undo the connectors to the adjacent panels.

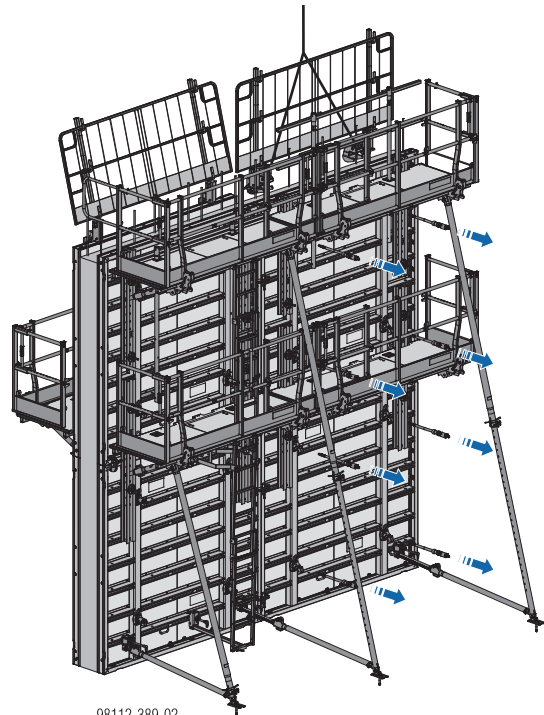

98112-389-02




WARNING

The formwork tends to adhere to the concrete. When stripping the formwork, do not try to break concrete cohesion using the crane! Risk of crane overload.


- Use suitable tools to detach the formwork from the concrete (see the section headed [Tools for plumbing and aligning and for stripping the formwork](#)).
- Lift the gang-form away and to its next location, or place it flat on its back for intermediate storage.
- Clean residual concrete off the formwork sheet (see the section headed [Cleaning and care of your equipment](#)).

- ▶ Where the gang-form has panel struts attached to it, first attach this gang-form to the crane, and only then detach the floor anchorages of the panel struts.

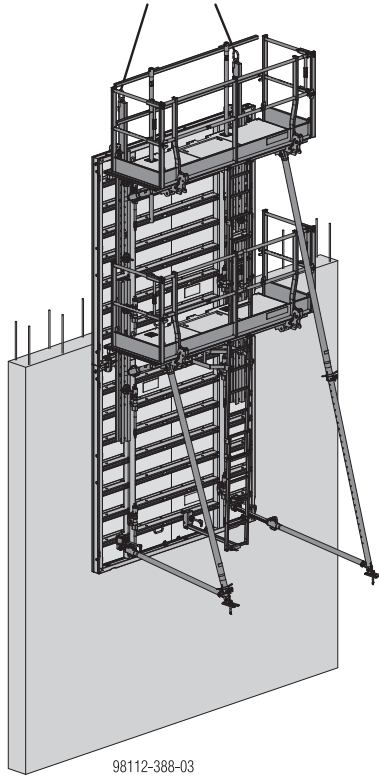

Framax Xlife plus panel in detail

High load-bearing capacity

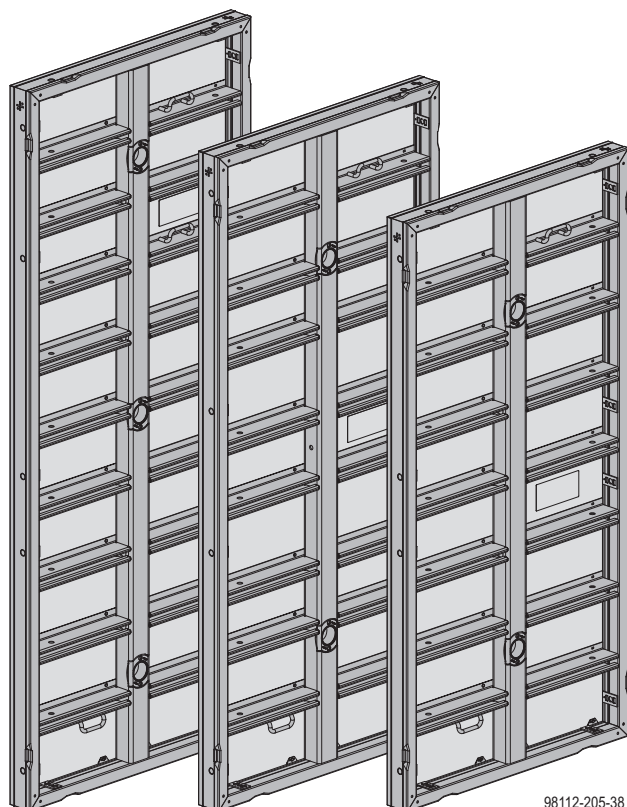

80 kN/m² pressure of fresh concrete acting on whole area, to DIN 18218, where the surface planeness tolerances to DIN 18202 Table 3 Line 6 are observed.

Exception: 75kN/m² in the case of 3.00m high panels!


Clean concrete surfaces with the innovative Xlife sheet

The Xlife sheet consists of a combination of a traditional plywood core and a novel and innovative plastic coating.

This combination of materials ensures high numbers of repeat use, it is less prone to damage and gives a superb concrete finish every time.

- High quality concrete finish
- Less touching-up needed
- Less cleaning - the Xlife sheet can be cleaned using a high-pressure spray cleaner
- The sheeting is screwed on from the back, preventing rivet impressions in the concrete and making cleaning easier

Dimensionally stable, galvanised and powder-coated steel frame

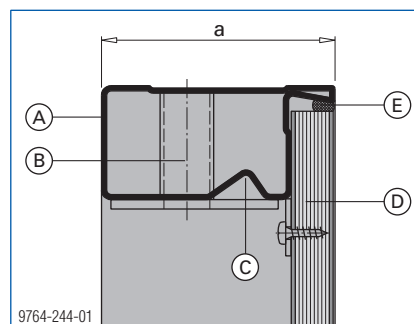

a ... 123 mm

- A** Frame profile
- B** Cross borehole
- C** Continuous hardware slot for inter-panel connectors
- D** Xlife sheet
- E** Silicone sealing strip


- Dimensionally stable frame profiles
- Powder-coated, so easy to clean
- Edges are easy to clean - panels always butt tightly
- All-round hardware slot for fastening the inter-panel connectors at any point
- Hot-dip galvanised for long life
- Formwork sheet is edge-protected by the frame profile
- Cross boreholes for corner configurations and stop-ends



WARNING


► It is forbidden to climb on the function profiles. The function profiles are NOT a substitute for a ladder.

Accessories are easy to fasten in the function profile

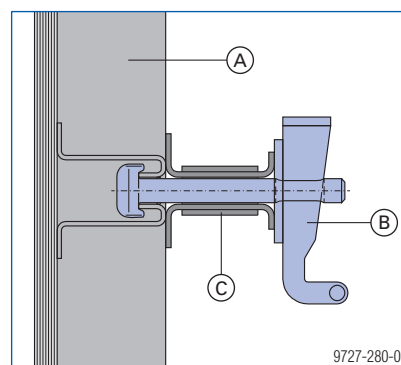

- A** Framax Xlife plus panel
- B** Framax wedge clamp
- C** Framax universal waling

Form-tie sleeves

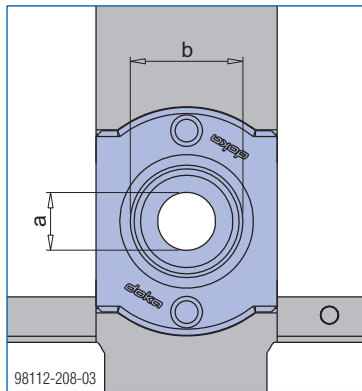


a ... diam. 32 mm

b ... diam. 80 mm

- Large, centrally arranged anchoring sleeves with steel sealing edge
- Only 2 form ties per 2.70 m and 3.00 m of panel height

Handles

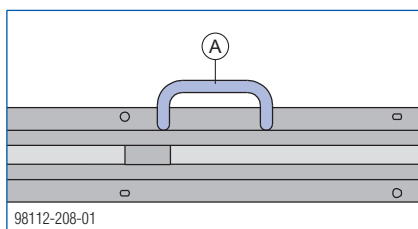

A Integral handle




WARNING

Do not use these integrated handles as slinging points for crane-handling!

Danger of formwork dropping from crane!

- Use only suitable lifting accessories and slinging points. See the sections headed [Lifting by crane](#) and [Transporting, stacking and storing](#).

Lifting edge

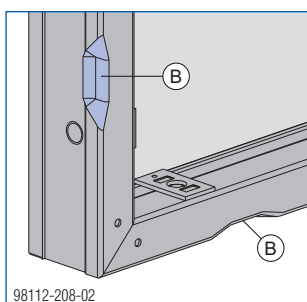


B Lifting edge

- Practical lifting edge, as an insertion point for the plumbing tool

Panel versions

Manufactured from 2022 onwards

- all cross profiles are designed as function profiles
- holes for DokaXact
- powder-coated grey

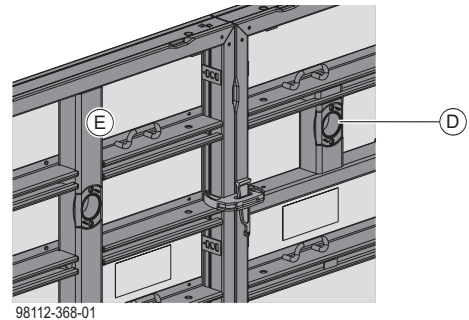


D Framax Xlife plus panel 0.90x3.30m (art. n° 589292600)

E Framax Xlife plus panel 1.35x3.30m (art. n° 589291600)

Manufactured between 2019 and 2021: Height 3.30 m, Manufactured between 2015 and 2021: Height 2.70 and 1.35 m (code letter C)

- changed position of the function profiles (compatible with the version manufactured from 2022 onwards)
- with transparent powder coating (except extra-large panels)

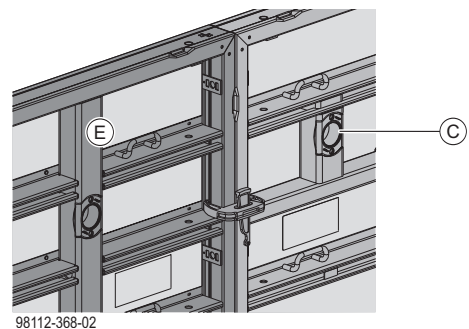


C Framax Xlife plus panel C 0.90x3.30m (art. n° 589292500)

E Framax Xlife plus panel 1.35x3.30m (art. n° 589291600)

Manufactured between 2015 and 2018 (code letter B)

- a further development of the first generation (code letter A)
- position of the top and bottom function profiles not compatible with versions manufactured from 2019 onwards
- with transparent powder coating (except extra-large panels)

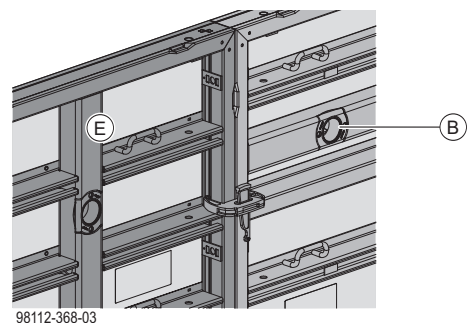

B Framax Xlife plus panel B 0.90x3.30m (art. n° 589292000)

E Framax Xlife plus panel 1.35x3.30m (art. n° 589291600)

Figure 1 illustrates the proposed 3D feature pyramid network. The diagram shows a 3D grid of feature maps. The top part shows a 3D feature map with dimensions 330, 300, 270, 135, and 60. The bottom part shows a 3D feature map with dimensions 30, 45, 50, 55, 75, and 90. A large curved arrow indicates the flow of information from the top part to the bottom part.


20

Framax Xlife plus panels

The heights and widths of the Framax Xlife plus panels together result in a logical, advantageous increment-grid that makes this formwork highly flexible and economical.

- Easy planning and forming
- 15 cm grid
- Very few closures needed
- Clear joint pattern
- Symmetrically arranged, centred form ties

Panel widths

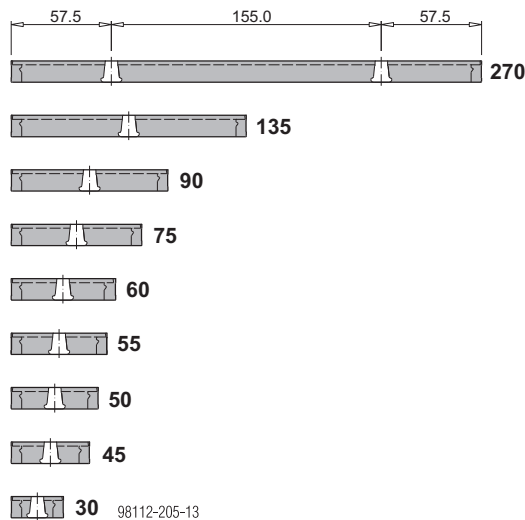


Dimensions in cm

Note:

Additional panel widths are available on request.

Panel heights

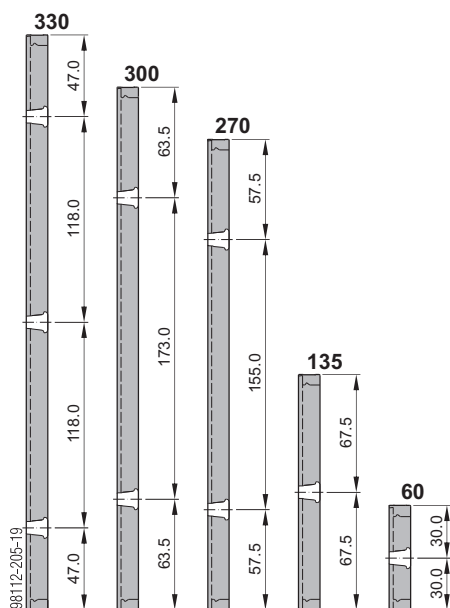


Dimensions in cm

Universal panels

The special hole pattern makes these panels particularly suitable for efficient forming of:


- corners
- wall junctions
- stop-ends
- columns

Framax Xlife universal panels

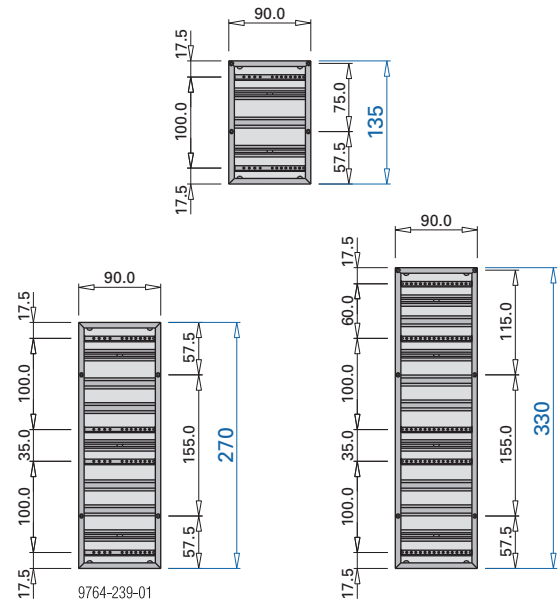


Dimensions in cm

Framax Xlife plus universal panel 0.90x3.00m

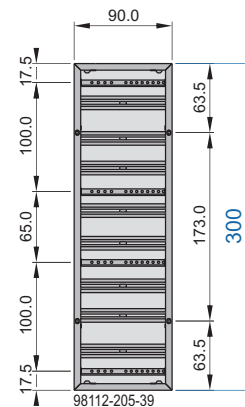

Dimensions in cm

Inter-panel connections

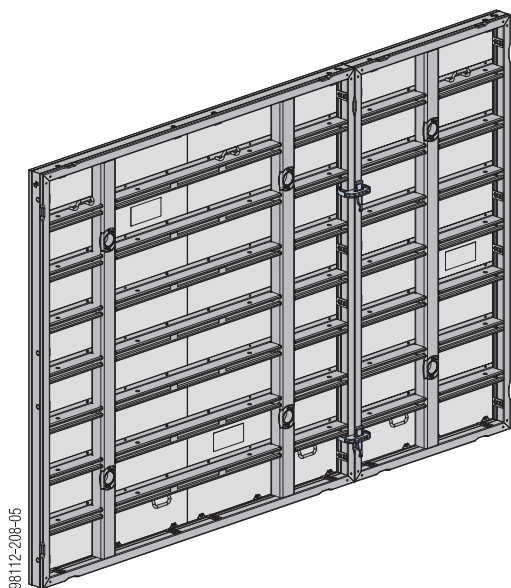

Attributes of the panel connectors:


- provide self-aligning, crane-handleable connections between the panels
- have no loose parts which might get lost
- dirt-resistant and hard-wearing for site use
- easy to fix, with a formwork hammer



NOTICE

- Use a formwork hammer weighing max. 800 g.
- Do not oil or grease wedged connections.

Inter-panel connections are easy with Framax quick acting clamps RU

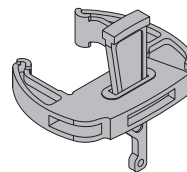



Framax quick acting clamp RU:

permitted tensile force: 15.0 kN

permitted shear force: 6.0 kN

permitted moment: 0.5 kNm

The continuous hardware slot running around the inside of the frame profile means that panels can be fastened together at any point desired. This allows adjacent panels to be staggered in height, steplessly.

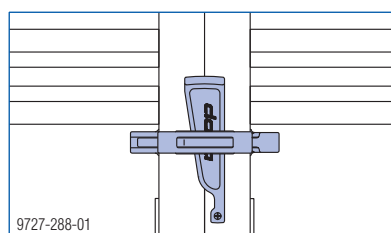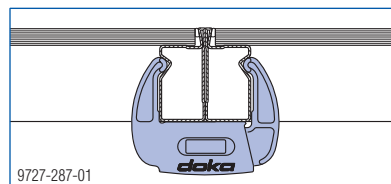

Number of inter-panel connections

Vertical inter-panel joint:

| Panel height (panel upright) | Number of clamps |
|---------------------------------|------------------|
| 0.60m | 1 |
| 1.35m | 2 |
| 2.70m | 2 |
| 3.00m | 3 |
| 3.30m | 3 |

| Panel width (panel on its side) | Number of clamps |
|------------------------------------|------------------|
| 0.30 - 0.55m | 1 |
| 0.60 - 1.35m | 2 |


Horizontal inter-panel joint:

See the section headed [Vertical stacking of panels](#) for details on the positions of the Framax quick acting clamps RU, Framax multi function clamps and Framax aligning clamps needed for **vertical stacking**.

Note:

For details regarding extra inter-panel connections on outside corners and stop-ends (for increased tensile loads) see the section headed [Inter-panel connections for increased tensile loads](#).

Filler inter-panel connection with Framax multi function clamp

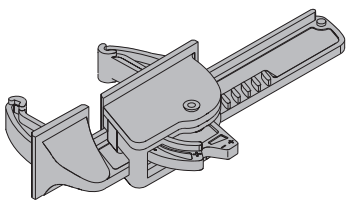

Framax multi function clamp:


Permitted tensile force: 15.0 kN

Permitted shear force: 9.0 kN


Permitted moment: 0.9 kNm

Values apply only when mounted on profile.

Particularly when panels are stacked in the vertical, the fact that the clamp bears directly on the profiles means that there is often no need for any extra bracing of the panels with universal walings.

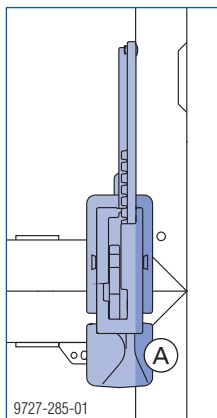


9727-285-01

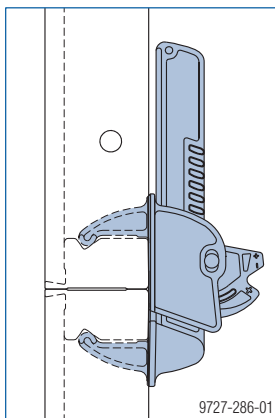

9727-286-01


A Contact surface on the profile

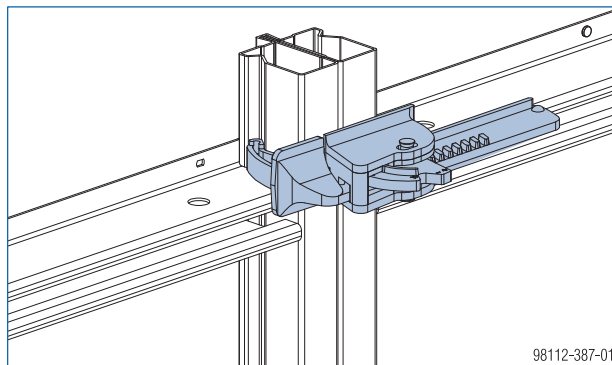

98112-387-01

Joining the panels using the Framax multi function clamp provides additional bracing of the gang-form (as the clamp bears directly onto the profile).

Filler connection up to 15 cm

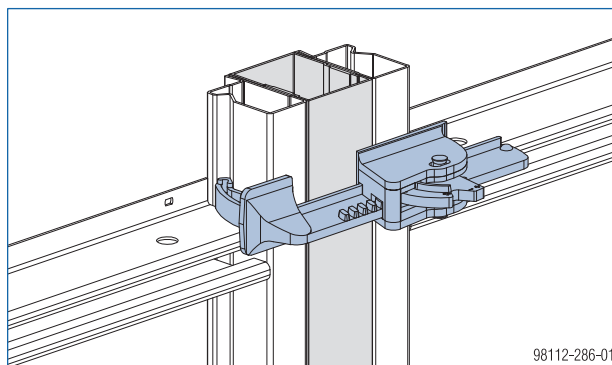


98112-286-01

With its 15 cm clamping range, the Framax multi function clamp exactly matches the panel size-grid.


For more information, see the section headed [Length adjustment using closures](#).

Squared timber connection up to 20 cm

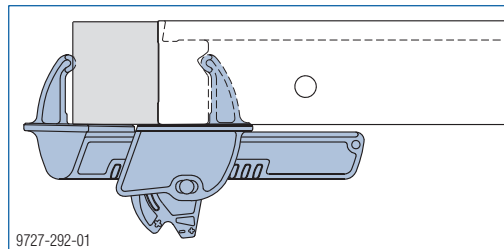

9727-292-01

Bracing inter-panel connection with Framax aligning clamp



Framax aligning clamp:

Permitted tensile force: 15.0 kN


Permitted shear force: 6.0 kN

Permitted moment: 1.5 kNm

Values apply only when mounted on profile.


Particularly when panels are stacked in the vertical, the fact that the clamp bears directly on the profiles means that there is often no need for any extra bracing of the panels with universal walings.

The installation procedure is similar to that for the Framax quick acting clamp RU.

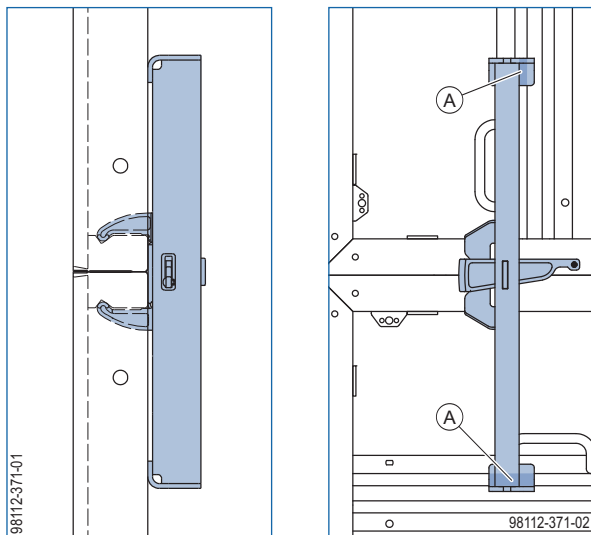

A Contact surface on the profile

Panel bracing with Framax universal waling

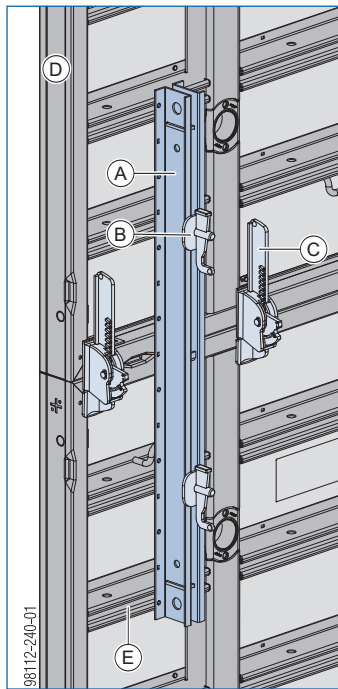

- A Framax universal waling 1.50m
- B Framax wedge clamp
- C Framax multi function clamp
- D Framax Xlife plus panel
- E Function profile as bearing surface for universal waling

Using additional universal walings gives gang-forms better rigidity, especially in higher **vertically stacked configurations**. This makes it possible to pick up and set down large gang-forms by crane without any problems. The additional universal walings are also useful for transferring the loads from platforms.

Note:

Instead of the universal waling, it is also possible to use a Multi-purpose waling WS10 Top50.


Framax universal waling:

Permitted moment (for vertical stacking of panels):
5.0 kNm

Due to the permitted tensile load of 14 kN in the function profile, even stiffer components such as Multi-purpose walings WS10 Top50 are also subject to: permitted moment 5.0 kNm

How to attach

using the Framax wedge clamp or universal clamp

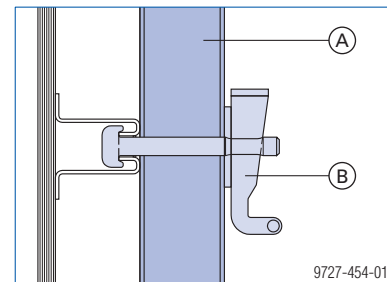


- A Framax universal waling
- B Framax wedge clamp or Universal clamp 5-10cm



NOTICE

Do not oil or grease wedged connections.

using the Framax universal fixing bolt and Super plate

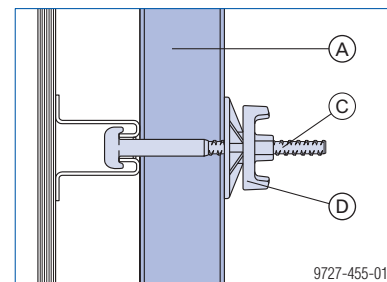

- A Framax universal waling
- C Framax universal fixing bolt
- D Super plate 15.0

Bracing of single form-tie panels



NOTICE

If more than two single form-tie panels are used next to each other, bracing with universal walings will be required.

Single form-tie panels:


Panel width 0.30 to 1.35m

Observe the following points:


- Position the universal walings in such a way that **at most two single form-tie panels without bracing are placed side by side**.
- Universal walings are required only **in the bottom function profile**.
- Max. closure width** between the single form-tie panels: **15 cm** with **Framax multi function clamp**

Example with 5 single form-tie panels


CORRECT position of the universal waling:

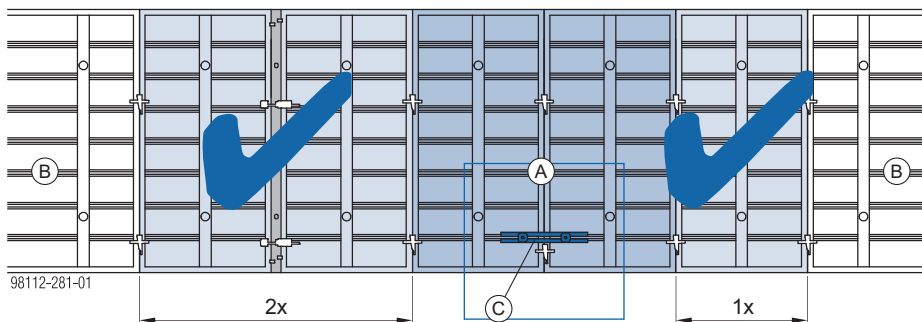

Alternative with Framax aligning clamp:

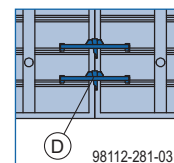

WRONG position of the universal waling:

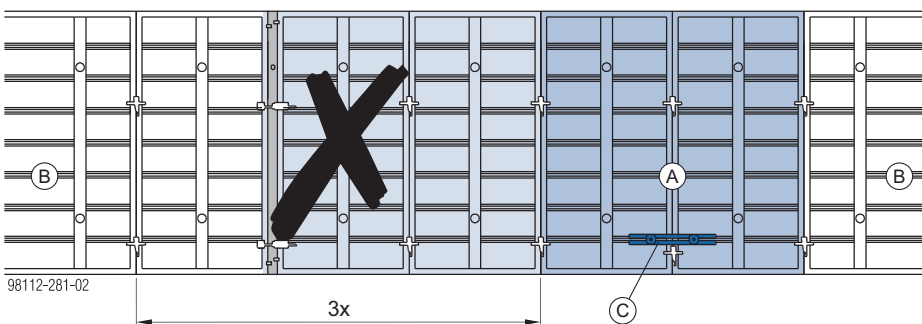

x ... single form-tie panel without bracing


A Framax Xlife plus panels braced with a universal waling

B Framax Xlife plus panel 2.70x2.70m


C Framax universal waling + Framax wedge clamps

D Framax aligning clamp

Corner configuration with single form-tie panels (example)

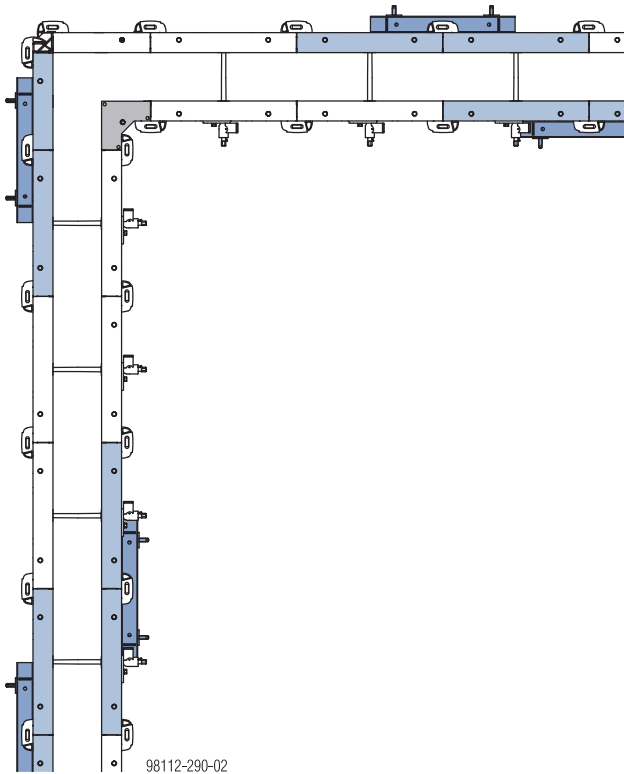


Example with 3 single form-tie panels turned on their sides

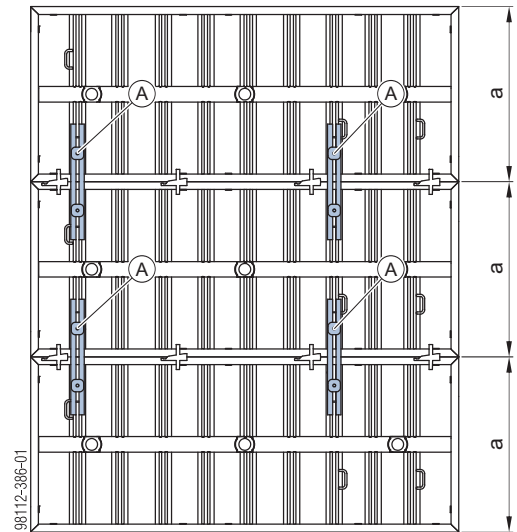

a ... panels up to 1.35m wide

A Framax universal waling 0.90m + Framax wedge clamps

Example with 4 single form-tie panels turned on their sides

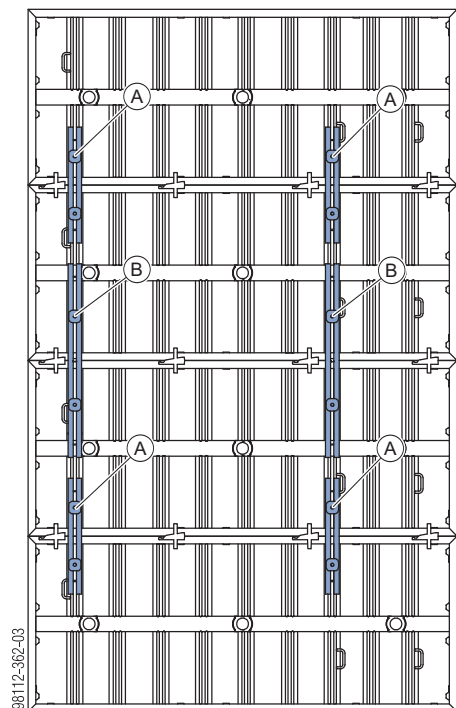

a ... panels up to 1.35m wide

A Framax universal waling 0.90m + Framax wedge clamps

B Framax universal waling 1.50m + Framax wedge clamps

Bracing of single form-tie panels on their side




NOTICE

Vertically stacked **single form-tie panels turned on their sides** require bracing with universal walings.

The positions of the universal walings shown here are for gang-form widths 2.70m to 3.30m!


Example with 2 single form-tie panels turned on their sides

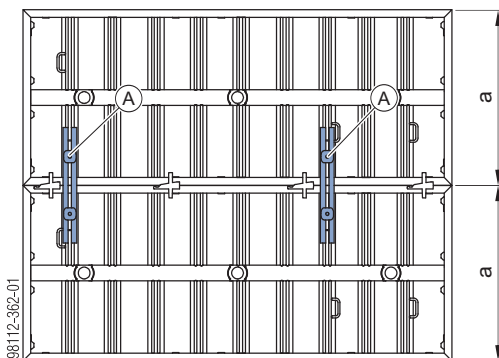

a ... panels up to 1.35m wide

A Framax universal waling 0.90m + Framax wedge clamps

Vertical stacking of panels

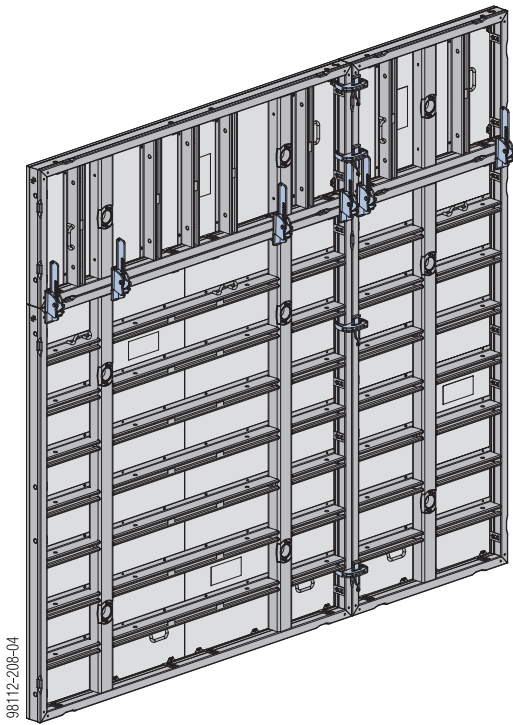

Framax quick acting clamp RU:

Permitted tensile force: 15.0 kN

Permitted shear force: 6.0 kN

Permitted moment: 0.5 kNm

Framax multi function clamp:

Permitted tensile force: 15.0 kN

Permitted shear force: 9.0 kN

Permitted moment: 0.9 kNm

Values apply only when mounted on profile.

Framax aligning clamp:

Permitted tensile force: 15.0 kN

Permitted shear force: 6.0 kN

Permitted moment: 1.5 kNm

Values apply only when mounted on profile.

Framax universal waling:

Permitted moment (for vertical stacking of panels):
5.0 kNm


Due to the permitted tensile load of 14 kN in the function profile, even stiffer components such as Multi-purpose walings WS10 Top50 are also subject to: permitted moment 5.0 kNm

Positions of the interconnecting and form-tie components and accessories needed for:

- Lifting and setting down
- Crane-handling
- Pouring platform
- Pouring



The **planning software Tipos-Doka** is always very helpful when it comes to finding the optimum technical and economical solution for the formwork issue concerned.

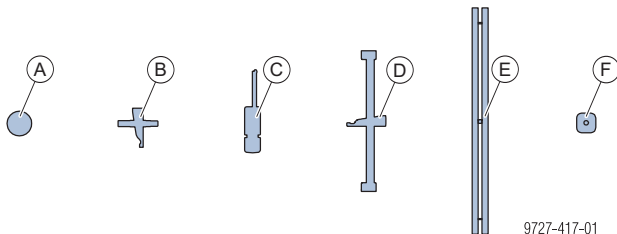

A Framax Xlife plus form tie 20.0

[Tie rod system Framax Xlife plus](#)

B Framax quick acting clamp RU

[Inter-panel connections are easy with Framax quick acting clamps RU](#)

C Framax multi function clamp

[Filler inter-panel connection with Framax multi function clamp](#)

D Framax aligning clamp

[Bracing inter-panel connection with Framax aligning clamp](#)

E Framax universal waling

[Panel bracing with Framax universal waling](#)

F Framax wedge clamp

[Panel bracing with Framax universal waling](#)

Framax Xlife plus panel 2.70m

with Framax multi function clamp

Number of Framax multi function clamps needed at each vertically stacked panel joint

| Width of upright panels | Framax multi function clamp |
|-------------------------|-----------------------------|
| 0.30 - 0.55 m | 1 |
| 0.60 - 1.35 m | 2 |
| 2.70 m | 4 (+1 *) |

*) formwork height 405 cm or 2nd inter-panel joint without universal waling.

Number of universal walings needed at each vertically stacked panel joint


| Formwork height | 1st panel joint | 2nd panel joint | 3rd panel joint |
|-----------------|-----------------------|-----------------------|-----------------|
| 300 - 495 cm | 1 ¹⁾ | — | — |
| 540 - 675 cm | 2 | 1 | — |
| 705 - 810 cm | 2 (+1 ²⁾) | 2 (+1 ²⁾) | 1 |

The values given in the table apply for a gang-form width of 270 cm.

¹⁾ up to 405 cm not needed when a lightweight pouring platform with single brackets is used.


²⁾ only needed if intermediate platforms are to be used.

Formwork height: 300 and 315 cm

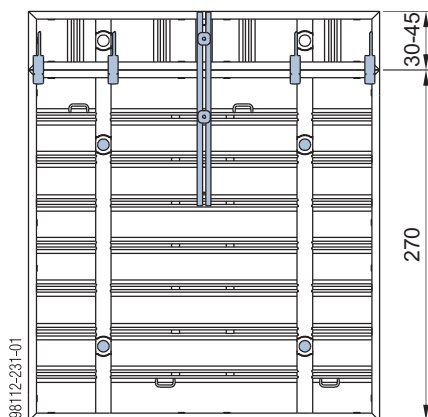


When using a lightweight pouring platform with single brackets (Framax bracket 90), the universal waling is not necessary.

Formwork height: 320, 325, 330, 345 and 360 cm

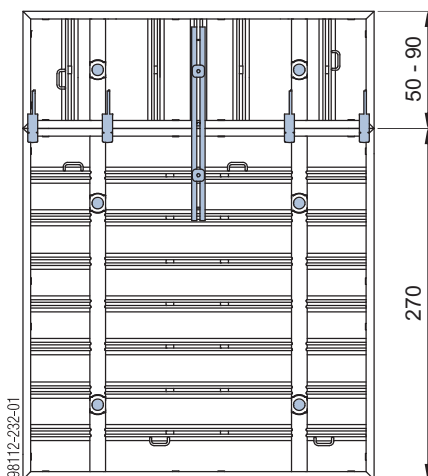


When using a lightweight pouring platform with single brackets (Framax bracket 90), the universal waling is not necessary.

Formwork height: 405 cm

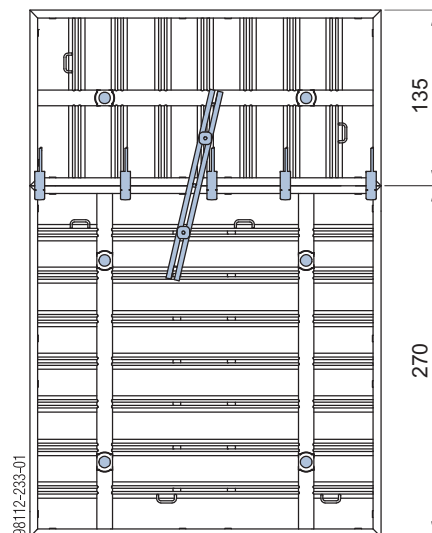






When using a lightweight pouring platform with single brackets (Framax bracket 90), the universal waling is not necessary.

Formwork height: 435 and 450 cm

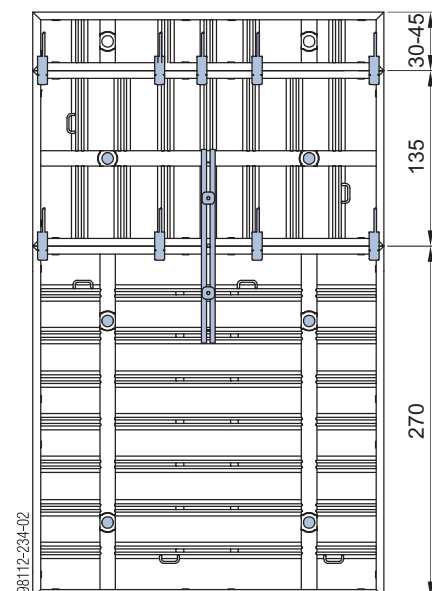


Formwork height: 455, 460, 465, 480 and 495 cm

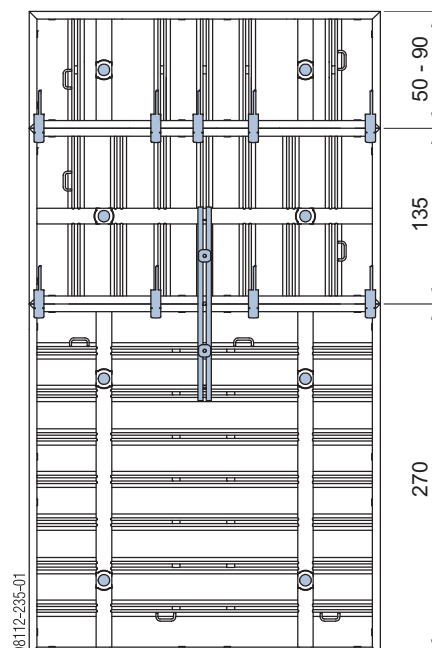


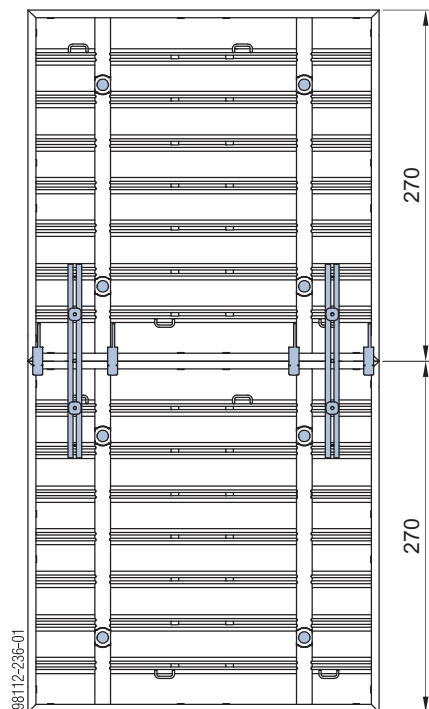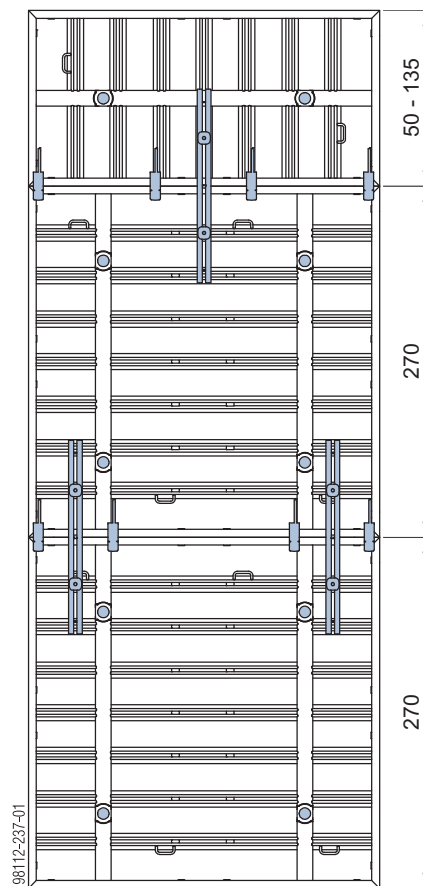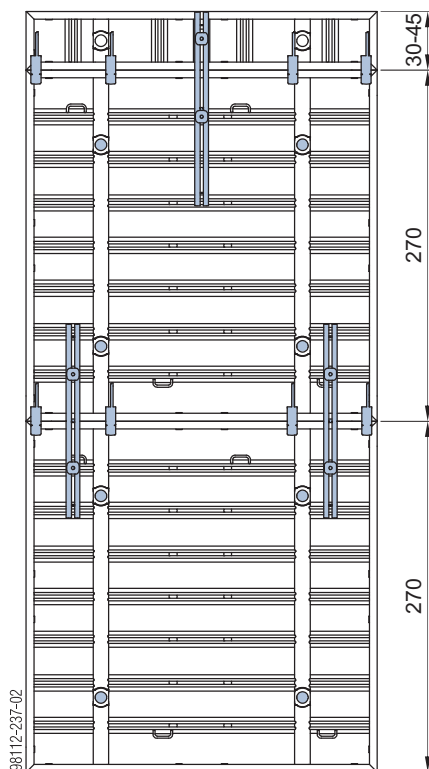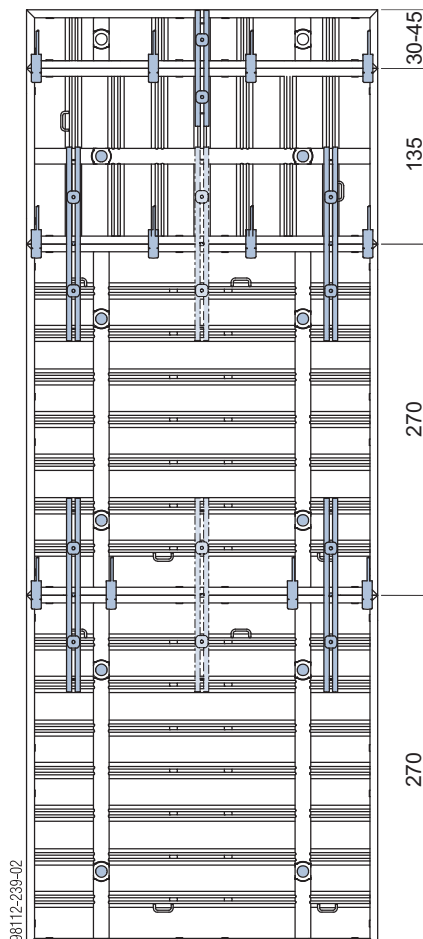Formwork height: 540 cm**Formwork height: 590, 595, 600, 615, 630 and 675 cm****Formwork height: 570 and 585 cm****Formwork height: 705 and 720 cm**

The third universal waling at the first and the second panel joint is only needed if intermediate platforms are to be used.

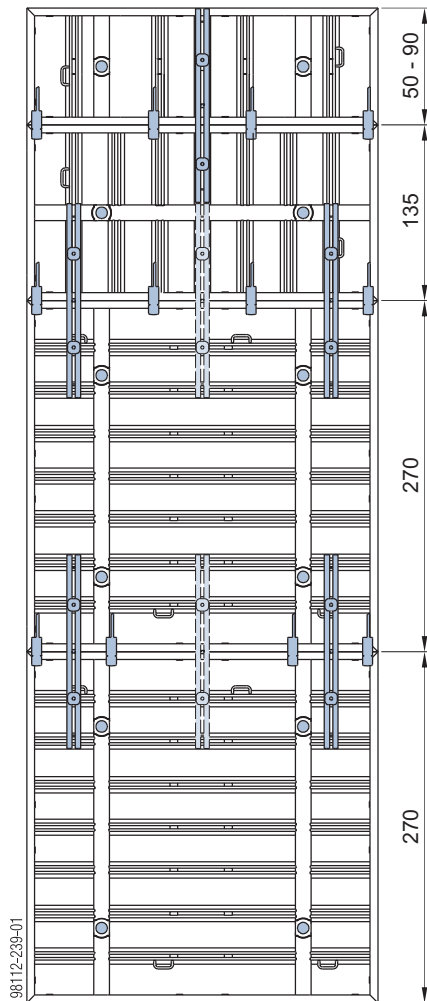Formwork height: 725, 730, 735, 750 and 765 cm

The third universal waling at the first and the second panel joint is only needed if intermediate platforms are to be used.

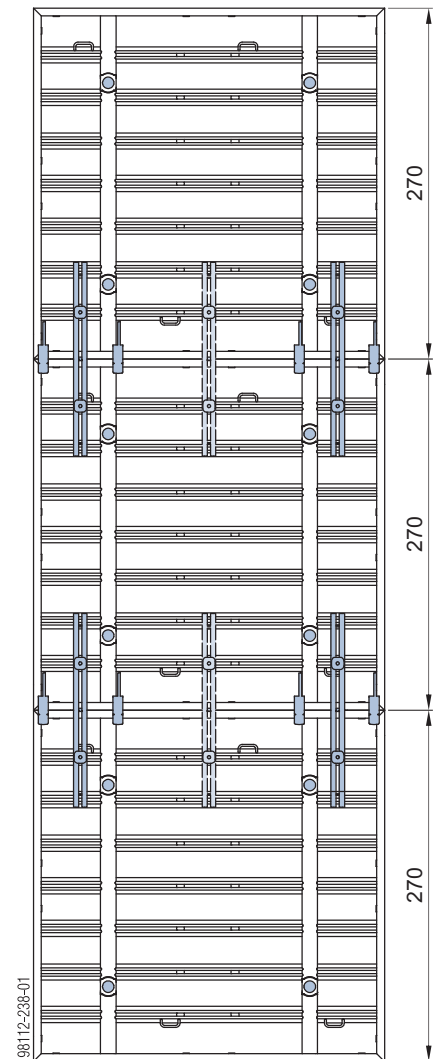Formwork height: 810 cm

The third universal waling at the first and the second panel joint is only needed if intermediate platforms are to be used.

with Framax quick acting clamp RU

Number of Framax quick acting clamps RU needed at each vertically stacked panel joint

| Width of upright panels | Framax quick acting clamp RU |
|-------------------------|------------------------------|
| 0.30 - 0.55 m | 1 |
| 0.60 - 1.35 m | 2 |
| 2.70 m | 4 |

Number of universal walings needed at each vertically stacked panel joint

| Formwork height | 1st panel joint | 2nd panel joint | 3rd panel joint |
|-----------------|-----------------------|-----------------------|-----------------|
| 300 - 465 cm | 1 ¹⁾ | 1 | — |
| 480 - 630 cm | 2 | 1 | — |
| 675 - 735 cm | 2 (+1 ²⁾) | 2 (+1 ³⁾) | 1 |
| 750 - 810 cm | 3 | 3 | 2 |


The values given in the table apply for a gang-form width of 270 cm.

¹⁾ up to 315 cm not needed when a lightweight pouring platform with single brackets is used.

²⁾ only needed if intermediate platforms are to be used.


³⁾ needed only for height 705 to 735 cm when intermediate platforms are used.

Formwork height: 300 and 315 cm

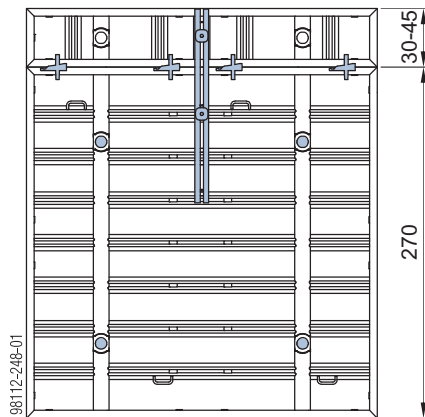


Universal waling only needed if pouring platforms are to be used.


Formwork height: 320, 325, 330, 345, 360 and 405 cm




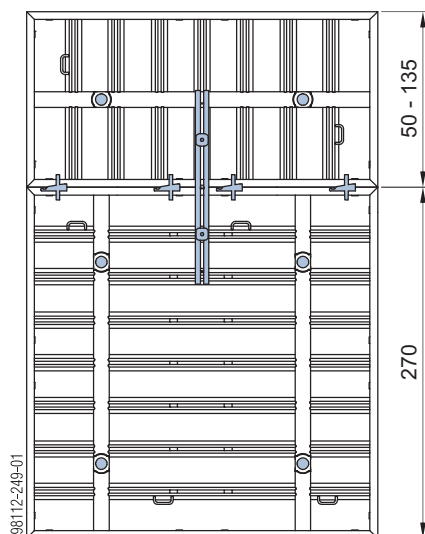



Formwork height: 435 and 450 cm

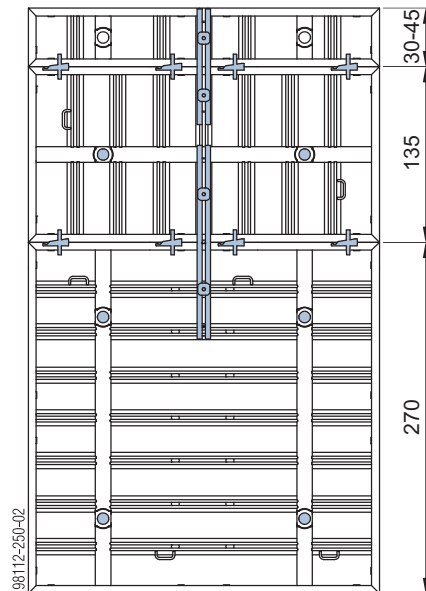


Formwork height: 455, 460 and 465 cm

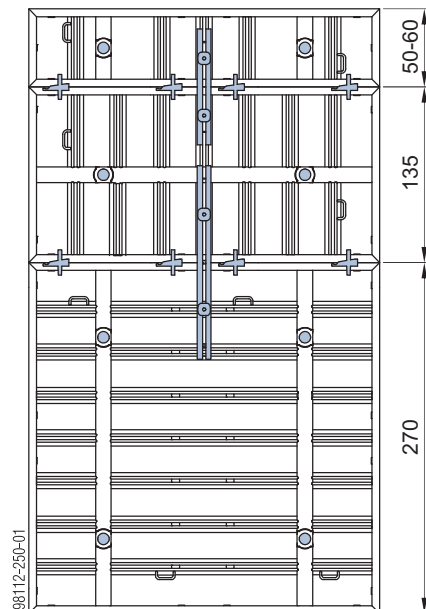

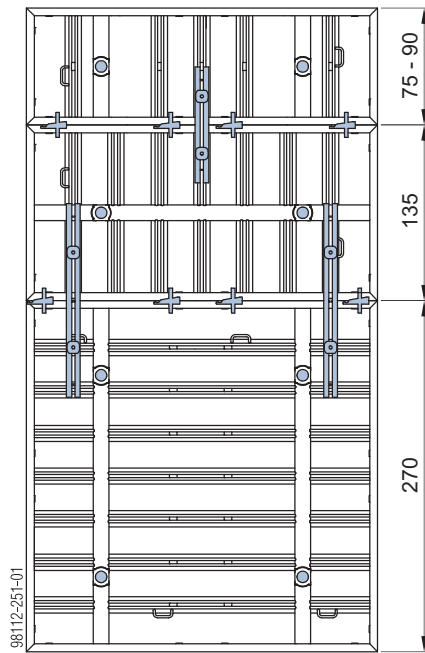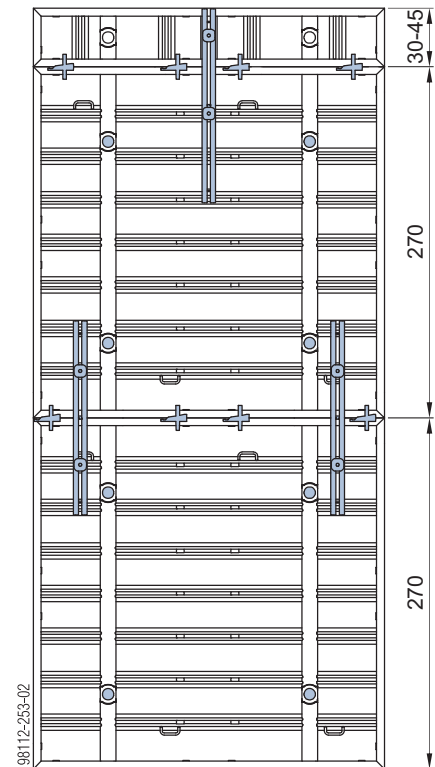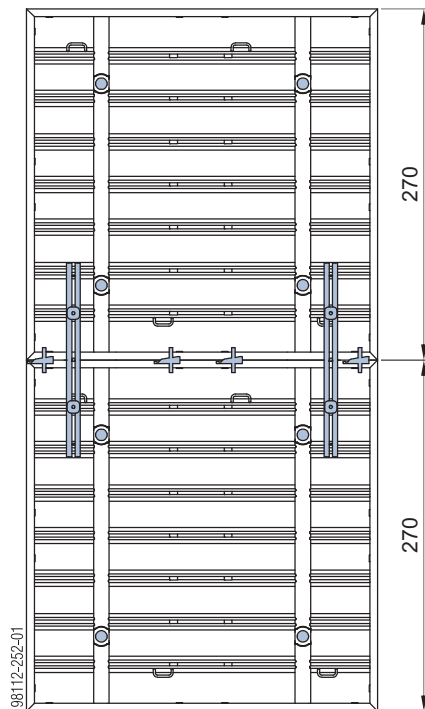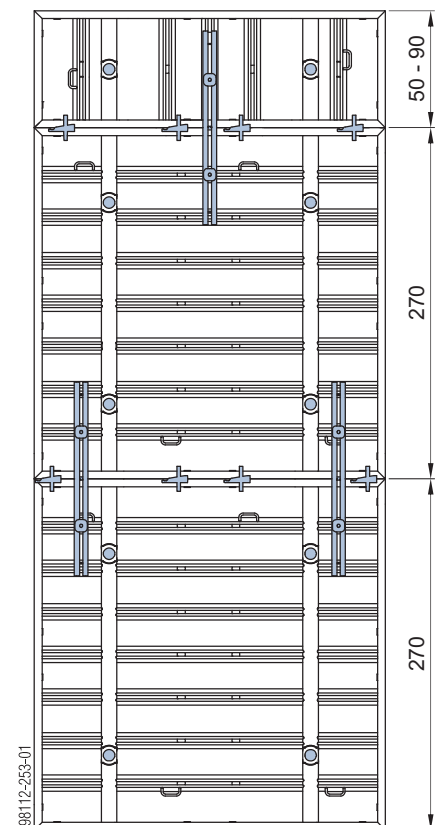
Formwork height: 480 and 495 cm**Formwork height: 570 and 585 cm****Formwork height: 540 cm****Formwork height: 590, 595, 600, 615 and 630 cm**

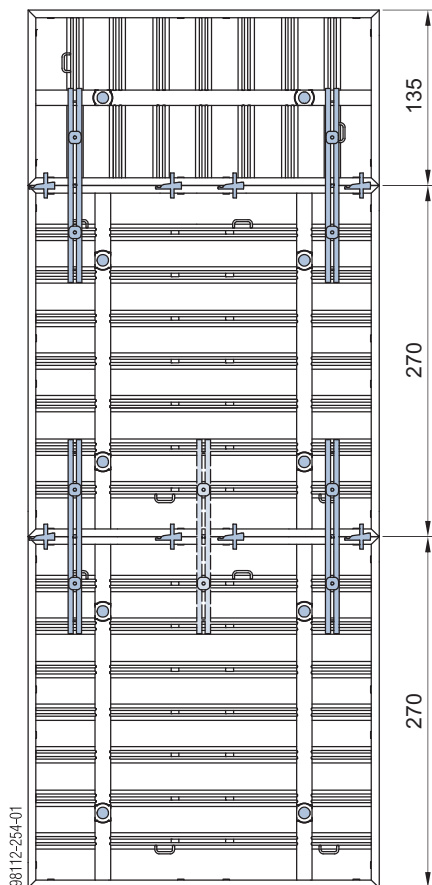Formwork height: 675 cm


The third universal waling at the first panel joint is only needed if intermediate platforms are to be used.

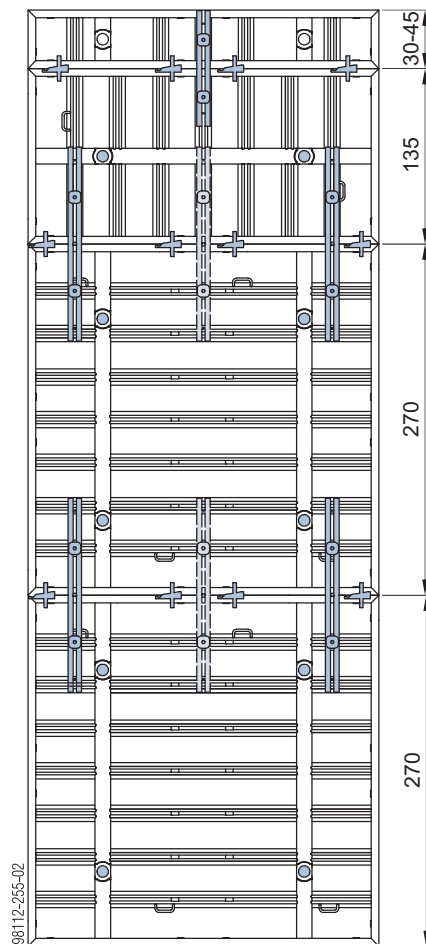Formwork height: 705 and 720 cm


The third universal waling at the first and the second panel joint is only needed if intermediate platforms are to be used.

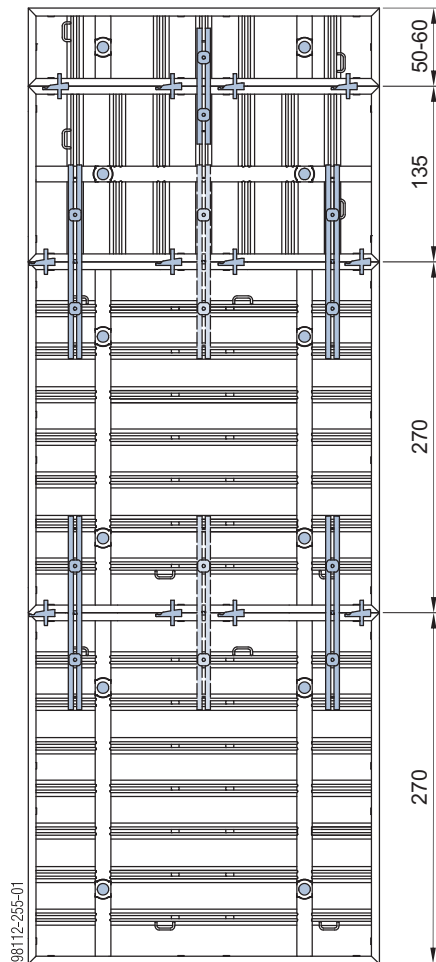Formwork height: 725, 730 and 735 cm

The third universal waling at the first and the second panel joint is only needed if intermediate platforms are to be used.



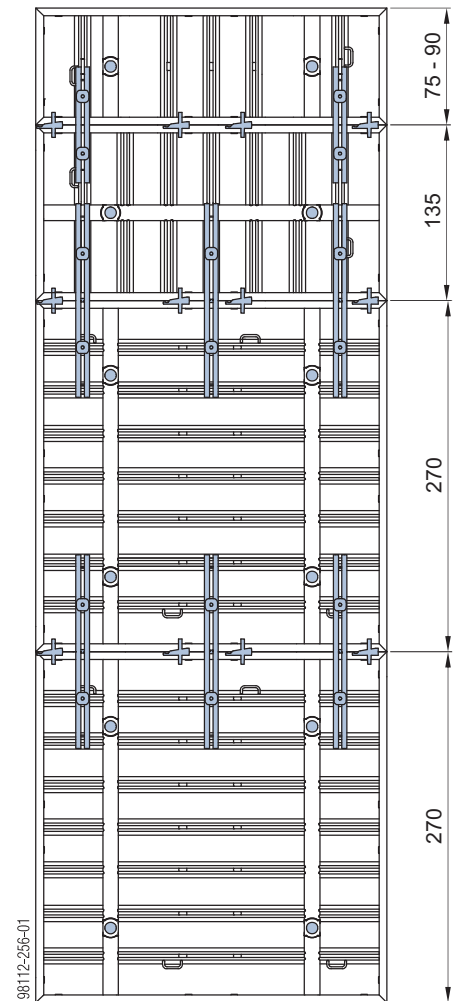
Formwork height: 750 and 765 cm

Formwork height: 810 cm

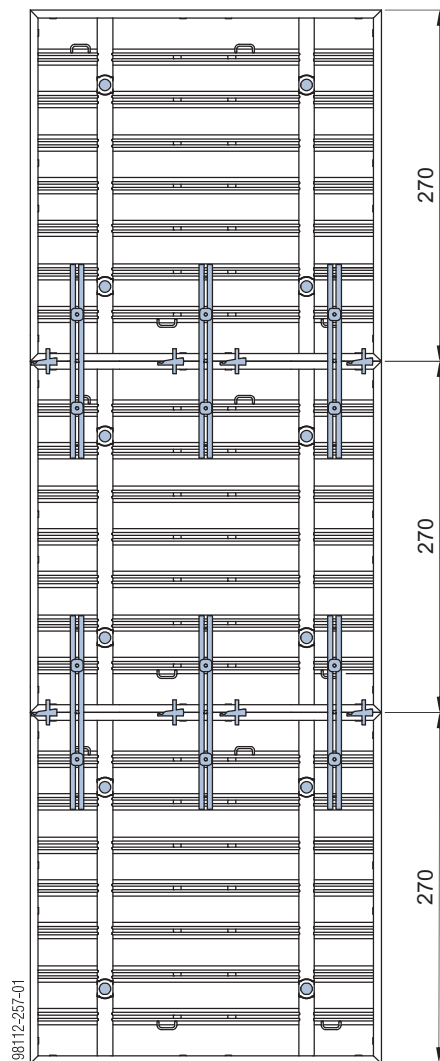

with Framax aligning clamp**Number of Framax aligning clamps needed at each vertically stacked panel joint**

| Width of upright panels | Framax aligning clamp |
|-------------------------|-----------------------|
| 0.30 - 0.55m | 1 |
| 0.60 - 1.35 m | 2 |
| 2.70m | See graphics |

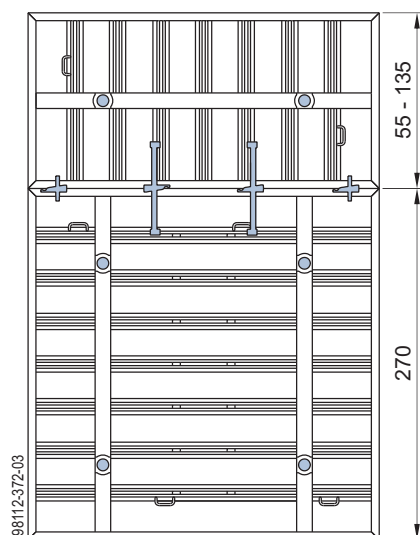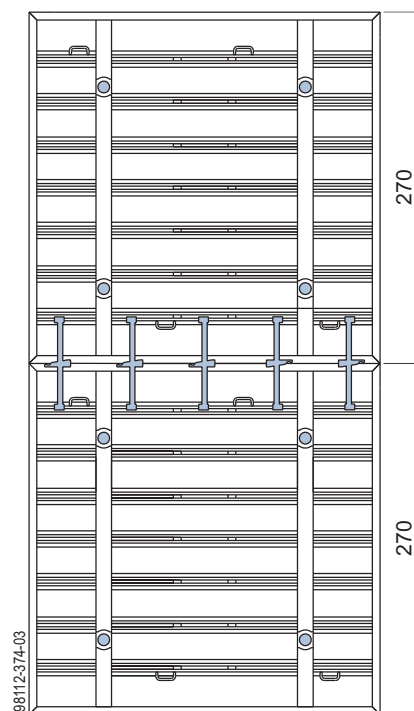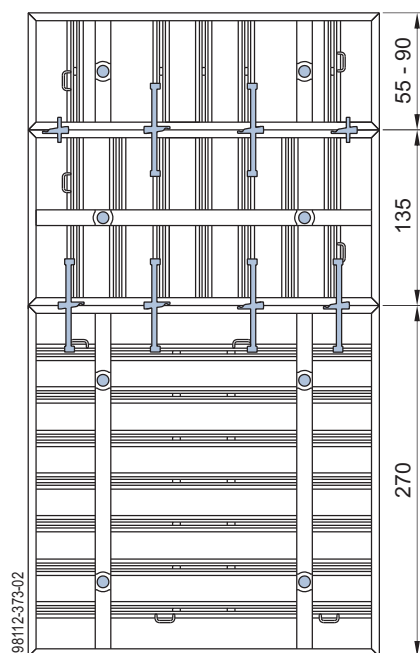Formwork height: 325, 330, 345, 360 and 405 cm**Formwork height: 540 cm****Formwork height: 460, 465, 480 and 495 cm**

Framax Xlife plus panel 3.00m

with Framax multi function clamp

Number of Framax multi function clamps needed at each vertically stacked panel joint

| Width of upright panels | Framax multi function clamp |
|-------------------------|-----------------------------|
| 0.30 - 0.55 m | 1 |
| 0.60 - 1.35 m | 2 |
| 2.70 m | 4 (+1 *) |

*) 2nd inter-panel joint without universal waling.

Number of universal walings needed at each vertically stacked panel joint

| Formwork height | 1st panel joint | 2nd panel joint |
|-----------------|-----------------------|-----------------|
| 330 - 525 cm | 1 ¹⁾ | — |
| 570 - 720 cm | 2 (+1 ²⁾) | 1 |
| 735 - 765 cm | 3 | 2 |


The values given in the table apply for a gang-form width of 270 cm.

¹⁾ up to 375 cm not needed when a lightweight pouring platform with single brackets is used.

²⁾ needed only for height 630 to 720 cm when intermediate platforms are used.


Permitted fresh-concrete pressure **75kN/m²**
on 3.00m high panels.

Formwork height: 330 and 345 cm

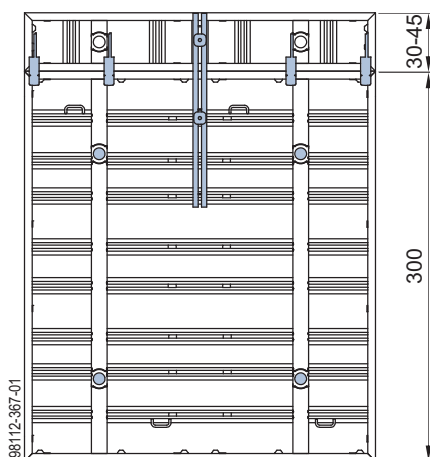


When using a lightweight pouring platform with single brackets (Framax bracket 90), the universal waling is not necessary.

Formwork height: 350, 355, 360 and 375 cm

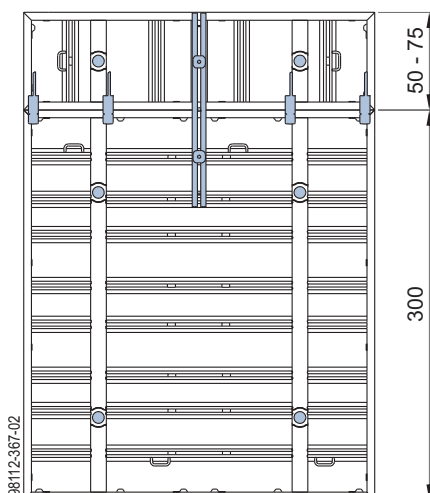





When using a lightweight pouring platform with single brackets (Framax bracket 90), the universal waling is not necessary.

Formwork height: 390 and 435 cm

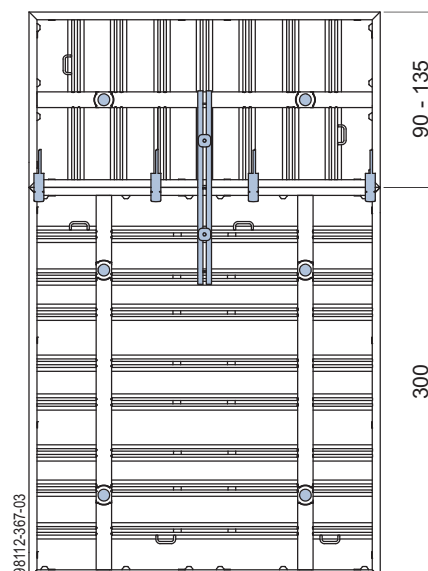



Formwork height: 465 and 480 cm

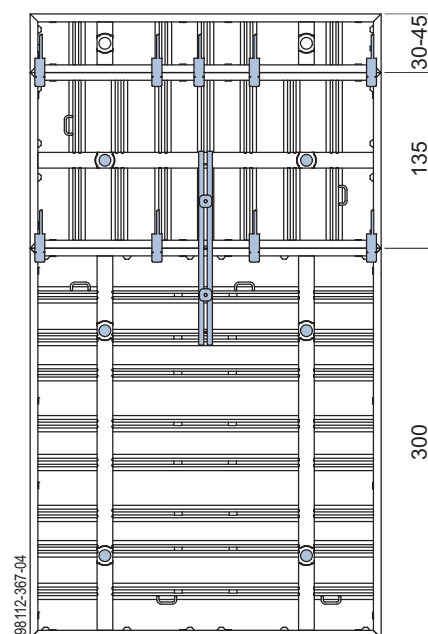

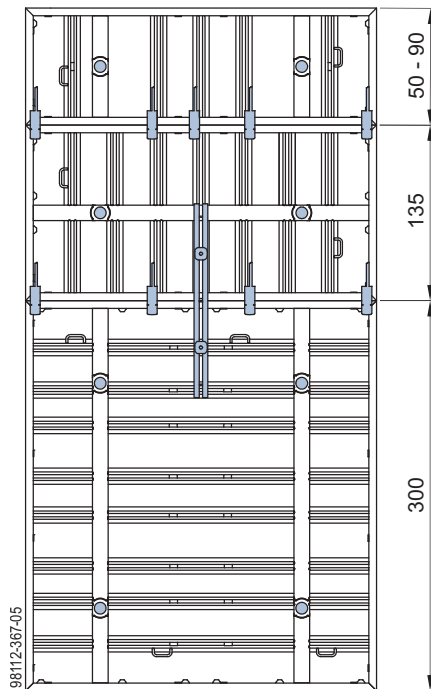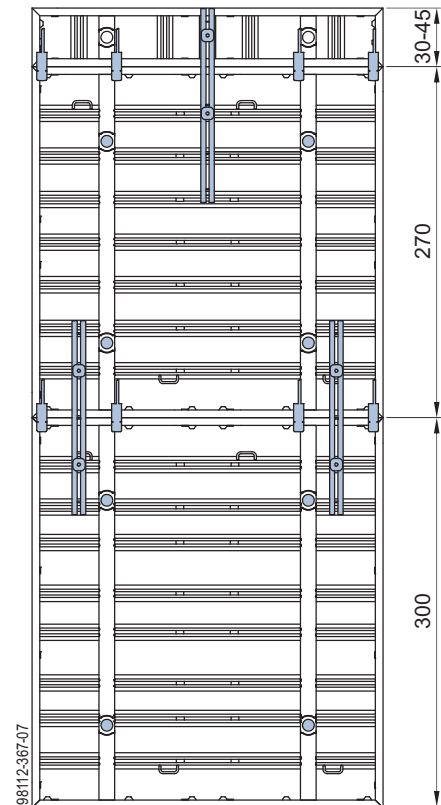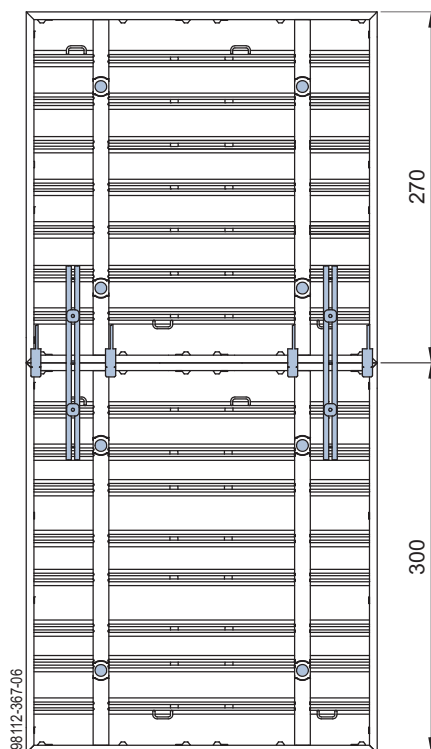
Formwork height: 485, 490, 495, 510 and 525 cm**Formwork height: 600 and 615 cm****Formwork height: 570 cm**

The topmost universal waling is not needed if a light pouring platform made of single brackets (Framax bracket 90) is to be used.

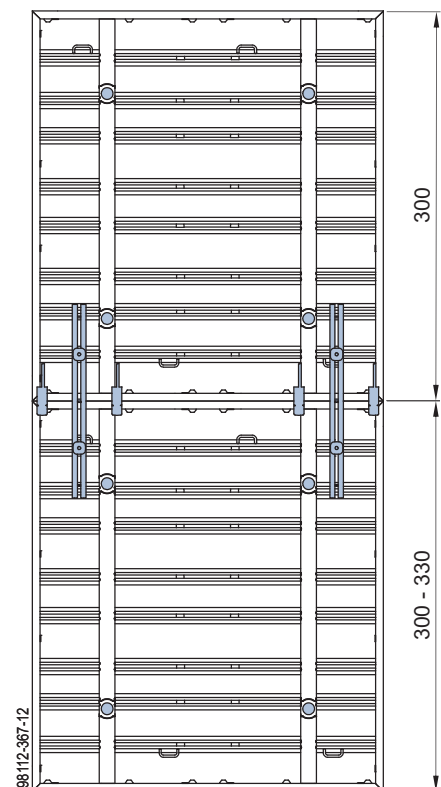
Formwork height: 600 and 630

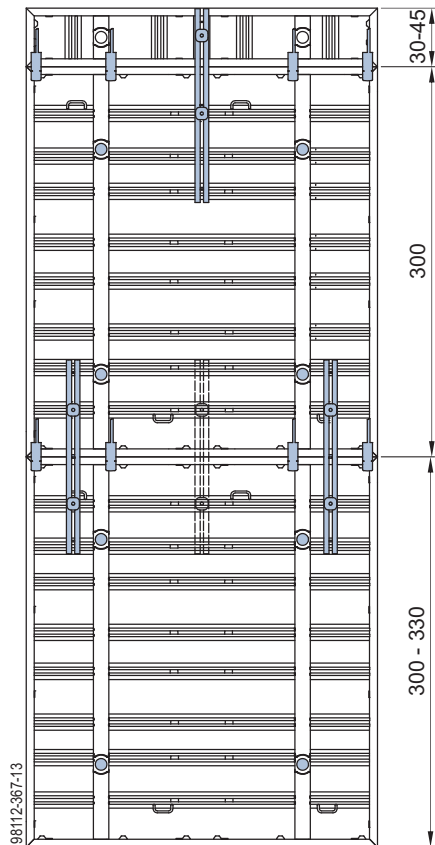Formwork height: 630, 645, 660 and 675 cm

The third universal waling is needed only if intermediate platforms are to be used.

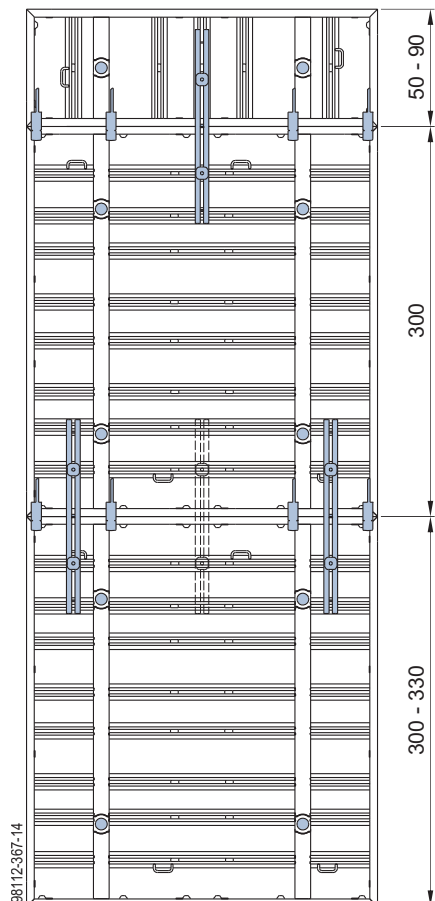Formwork height: 650, 655, 660, 675, 680, 685, 690, 705 and 720 cm

The third universal waling is needed only if intermediate platforms are to be used.

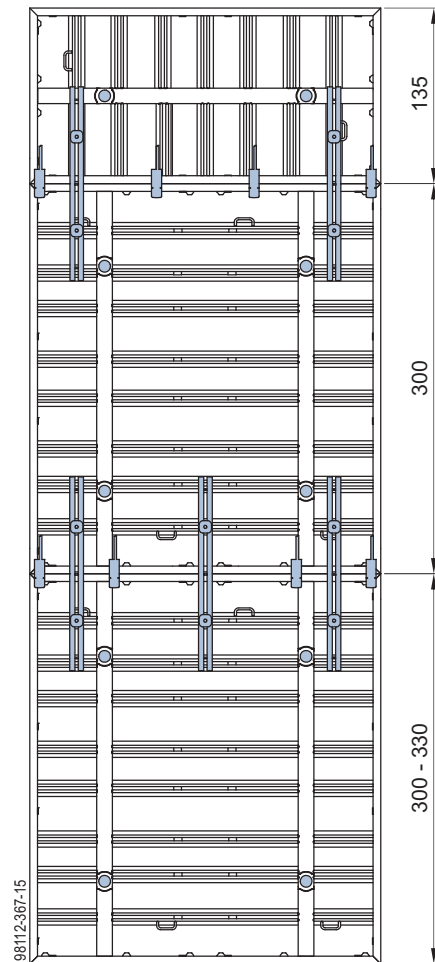Formwork height: 735 and 765 cm

with Framax quick acting clamp RU

Number of Framax quick acting clamps RU needed at each vertically stacked panel joint

| Width of upright panels | Framax quick acting clamp RU |
|-------------------------|------------------------------|
| 0.30 - 0.55 m | 1 |
| 0.60 - 1.35 m | 2 |
| 2.70 m | 4 |

Number of universal walings needed at each vertically stacked panel joint




| Formwork height | 1st panel joint | 2nd panel joint |
|-----------------|-----------------------|-----------------|
| 330 - 480 cm | 1 ¹⁾ | 1 |
| 485 - 720 cm | 2 (+1 ²⁾) | 1 |
| 735 - 765 cm | 3 | 2 |

The values given in the table apply for a gang-form width of 270 cm.


¹⁾ up to 345 cm not needed when a lightweight pouring platform with single brackets is used.





²⁾ needed only for height 630 to 720 cm when intermediate platforms are used.

Permitted fresh-concrete pressure **75kN/m²** on 3.00m high panels.

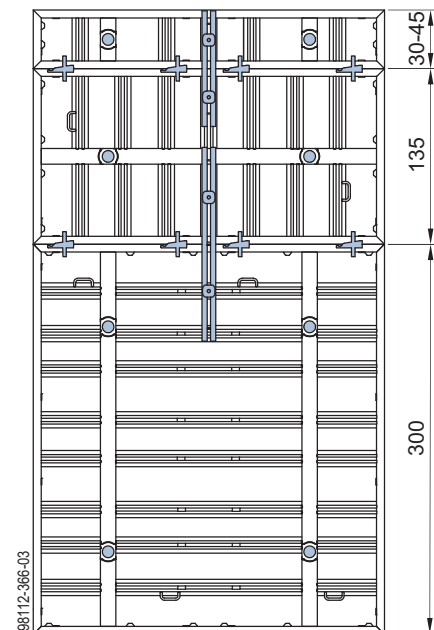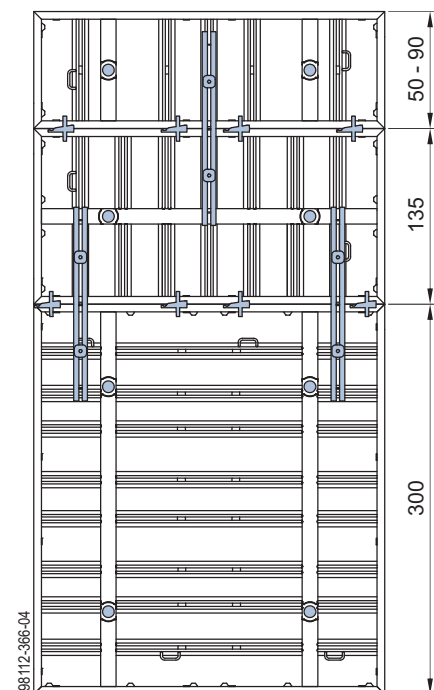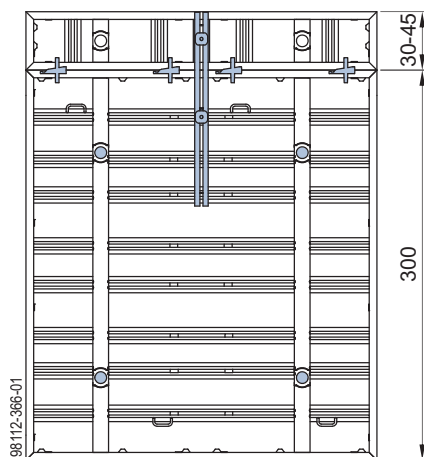Formwork height: 465 and 480 cm**Formwork height: 485, 490, 495, 510 and 525 cm****Formwork height: 330 and 345 cm**


Universal waling only needed if pouring platforms are to be used.

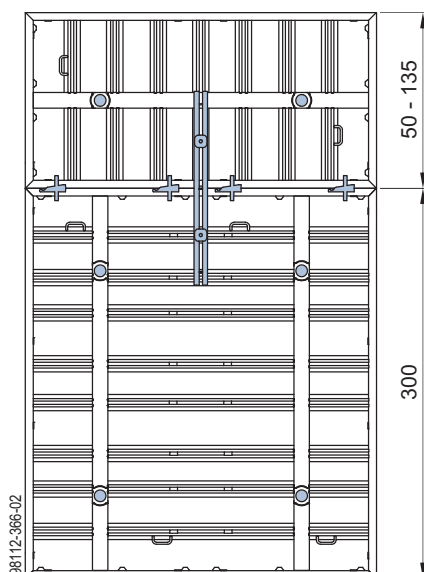Formwork height: 350, 355, 360, 375, 390 and 435 cm

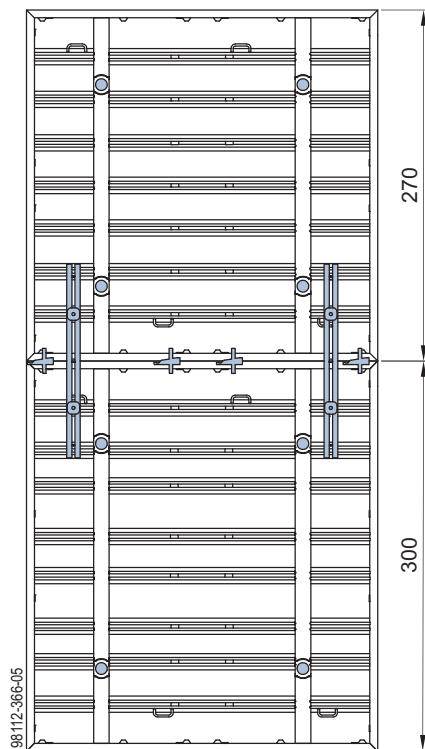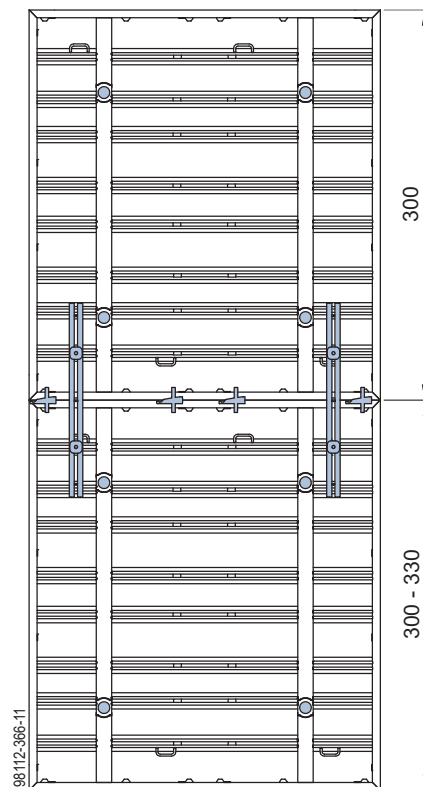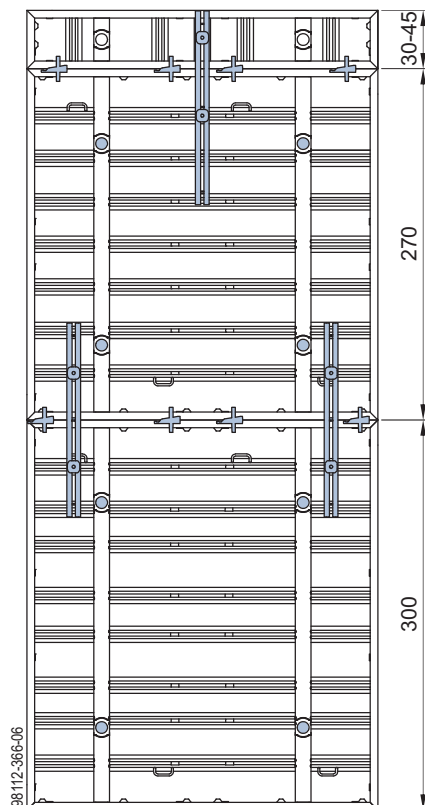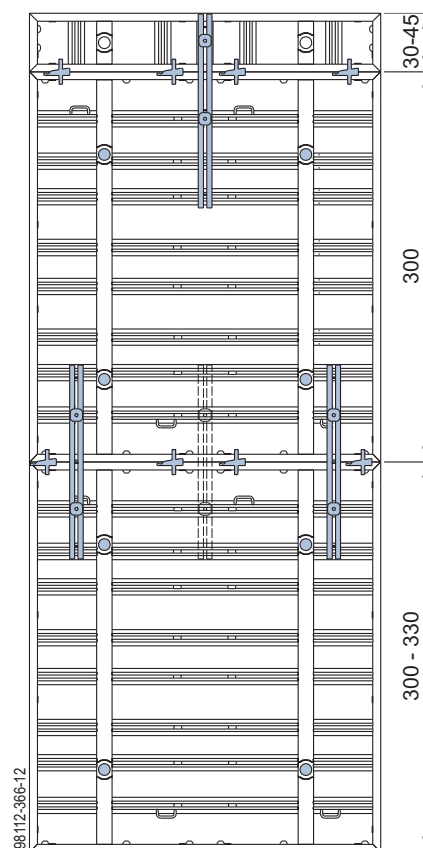Formwork height: 570 cm**Formwork height: 600 and 630 cm****Formwork height: 600 and 615 cm****Formwork height: 630, 645, 660 and 675 cm**


The third universal waling is needed only if intermediate platforms are to be used.

Formwork height: 650, 655, 660, 675, 680, 685, 690, 705 and 720 cm

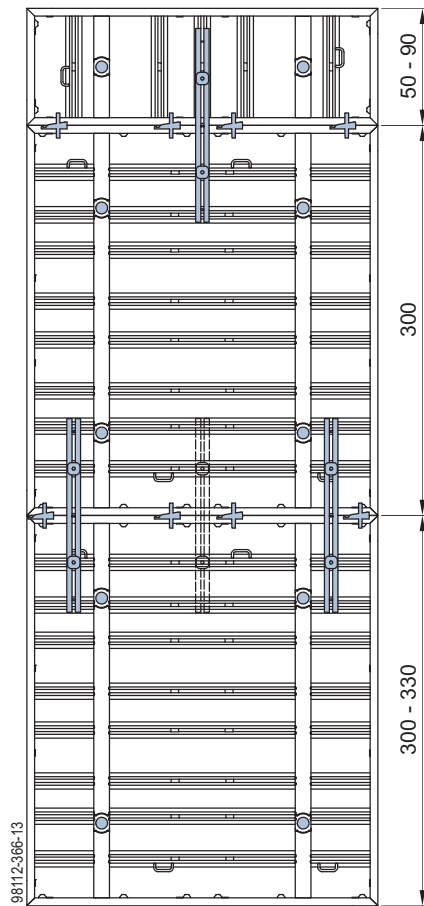

The third universal waling is needed only if intermediate platforms are to be used.

Formwork height: 735 and 765 cm

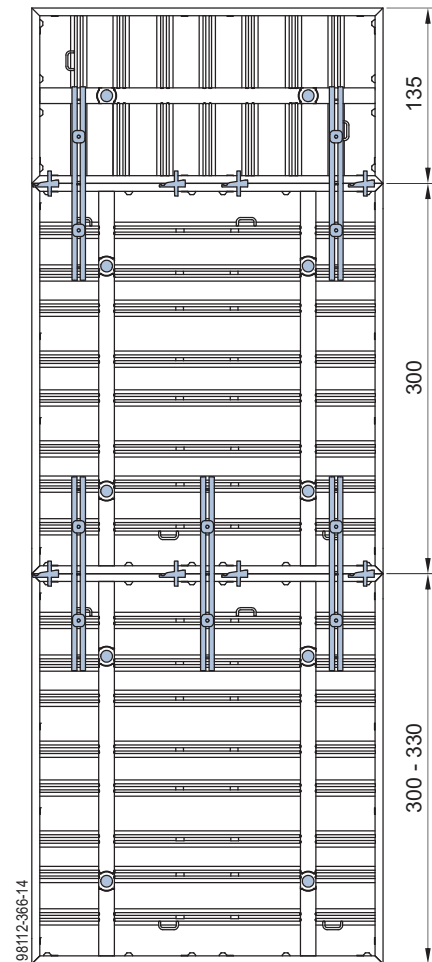


with Framax aligning clamp

Number of Framax aligning clamps needed at each vertically stacked panel joint


| Width of upright panels | Framax aligning clamp |
|-------------------------|-----------------------|
| 0.30 - 0.55m | 1 |
| 0.60 - 1.35m | 2 |
| 2.70m | See graphics |

Permitted fresh-concrete pressure **75kN/m²** on 3.00m high panels.


Formwork height: 355, 360, 375, 390 and 435 cm

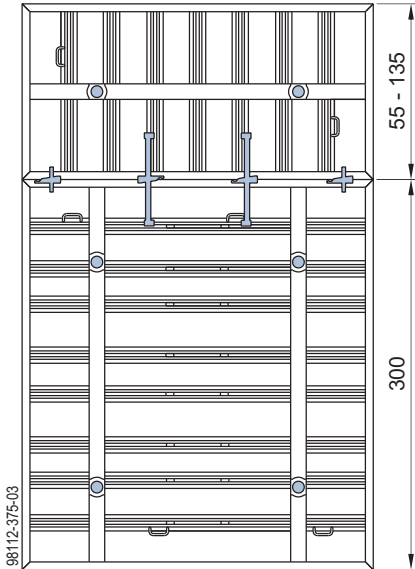

Formwork height: 490, 495, 510 and 525 cm

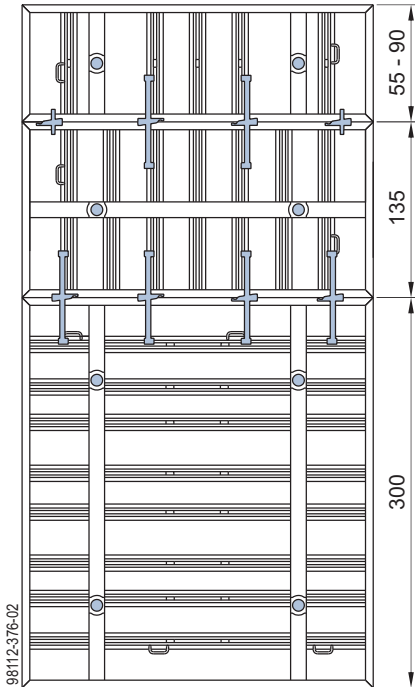

Formwork height: 570 cm

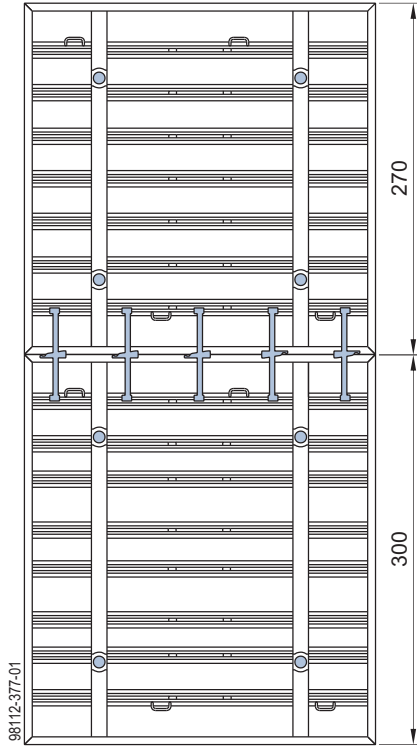

Framax Xlife plus panel 3.30m

with Framax multi function clamp

Number of Framax multi function clamps needed at each vertically stacked panel joint

| Width of upright panels | Framax multi function clamp |
|-------------------------|-----------------------------|
| 0.30 - 0.55 m | 1 |
| 0.60 - 1.35 m | 2 |
| 2.70 m | 4 (+1 *) |

*) 2nd inter-panel joint without universal waling.

Number of universal walings needed at each vertically stacked panel joint


| Formwork height | 1st panel joint | 2nd panel joint |
|-----------------|-----------------------|-----------------|
| 360 - 555 cm | 1 ¹⁾ | — |
| 600 - 750 cm | 2 (+1 ²⁾) | 1 |
| 795 cm | 3 | 2 |

The values given in the table apply for a gang-form width of 270 cm.

¹⁾ up to 405 cm not needed when a lightweight pouring platform with single brackets is used.


²⁾ needed only for height 690 to 750 cm when intermediate platforms are used.

Formwork height: 360 and 375 cm

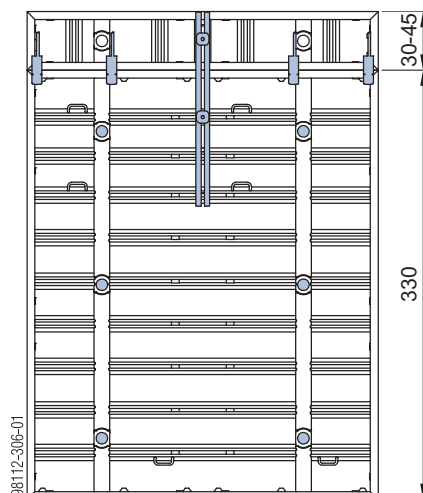


When using a lightweight pouring platform with single brackets (Framax bracket 90), the universal waling is not necessary.

Formwork height: 380, 385, 390 and 405 cm

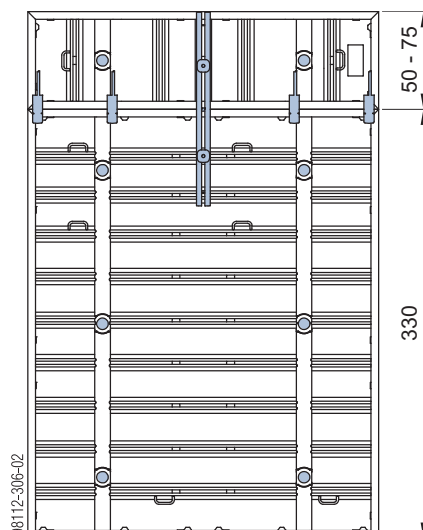





When using a lightweight pouring platform with single brackets (Framax bracket 90), the universal waling is not necessary.

Formwork height: 420 and 465 cm

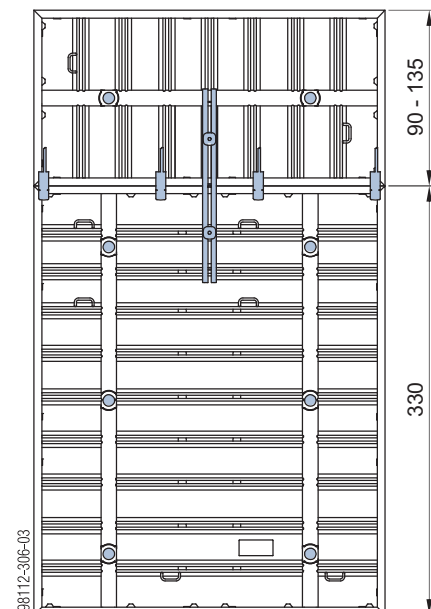



Formwork height: 495 and 510 cm

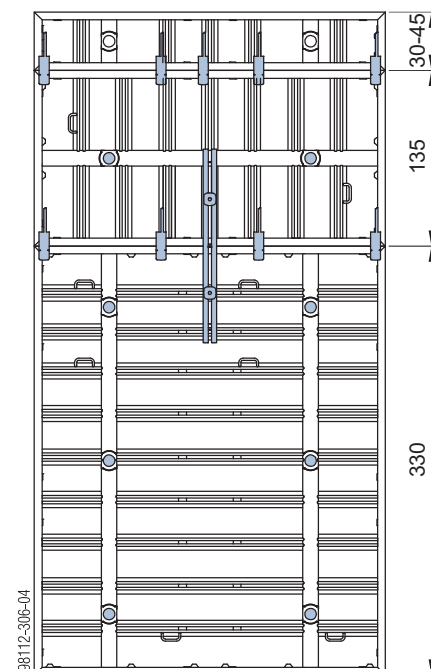

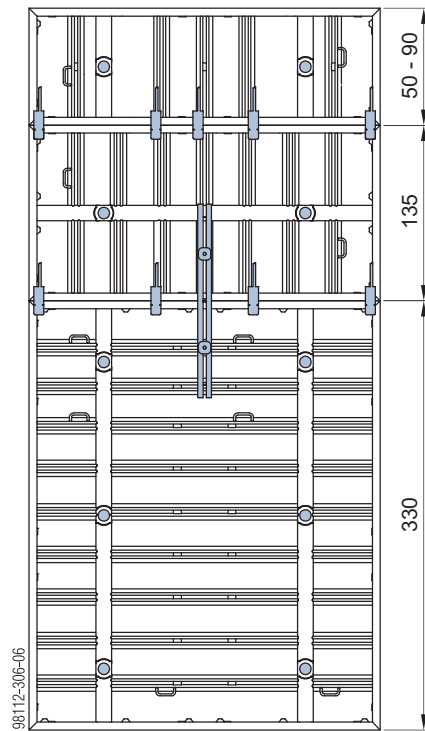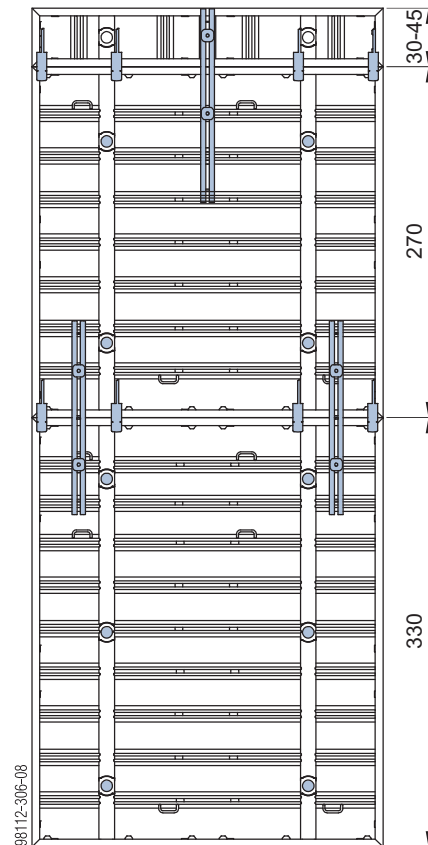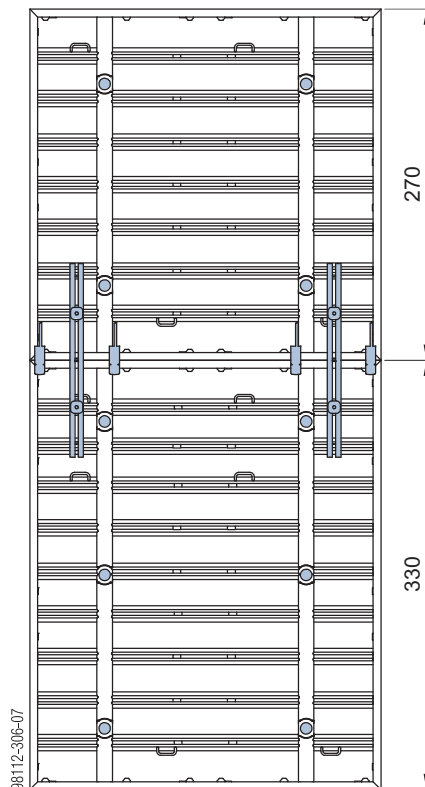
Formwork height: 515, 520, 525, 540 and 555 cm**Formwork height: 630 and 645 cm****Formwork height: 600 cm**

The topmost universal waling is not needed if a light pouring platform made of single brackets (Framax bracket 90) is to be used.

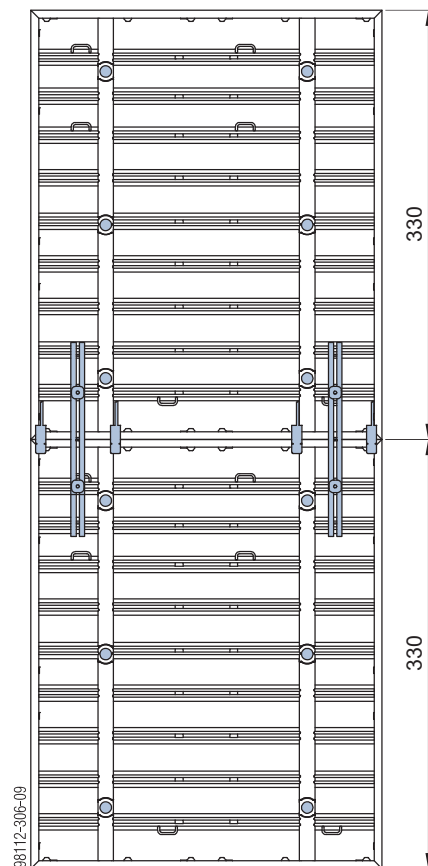
Formwork height: 660 cm

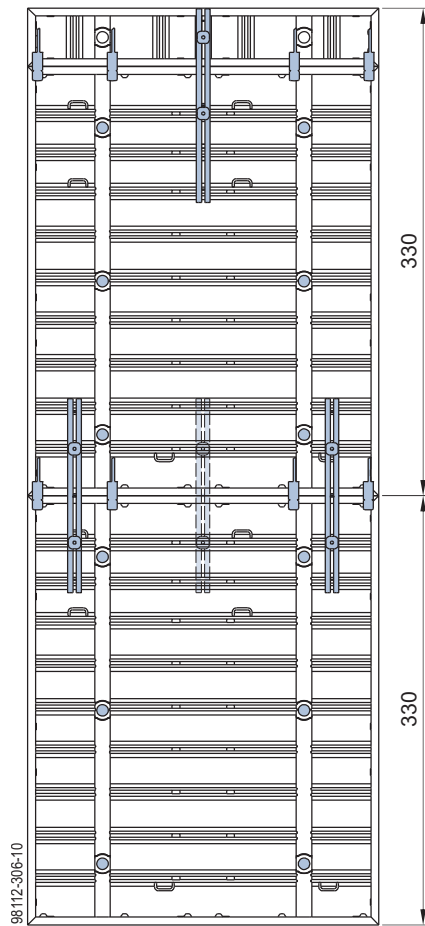Formwork height: 690 and 705 cm

The third universal waling is needed only if intermediate platforms are to be used.

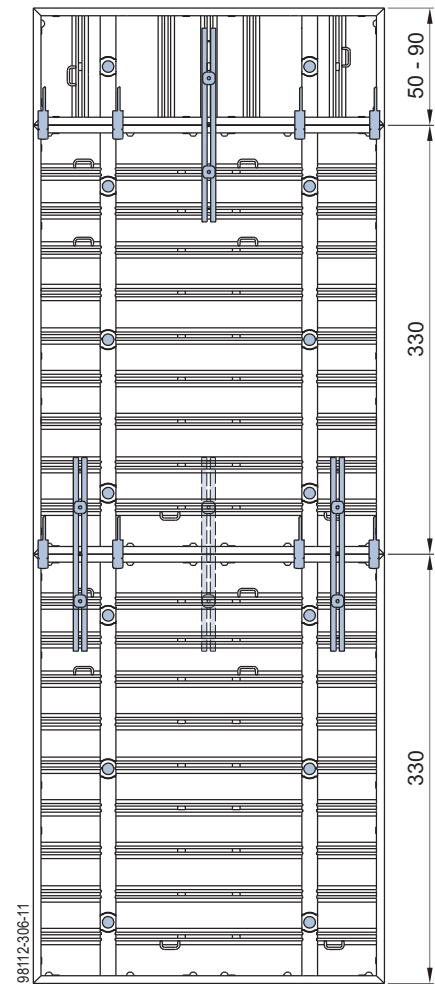Formwork height: 710, 715, 720, 735 and 750 cm

The third universal waling is needed only if intermediate platforms are to be used.

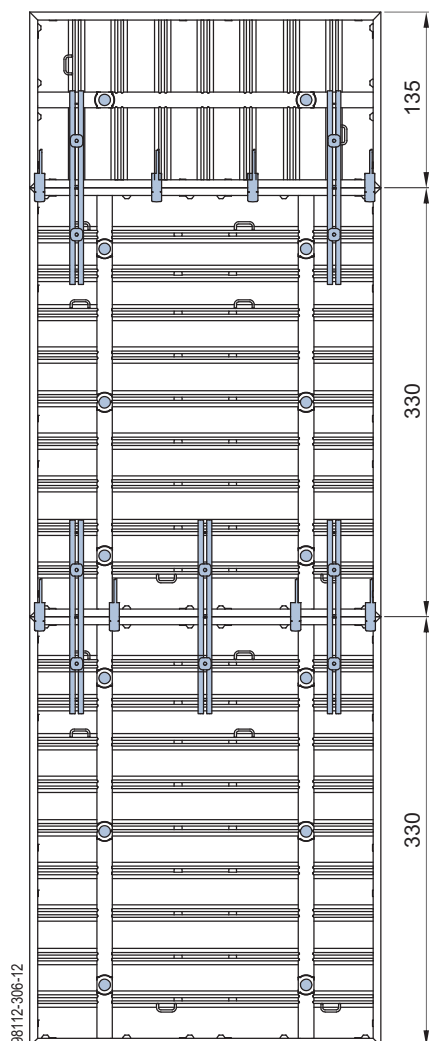Formwork height: 795 cm**with Framax quick acting clamp RU****Number of Framax quick acting clamps RU needed at each vertically stacked panel joint**

| Width of upright panels | Framax quick acting clamp RU |
|-------------------------|------------------------------|
| 0.30 - 0.55 m | 1 |
| 0.60 - 1.35 m | 2 |
| 2.70 m | 4 |


Number of universal walings needed at each vertically stacked panel joint

| Formwork height | 1st panel joint | 2nd panel joint |
|-----------------|-----------------------|-----------------|
| 360 - 510 cm | 1 ¹⁾ | 1 |
| 515 - 750 cm | 2 (+1 ²⁾) | 1 |
| 795 cm | 3 | 2 |


The values given in the table apply for a gang-form width of 270 cm.





¹⁾ up to 375 cm not needed when a lightweight pouring platform with single brackets is used.




²⁾ needed only for height 690 to 750 cm when intermediate platforms are used.

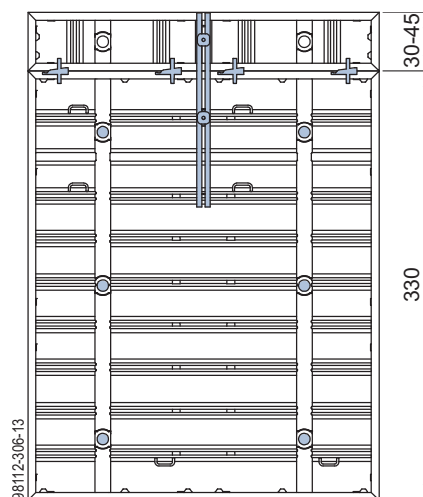Formwork height: 360 and 375 cm

Universal waling only needed if pouring platforms are to be used.

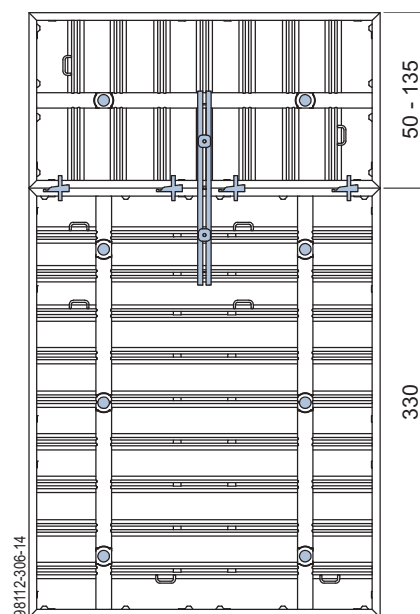
Formwork height: 380, 385, 390, 405, 420 and 465 cm

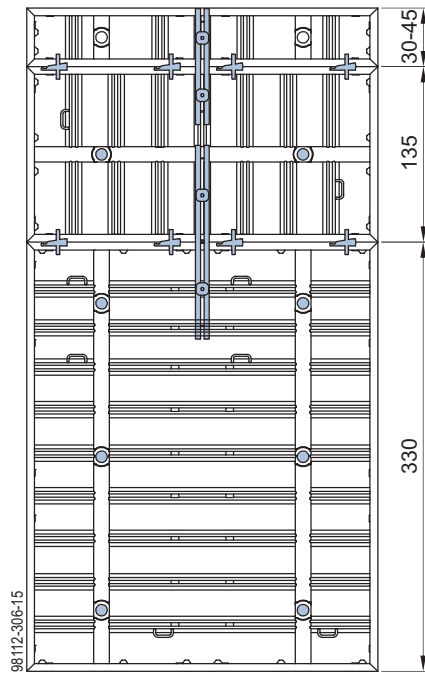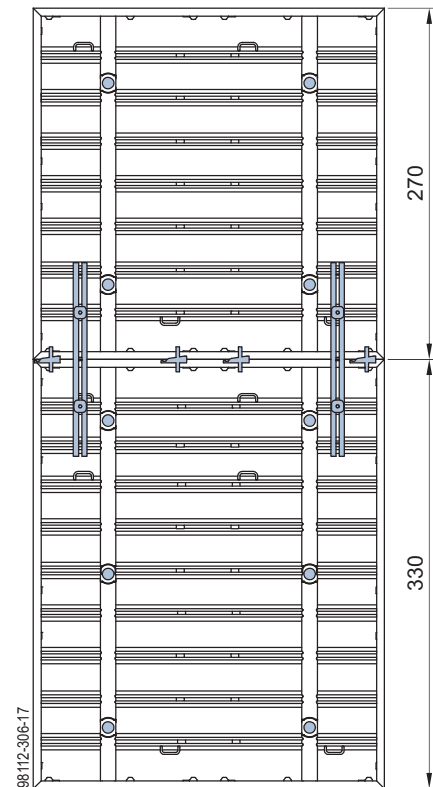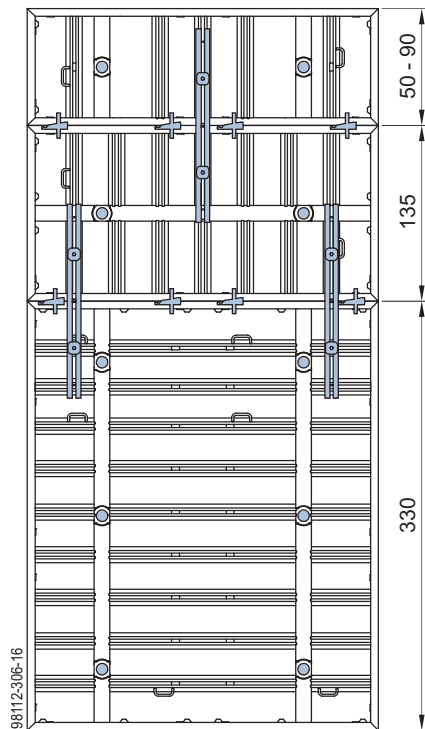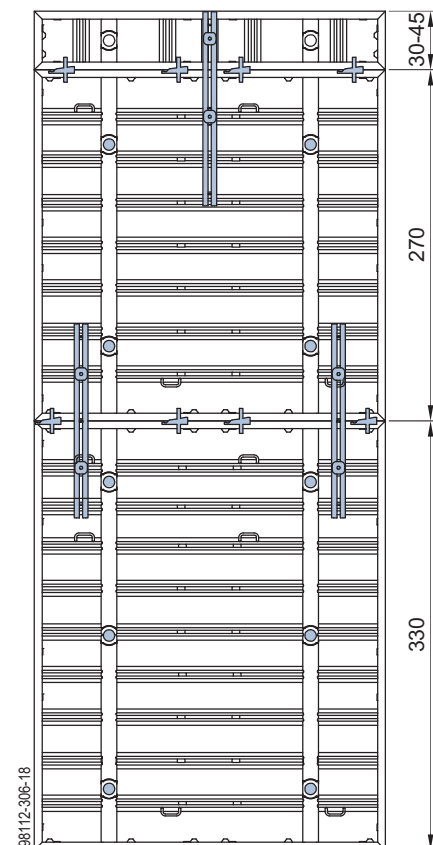Formwork height: 495 and 510 cm**Formwork height: 600 cm****Formwork height: 515, 520, 525, 540 and 555 cm****Formwork height: 630 and 645 cm**

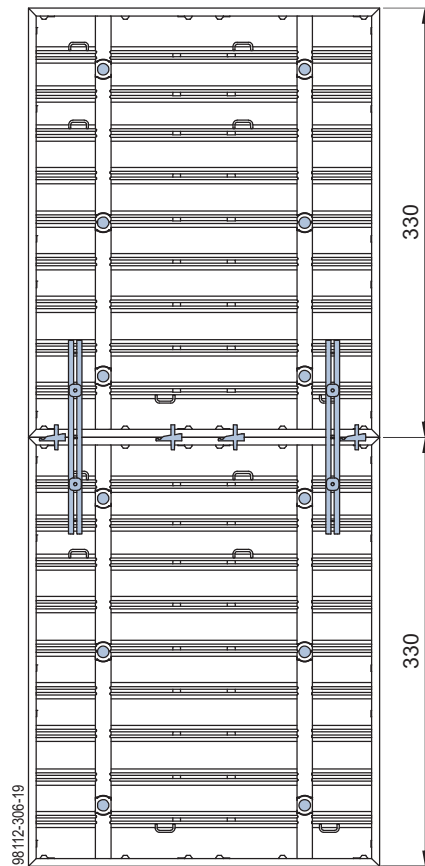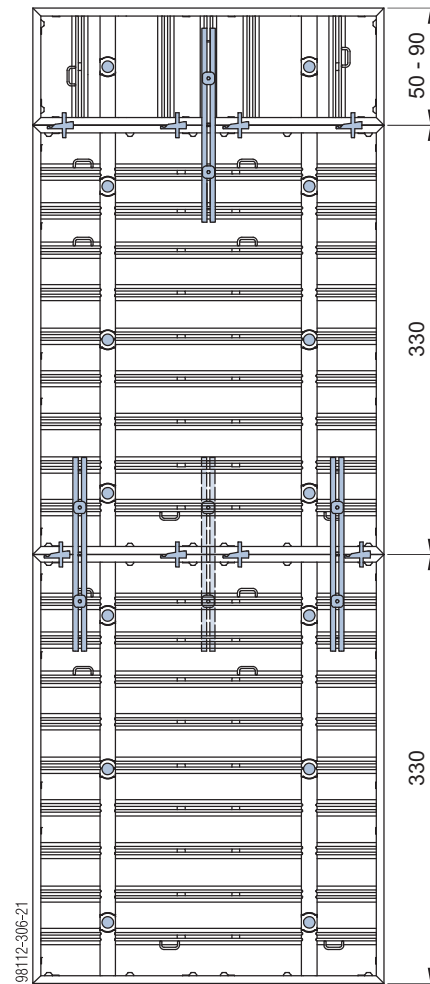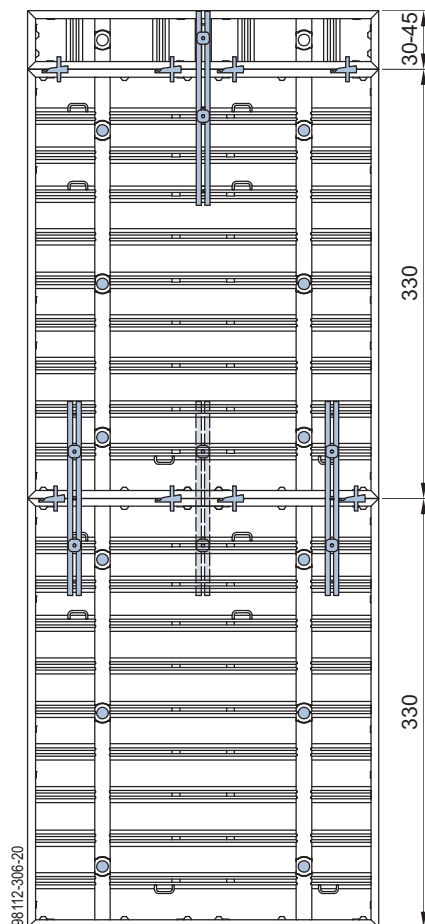Formwork height: 660 cm**Formwork height: 710, 715, 720, 735 and 750 cm****Formwork height: 690 and 705 cm**

The third universal waling is needed only if intermediate platforms are to be used.

The third universal waling is needed only if intermediate platforms are to be used.

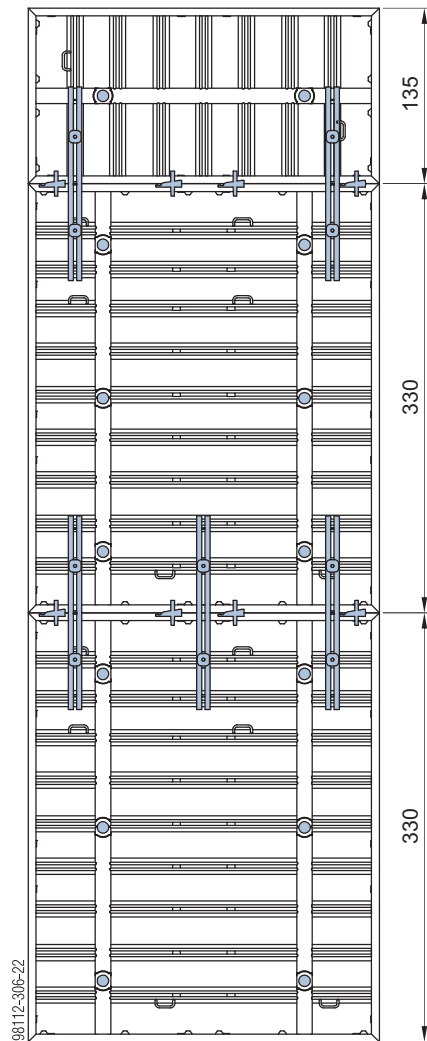
Formwork height: 795 cm

with Framax aligning clamp


Number of Framax aligning clamps needed at each vertically stacked panel joint

| Width of upright panels | Framax aligning clamp |
|-------------------------|-----------------------|
| 0.30 - 0.55m | 1 |
| 0.60 - 1.35m | 2 |
| 2.70m | See graphics |


Formwork height: 385, 390, 405, 420 and 465 cm

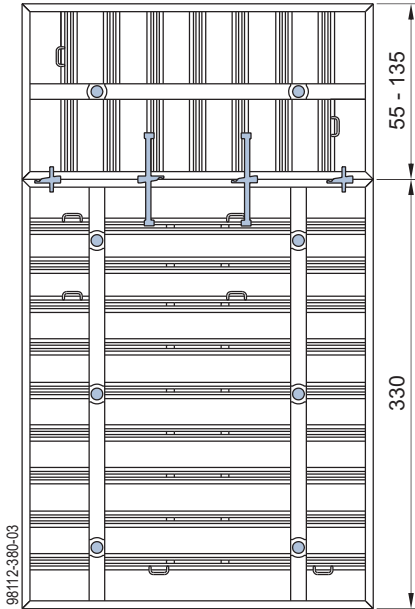


Formwork height: 600 cm

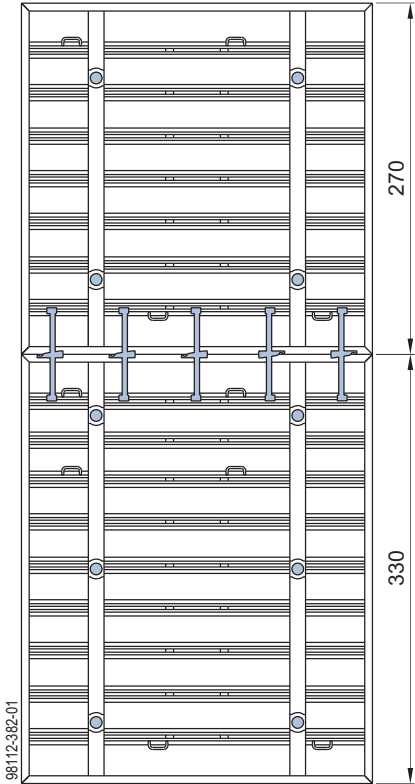


Formwork height: 520, 525, 540 and 555 cm

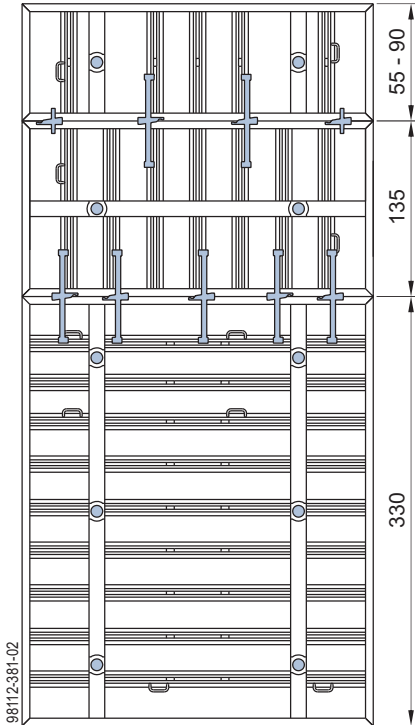

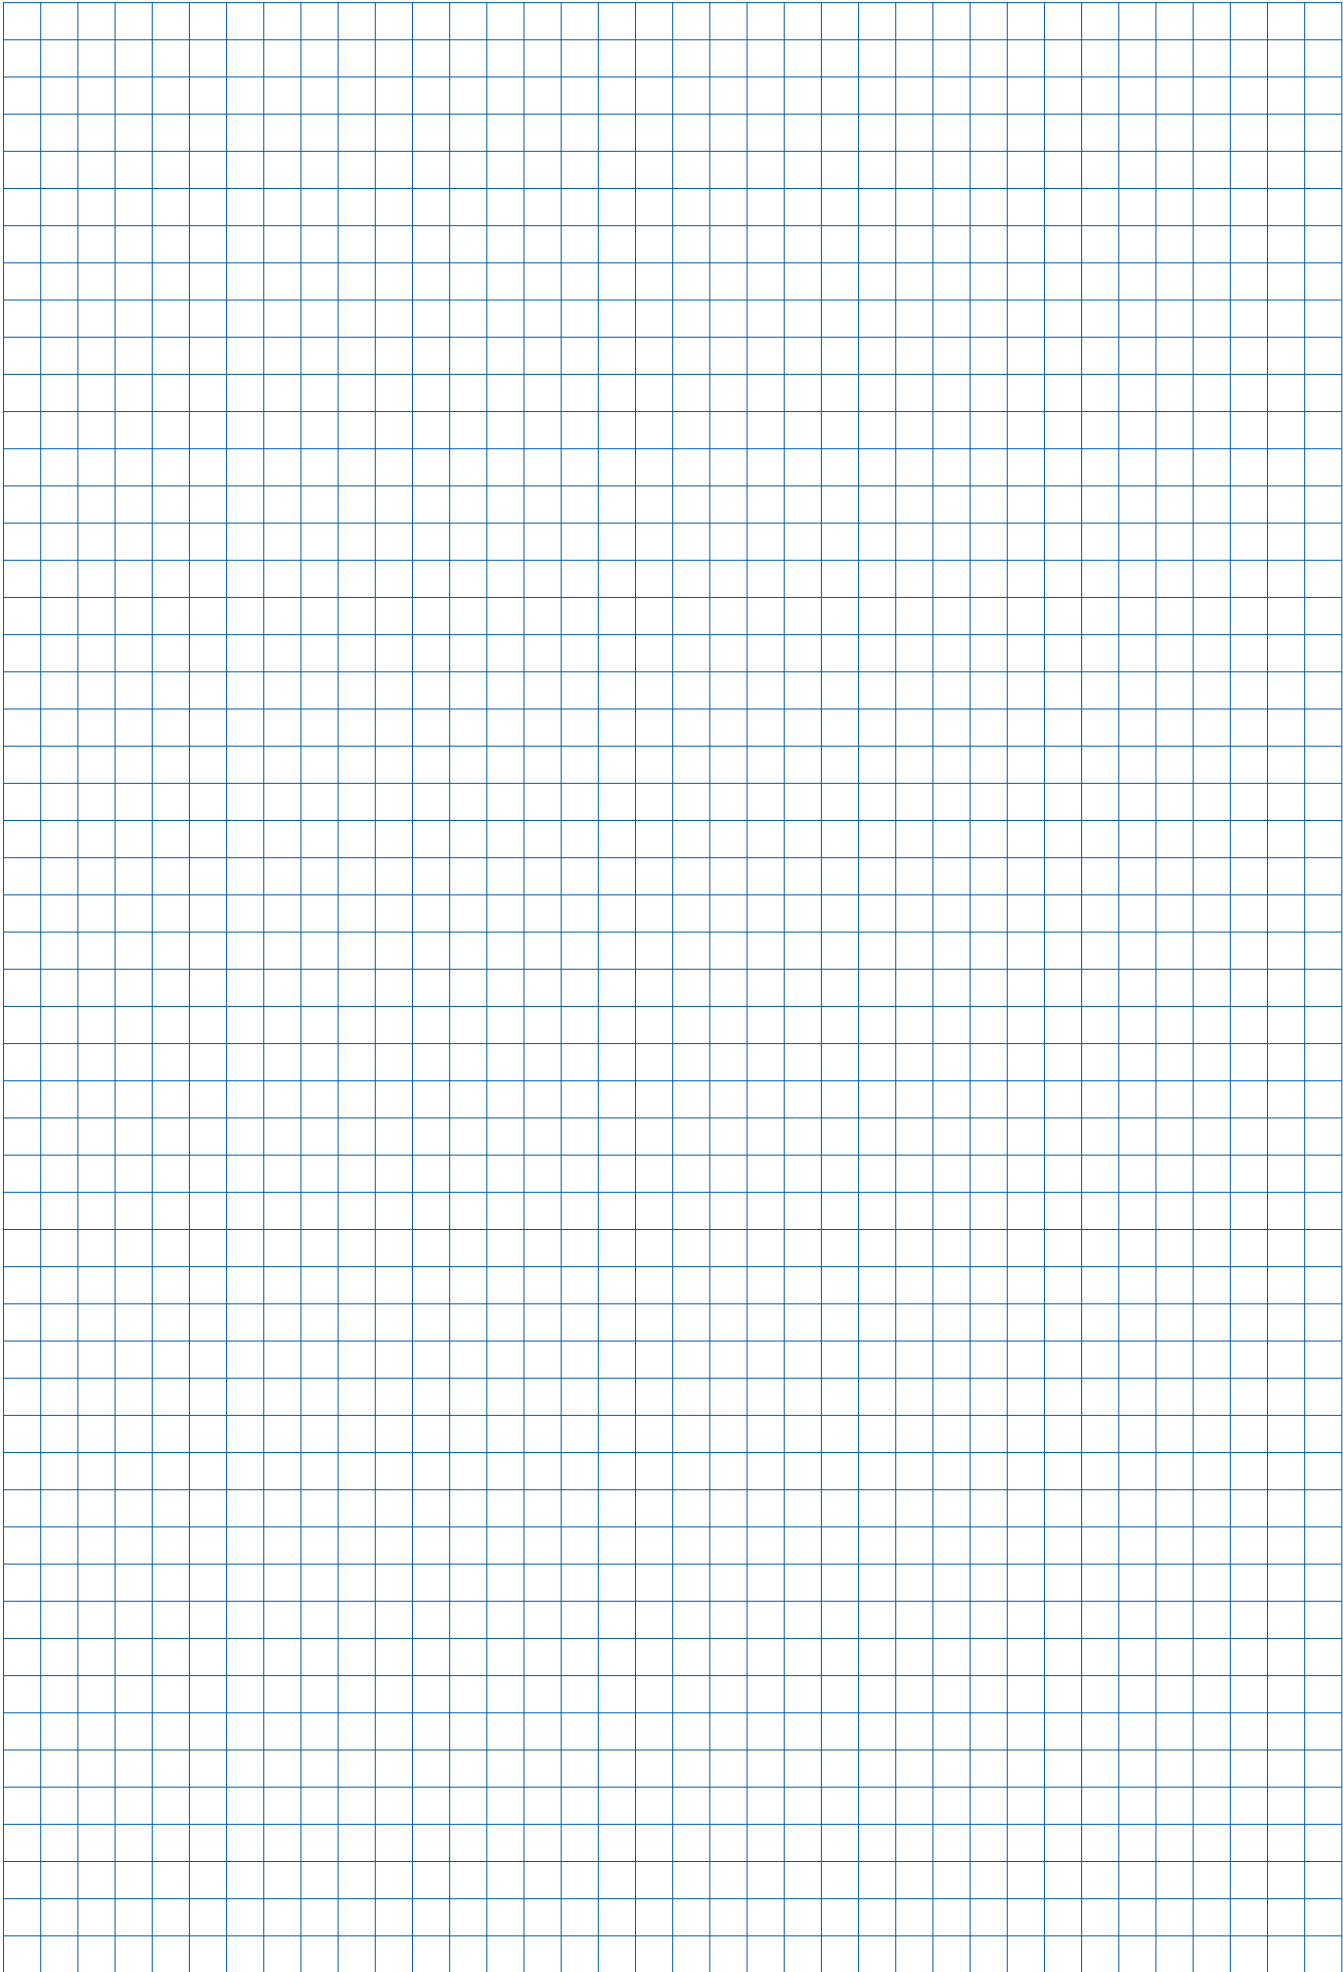

Tie rod system Framax Xlife plus

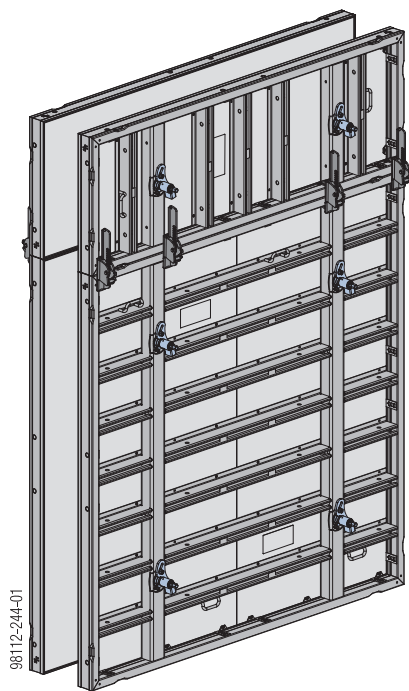

Tie rod system Framax Xlife plus 20.0:

- can be operated from one side
- for wall thicknesses from 15 cm to 40 cm
- no lost jacket tubes


Basic rule:

- fit one form tie in each anchoring sleeve.

For exceptions, see the sections headed [Framax head anchor 15-40cm](#), [90 degree corners](#) and [Acute & obtuse-angled corners](#).

Note:

Seal off any unneeded anchoring sleeves with the **Framax Xlife plus frame hole plug 32mm NG**.

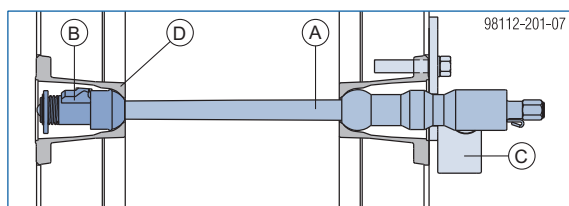

- A** Framax Xlife plus form tie 20.0
- B** Framax Xlife plus form-tie nut I 20.0
- C** Framax Xlife plus distance protector NG
- D** Anchoring sleeve inside the framed formwork panel

| | Wall thicknesses in 0.5 cm increments |
|-----------------------------------------|------------------------------------------|
| Framax Xlife plus form tie 20.0 15-30cm | 15 to 30 cm |
| Framax Xlife plus form tie 20.0 25-40cm | 25 to 40 cm |

Framax Xlife plus form tie 20.0:

Permitted load-bearing capacity: 152 kN



The **Framax Xlife plus ratchet 3/4" SW24** or **Framax Xlife plus ratchet 1/2" SW24 L** can be used for low-noise releasing and tightening of all anchoring components.



WARNING


Sensitive rod steel!

- Never weld or heat tie rods.
- Tie rods that are damaged or have been weakened by corrosion or wear must be withdrawn from use.

Inclination of panels and mismatch between panels

Thanks to their large anchoring sleeves, the panels can be inclined on one or both sides, and be mismatched.

Close-up of the Framax Xlife plus form-tie nut I 20.0

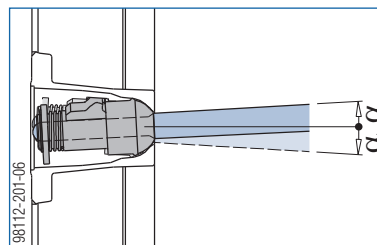

α ...max. 4°

| Conical on one side max. 4° | Conical on both sides max. 2 x 4° | Mismatch between panels max. 1.0 cm per 15 cm of wall thickness |
|--------------------------------|--------------------------------------|-----------------------------------------------------------------------|
| 98112-245-01 | 98112-245-02 | 98112-245-03 |


Note:

Secure inclined panels against uplift.

Adjusting to the wall thickness

Setting the form tie

- Remove the spring clip.
- Push the ball pin away from the stop cylinder.

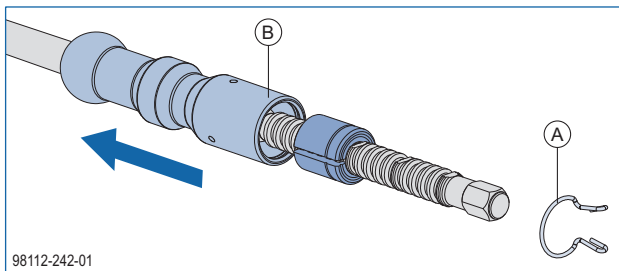


- A** Spring clip
B Ball pin




Turning the ball pin makes it easier to push it away.

- Open the stop cylinder and position it.

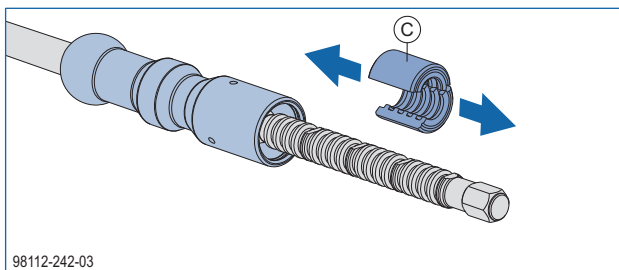

- C** Stop cylinder


- Push the ball pin back over the stop cylinder.
- Secure the ball pin with the spring clip.

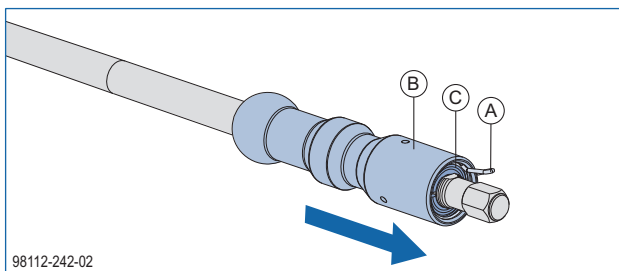

- A** Spring clip
B Ball pin
C Stop cylinder

Wall thicknesses of between 15.0 cm and 40.0 cm, in 1 cm increments


Standard position of the stop cylinder

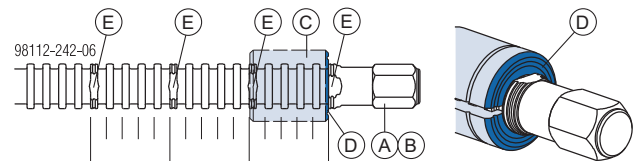

| | | | | |
|----------|------|------|------|------|
| A | 15.0 | 20.0 | 25.0 | 30.0 |
| B | 25.0 | 30.0 | 35.0 | 40.0 |

- A** Framax Xlife plus form tie 15-30cm
B Framax Xlife plus form tie 25-40cm
C Stop cylinder
D Coloured mark and marking groove
E Wall thickness indicator

Example: Wall thickness = 22.0 cm

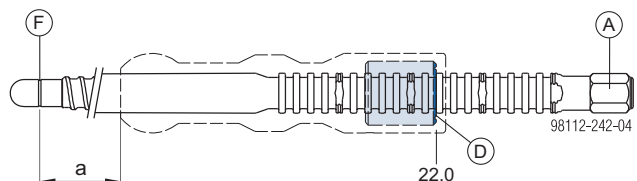


a ... 32.0 cm (wall thickness + 10.0 cm)

- A** Framax Xlife plus form tie 15-30cm
D Coloured mark and marking groove
F Control marking on the tie rod

Wall thicknesses of between 15.5 cm and 40.5 cm, in 1 cm increments


Stop cylinder, turned 180°

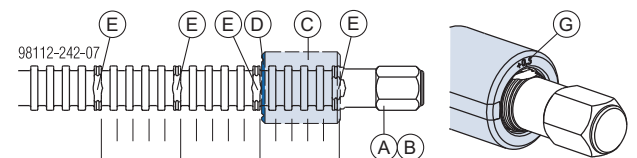

| | | | | |
|----------|------|------|------|------|
| A | 15.5 | 20.5 | 25.5 | 30.5 |
| B | 25.5 | 30.5 | 35.5 | 40.5 |

- A** Framax Xlife plus form tie 15-30cm
B Framax Xlife plus form tie 25-40cm
C Stop cylinder
D Coloured mark and marking groove
E Wall thickness indicator
G '+0.5' marking on the stop cylinder

Example: Wall thickness = 36.5 cm

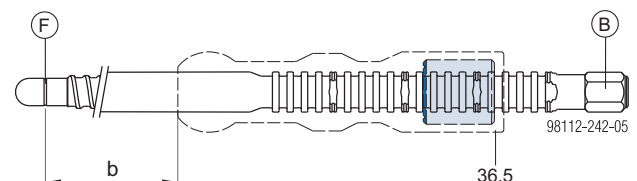


b ... 46.5 cm (wall thickness + 10.0 cm)

- B** Framax Xlife plus form tie 25-40cm
F Control marking on the tie rod

Securing the distance

The Framax Xlife plus form ties do not need any jacket tubes. For this reason, at least the upper form-tie points must be fitted with distance protectors for pressure bracing.

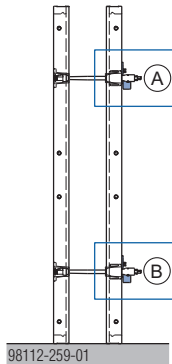

A Framax Xlife plus distance protector NG **required**

B Framax Xlife plus distance protector NG optional

Tying the panels




NOTICE

Before each use, spray the concrete-contacting part of the form tie with release agent! This ensures subsequent detachment from the concrete.

1st formwork half (e.g. holding formwork)

- Position the form-tie nut into the anchoring sleeve of the framed formwork panel.

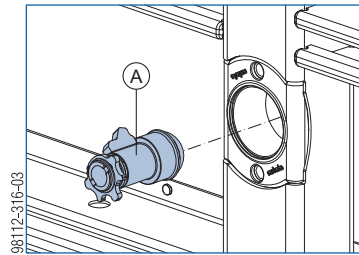



The hook of the form-tie nut engages in the recess of the anchoring sleeve.

- Push the centring disc in and at the same time turn it through 180°.

Position of the centring disc:

can be installed and removed

fixed in place

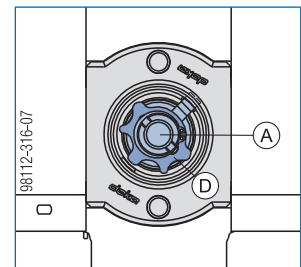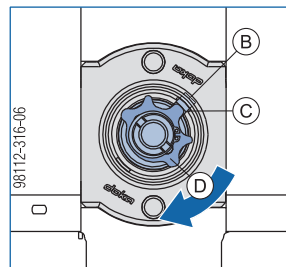

A Framax Xlife plus form-tie nut I 20.0

B Hook


C Recess

D Centring disc

Centring disc engages. Form-tie nut is fixed in place.


2nd formwork half (e.g. opposing formwork)

- Set up the opposing formwork.
- Mount the distance protector at the form-tie point (do not tighten the screw yet), and tilt it to the left.

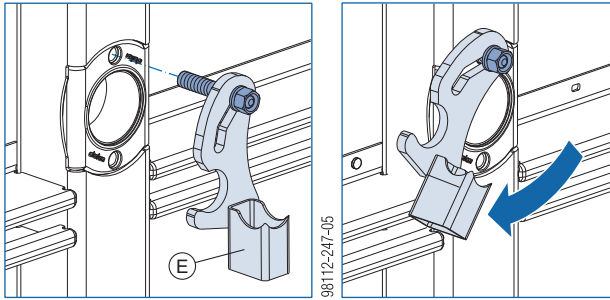

E Framax Xlife plus distance protector NG

- Screw in the form tie with the Framax Xlife plus ratchet until it is fully engaged and tighten it firmly. Tightening torque: **max. 200 Nm**

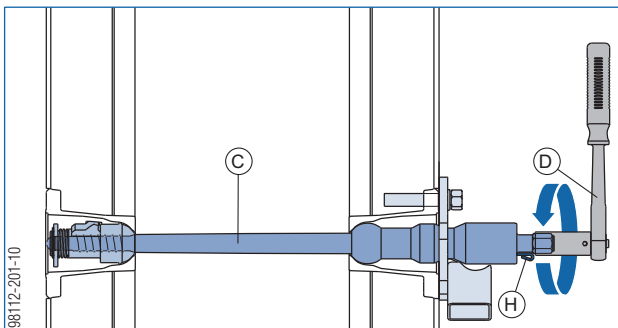

C Framax Xlife plus form tie 20.0


D Framax Xlife plus ratchet 1/2" SW24 L

H Spring clip



Check that the spring clip is installed!

- Pivot the distance protector over the form tie and tighten the screw (width across flats 24). Tightening torque: **max. 80 Nm**

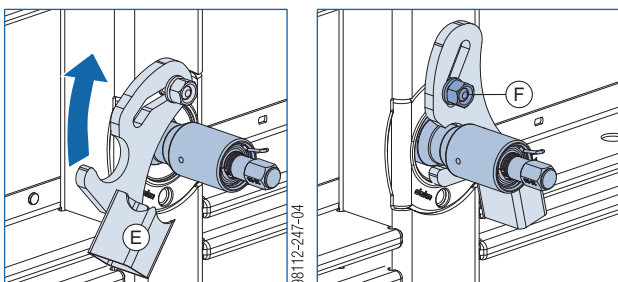

E Framax Xlife plus distance protector NG


F Screw (width across flats 24)

Removing the form ties



Loosening the form ties sooner rather than later after pouring the concrete makes them easier to remove at a later time.

- Disengage the distance protector (slacken the screw, width across flats 24) and pivot it clear.
- Unscrew the Framax Xlife plus form tie with the Framax Xlife plus ratchet or an impact wrench.

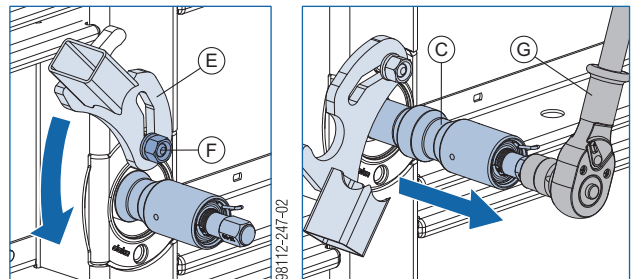


C Framax Xlife plus form tie 20.0

E Framax Xlife plus distance protector NG

F Screw (width across flats 24)

G Framax Xlife plus ratchet 3/4" SW24


- Temporarily store the Framax Xlife plus form tie in the distance protector.

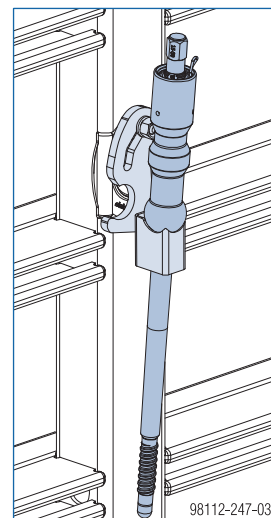

Removing form-tie nut

For example if the panel of the holding formwork is to be used as opposing formwork for the next pouring section.


- Push the centring disc of the form-tie nut in and at the same time turn it through 180°.

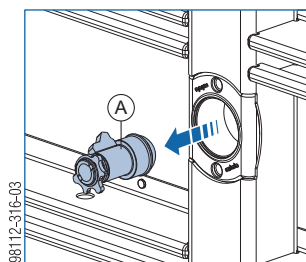

A Framax Xlife plus form-tie nut I 20.0

The form-tie nut can be removed.

- Insert the parking bolt into the hole in the function profile.

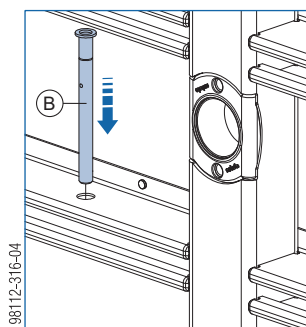


B Framax Xlife plus parking bolt



If the parking bolt is used on its own (without form-tie nut), secure it in the top insertion position with a spring cotter.

- Push the form-tie nut on to the parking bolt from below and secure it with a spring cotter.

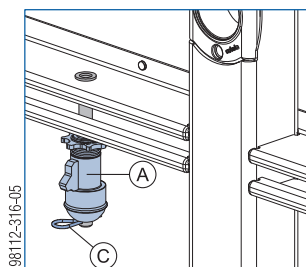

A Framax Xlife plus form-tie nut I 20.0


C Spring cotter 5mm

Cleaning and care of your equipment


- When cleaning the formwork, always remove any dried concrete residues from the form-tie sleeves of the opposing formwork.

Form-tie points for fair-faced concrete quality

- Attach the Framax Xlife plus fair-faced concr. cone 87mm (with built-in magnets) to the anchoring sleeves of the panels.
- On the side of the holding formwork (form-tie nut), seal the fair-faced concrete cone with a sealing disc (self-adhesive).

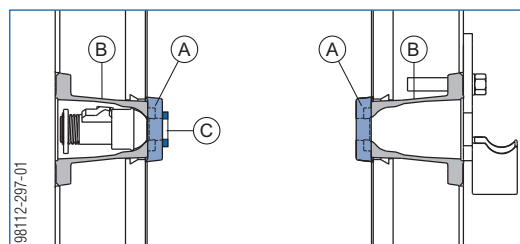

Close-up

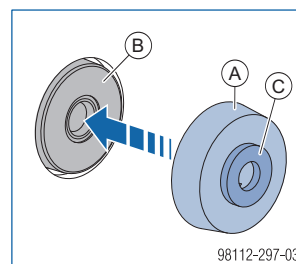


A Framax Xlife plus fair-faced concr. cone 87mm

B Anchoring sleeve inside the Framax Xlife plus panel

C Sealing disc 20/43 20.0/26.5

- Install the form tie and the distance protector (see the section headed [Tying the panels](#)).

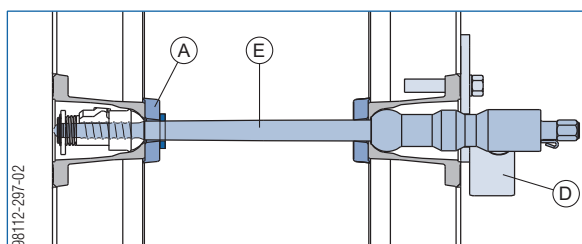

A Framax Xlife plus fair-faced concr. cone 87mm

D Framax Xlife plus distance protector NG


E Framax Xlife plus form tie 20.0

Form-tie points without form tie

In combination with the Screw sleeve 20.0, the Framax Xlife plus fair-faced concrete cone can also be used without a form tie.

This keeps the tie-hole pattern in the fair-faced concrete uniform, even at points where a form tie cannot be inserted (e.g. corner area).

- Separate the parts of the Screw sleeve 20.0 and shorten threaded part max. 3 mm from collar.

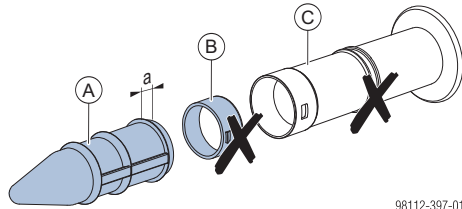


98112-397-01

a ... max. 3 mm

- A** Threaded part of the Screw sleeve 20.0 (shortened)
- B** Off-cut from the threaded part (not used)
- C** Insert part of the Screw sleeve 20.0 (not used)

- Insert the shortened threaded part of the screw sleeve into the Framax Xlife plus fair-faced concrete cone and slip this on to the anchoring sleeve.
- From the outside, secure with tie rod and super plate.

Example: Outside corner*

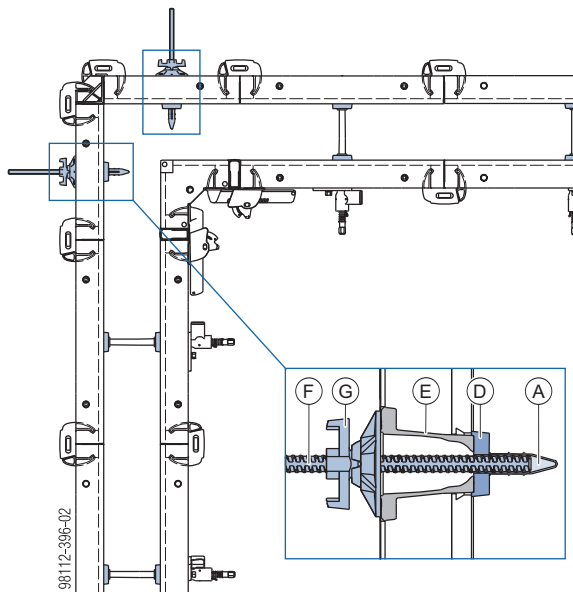

*) see the section headed [90 degree corners](#)

- A** Threaded part of the Screw sleeve 20.0
- D** Framax Xlife plus fair-faced concr. cone 87mm
- E** Anchoring sleeve inside the Framax Xlife plus panel
- F** Tie rod 20.0mm
- G** Super plate 20.0 B

The threaded part of the screw sleeve remains in the concrete.

Variant with the Doka tie rod system 20.0



Note:

For thicker walls and when special requirements apply for the tie point, use the Doka tie rod system 20.0.



For more information on making watertight form-tie points, see the 'Doka form ties for special requirements' User Information booklet.

The **Framax Xlife plus reducer I 20.0** is inserted into the anchoring sleeve in the Framax Xlife plus panel.

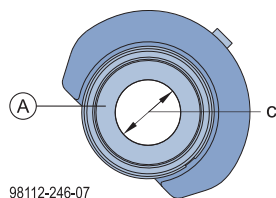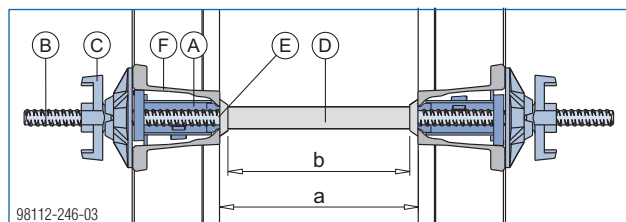

a ... wall thickness

b ... length of the plastic tube = a - 26.0 mm

c ... inside diameter 25.0 mm

A Framax Xlife plus reducer I 20.0

B Tie rod 20.0mm

C Super plate 20.0 B

D Plastic tube 26mm

E Universal cone 26/10mm

F Anchoring sleeve inside the Framax Xlife plus panel

Tie rod 20.0mm:

Permitted load-bearing capacity, allowing a 1.6 : 1 safety factor against failure: 220 kN


Permitted load-bearing capacity to DIN 18216: 160 kN

Exception:

75 kN/m² fresh-concrete pressure with 3.00 m panel height and Tie rod system 20.0

Installation:

- Position the reducer in the anchoring sleeve of the framed formwork panel.

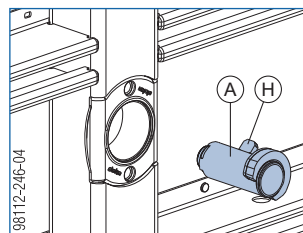



The hook (**H**) of the reducer (**A**) engages in the recess of the anchoring sleeve.

- Turn the lock of the reducer through 180 °. Reducer is locked in position.

Position of the lock:

can be installed and removed

fixed in place

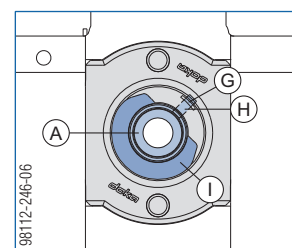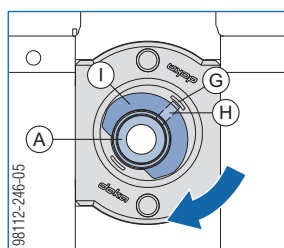

A Framax Xlife plus reducer I 20.0

G Recess

H Hook

I Lock

Variant with the Doka tie rod system 15.0

Note:

When the fresh-concrete pressure is reduced, the Framax Xlife plus reducer makes it possible to use the Tie rod system 15.0.

Exception:

60 kN/m² fresh-concrete pressure acting on whole area, to DIN 18218, observing the surface planeness tolerances to DIN 18202 Table 3 Line 7.

Exception:

55 kN/m² fresh-concrete pressure with 3.00 m panel height and Tie rod system 15.0

Framax head anchor 15-40cm

The Framax head anchor 15-40cm is used for tying Framax Xlife plus panels.

- The Framax head anchor 15-40cm holds the two sides of the formwork the required distance apart.
- For wall thicknesses from 15 to 40 cm.
- Tension bracing and compression bracing.
- Adjustable in a 5-mm grid.
- When using the Framax head anchor 15-40cm, no Framax Xlife plus form ties 20.0 are needed in the following positions:
 - on the top horizontal panel up to a panel width of 0.90m
 - in the top form-tie points of the Framax Xlife plus panel 3.30m (not vertically stacked)




NOTICE

2 Framax head anchors 15-40cm must be mounted for every 2.70m width of gang-form!


Permitted tensile force: 10 kN
Permitted compressive force: 10 kN

Assembly:

- Position the Framax head anchor 15-40cm directly above the form-tie points of the Framax Xlife plus panel.
- Telescope the Framax head anchor 15-40cm to the desired length 'a' (= wall thickness) and fix it in the relevant hole with a pin and spring cotter.

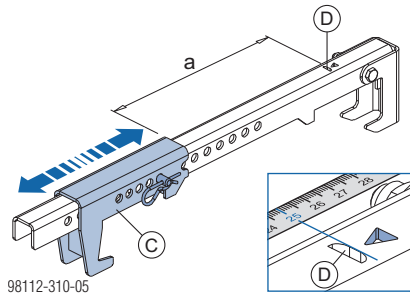

a ... 15 - 40 cm

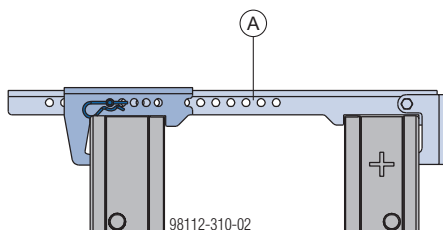


A Framax head anchor 15-40cm

C Adjusting unit


D Notch = measuring point

Example: panel of max. 0.90m vertically stacked

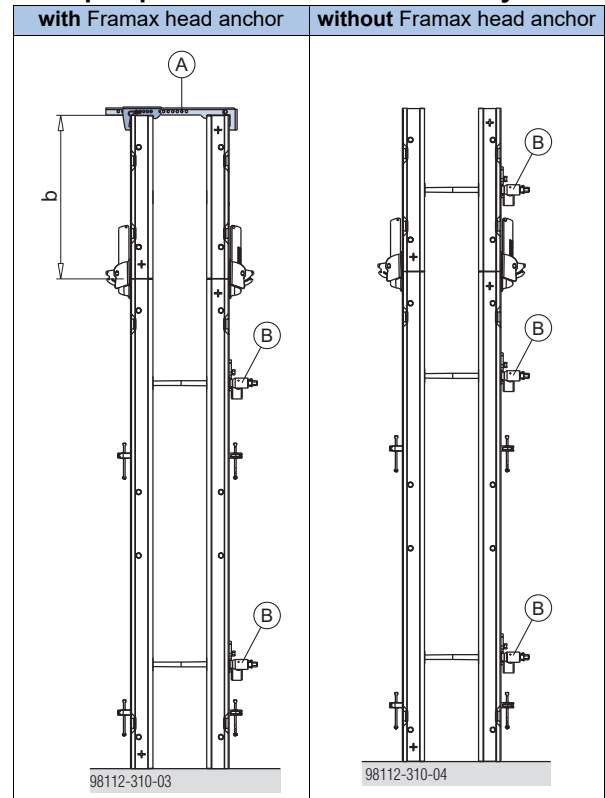

b ... max. 0.90 m

Example: Framax Xlife plus panel 3.30m

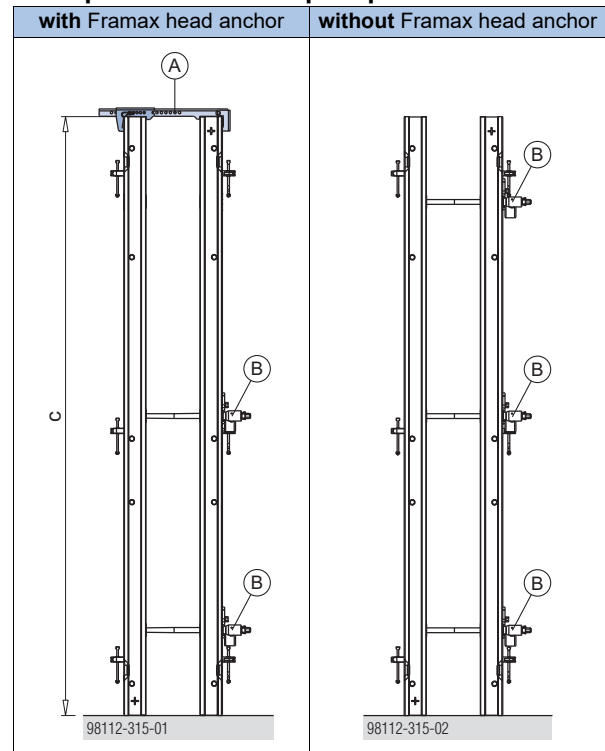

c ... 3.30 m

A Framax head anchor 15-40cm

B Tie rod system Framax Xlife plus 20.0

Closing form-tie holes

[Framax Xlife plus plug 38mm](#)



[Framax Xlife plus plug 24mm](#)



[Framax Xlife plus concrete cone 28/25 300mm](#)



[Framax Xlife plus fair-faced concr. plug 87mm](#)



... fire-resistant




... sound-insulating

Framax Xlife plus plug 38mm

Acts as a visible closure.

- Remove concrete burr (e.g. with Countersink concrete D12-35mm).
- Push a Framax Xlife plus plug into the form tie hole at each end.

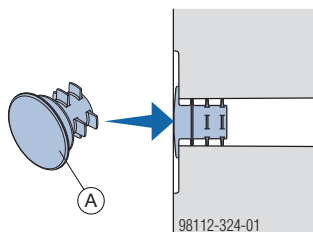


A Framax Xlife plus plug 38mm

Framax Xlife plus plug 24mm

Possibility for sealing concrete surfaces not subject to special requirements (not to be used in fair-faced concrete).

Sealing plug can be filled and smoothed flush.

- Push a Framax Xlife plus plug into the form tie hole at each end.
- Fill the form-tie points with mortar.

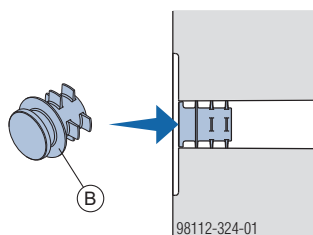

B Framax Xlife plus plug 24mm



Advantage when used as visible closure:

Not possible for third persons to remove the plug without using tools!


Framax Xlife plus concrete cone 28/25 300mm

Concrete cone for closing off form-tie points made using the Framax Xlife plus form tie 20.0 15-30cm.

Note:

On account of tolerances, after installation the concrete cone is not always flush with the concrete surface.

- Protruding: knock off the protruding length
 - Recessed: fill the recess with grout
- Coat the concrete cone with cement slurry or adhesive.
 - Use a hammer to tap the concrete cone into the form-tie hole from the bigger side.

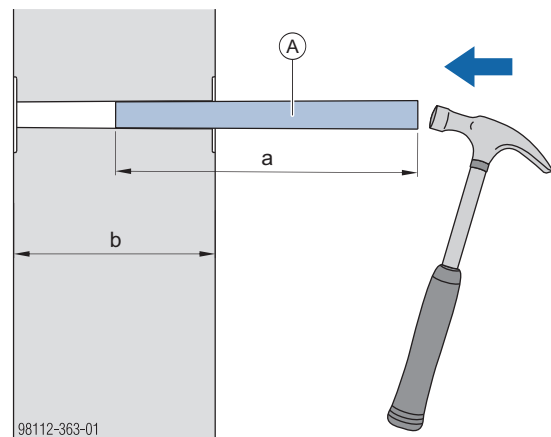

a ... 30 cm


b ... wall thickness (15 to 30 cm)

A Framax Xlife plus concrete cone 28/25 300mm



NOTICE

- Wear protective goggles to protect your eyes when knocking off the protruding length!
- Knock off the protruding end of the concrete with the hammer.

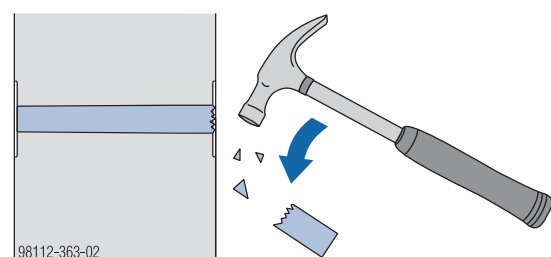


- Grout the form-tie points as necessary.

Framax Xlife plus fair-faced concr. plug 87mm


Acts as closure for form-tie points made with the fair-faced concrete cone 87mm for fair-faced concrete quality.

- Use the Framax Xlife plus cone spanner to remove the Framax Xlife plus fair-faced concr. cone 87mm.

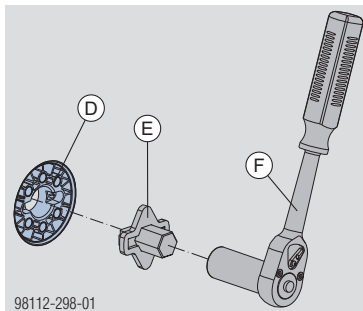

- D** Framax Xlife plus fair-faced concr. cone 87mm
- E** Framax Xlife plus cone spanner
- F** Framax Xlife plus ratchet 1/2" SW24 L



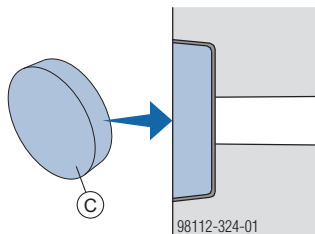







- Close the open form-tie point with a Framax Xlife plus fair-faced concr. plug 87mm.



- C** Framax Xlife plus fair-faced concr. plug 87mm

The concrete plug is glued into place with standard concrete adhesive.

Sealing form-tie holes

| | |
|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Framax Xlife plus screw plug 25mm |    |
| Framax Xlife plus sealing plug |  |
| Glueing in fibre concrete plugs |    |
| Expanding mortar |    |



... fire-resistant




... sound-insulating



... watertight (for compatibility with drinking water see the section headed [Drinking-water-compatible seal](#))

Framax Xlife plus screw plug 25mm

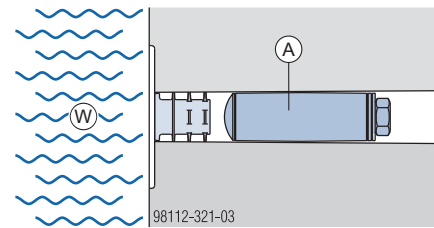

- A** Framax Xlife plus screw plug 25mm

W Water side



NOTICE

- Material temperature of the screw at time of installation at least +10 °C


- Clean the inside of the form-tie hole.
- Position the screw plug in the form-tie hole on the side with the larger opening.




A mark (piece of adhesive tape wrapped round the extension at the appropriate point) on the extension of the torque wrench is useful as a positioning aid.

- If the larger opening is on the water side, first preload the screw plug.
- Use a torque wrench to tighten the screw plug to a **tightening torque of 20 Nm**.
- If applicable, close the form-tie hole with a Framax Xlife plus plug.

Smaller opening on water side

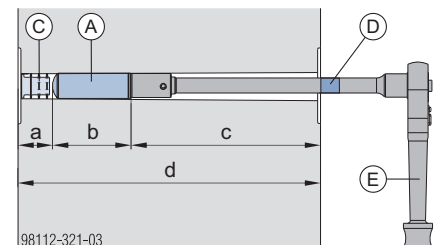

Bigger opening on water side

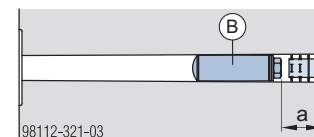


- a ...min. 30 mm on the water side
- b ... 79 mm
- c ... d - a - b
- d ... wall thickness

- A** Framax Xlife plus screw plug 25mm
- B** Framax Xlife plus screw plug 25mm (preloaded)
- C** Plug (optional)
- D** Mark (adhesive tape)
- E** Torque wrench with extension


Framax Xlife plus sealing plug

Sealing plug can be filled and smoothed flush.

Watertight (2 sealing plugs)

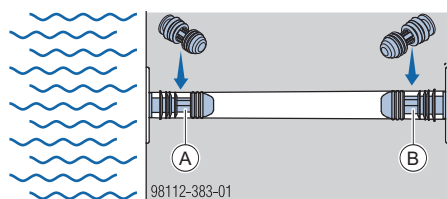

Stormwater-tight (1 sealing plug)

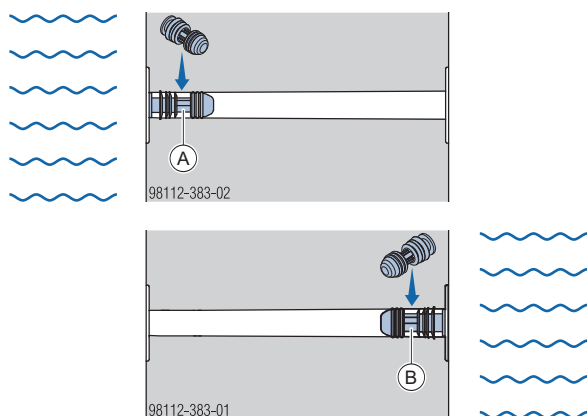


A Framax Xlife plus sealing plug 25mm (yellow)

B Framax Xlife plus sealing plug 28mm (blue)

Installation:


- Clean the inside of the form-tie hole.
- Use a hammer to tap the sealing plugs flush into the form-tie hole (smaller opening: yellow sealing plug, larger opening: blue sealing plug).

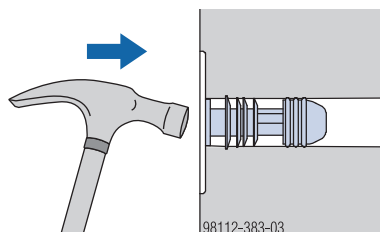

If necessary, use a tie rod to tap the sealing plug farther into the hole.

- Grout the form-tie points.

Glueing in fibre concrete plugs

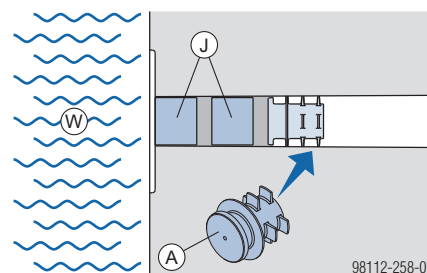

A Framax Xlife plus plug 24mm with hole


J Fibre concrete plug D24 21mm

W Water side

Note:

Use **Framax Xlife plus plugs 24mm with hole**! Air escapes through the hole in the plug as the adhesive is compressed.

- Clean the inside of the form-tie hole.
- Use a tie rod to push the Framax Xlife plus plug 24mm with hole approximately 6 cm into the form-tie hole.
- From the plug, fill the form-tie hole approx. 3 cm deep with epoxy-resin adhesive.
- Push the first fibre concrete plug into the adhesive and compress the adhesive.

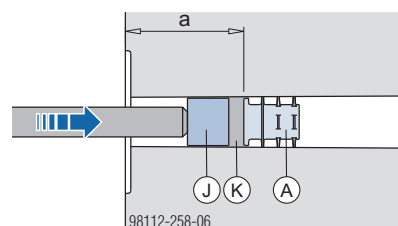

a ... approx. 6 cm

A Framax Xlife plus plug 24mm with hole

J Fibre concrete plug D24 21mm

K Epoxy-resin adhesive

- Inject enough epoxy-resin adhesive to fill the form-tie hole of the fibre concrete plug to 5 mm below the surface of the concrete.
- Push the second fibre concrete plug into the adhesive and compress the adhesive.
- Use a spatula to remove the excess adhesive.

Product recommendation

Mapefix EP epoxy-resin adhesive

- Epoxy-resin-based 2-component adhesive for structural loads.
- The surface must be free of dust and oil.
- Application temperature: min. +5 °C

Read and observe the manufacturer's technical data sheet!




98112-500-01

KarPox adhesive

- Epoxy-resin-based 2-component adhesive for structural loads.
- The surface must be free of dust and oil.
- Application temperature: min. +5 °C


Read and observe the manufacturer's technical data sheet!

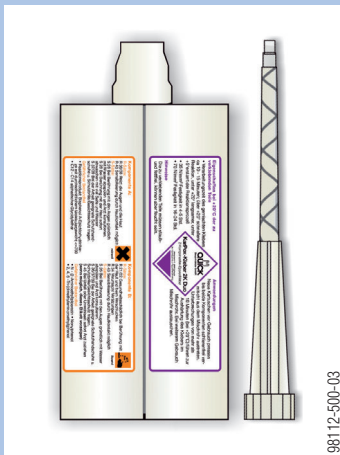

98112-500-03

KarPox double cartridge 2K Duo 2x310ml

Expanding mortar

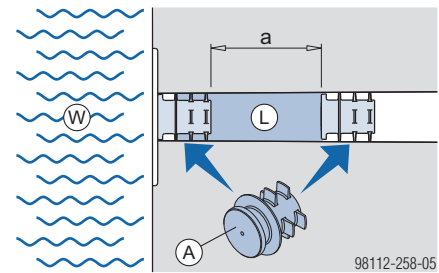

98112-258-05

a ... min. 5 cm

A Framax Xlife plus plug 24mm with hole


L Expanding mortar EM 0-0.4 E1 25kg

W Water side

Note:

Use **Framax Xlife plus plugs 24mm with hole**! Air escapes through the hole in the plug as the adhesive is compressed.

- Clean the inside of the form-tie hole.
- Use a tie rod to push the Framax Xlife plus plug 24mm with hole at least 8 cm into the form-tie hole.

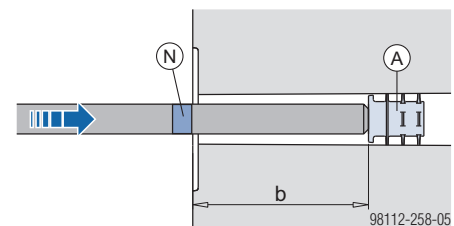


98112-258-05

b ... min. 8 cm

A Framax Xlife plus plug 24mm with hole

N Mark (adhesive tape)

- Inject enough expanding mortar to fill the form-tie hole of the plug to 5 mm below the surface of the concrete.

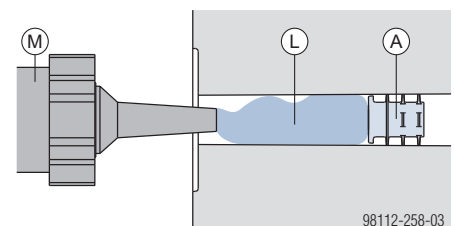

98112-258-03

A Framax Xlife plus plug 24mm with hole

L Expanding mortar EM 0-0.4 E1 25kg

M Backfilling syringe

- Press the second Framax Xlife plus plug 24mm with hole into the form-tie hole until expanding mortar is squeezed out of the hole in the plug. Expanding mortar is compacted (thickness in compacted state min. 5 cm).


Drinking-water-compatible seal

Smooth an epoxy-resin adhesive with approval for drinking-water applications over the **sealed form-tie hole *)** to obtain a surface that is drinking-water-compatible (drinking-water tanks, for example).



*) usable in all sealing situations shown here

Example, Framax Xlife plus screw plug 25mm:

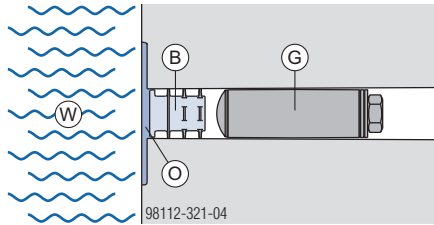

B Framax Xlife plus plug 24mm


G Framax Xlife plus screw plug 25mm

O Epoxy-resin adhesive with approval for drinking-water applications

W Water side (drinking water)

- On the water-wetted side, install the plug recessed at least 3 mm.
- Smooth the adhesive flush with the surface.

Length adjustment using closures

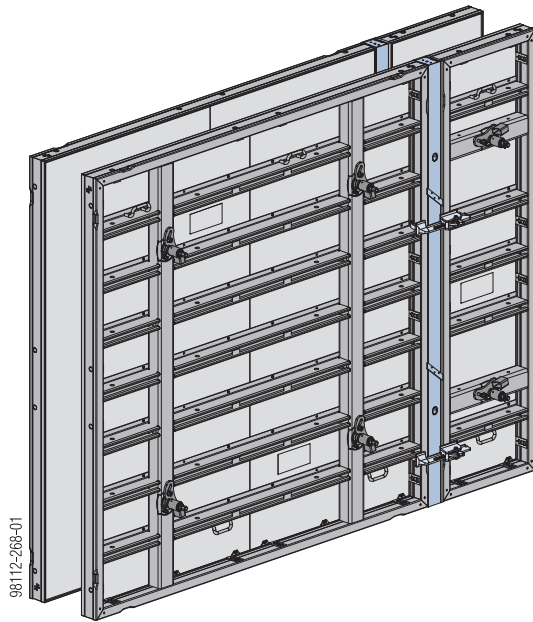


By combining the **Framax aluminium closures** (5 and 10 cm) and the **Framax fitting timbers** (2, 3, 5 and 10 cm) in various ways, closures can be made in 1 cm increments.

Example:


- Closure width = 12 cm
 - 1 Framax aluminium closure 10cm
 - 1 Framax fitting timber 2cm

Closures: 0 - 15 cm

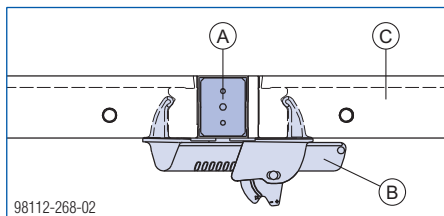

- A** Framax aluminium closure or Framax Xlife plus aluminium closure 3.00m / Framax fitting timber
- B** Framax multi function clamp
- C** Framax Xlife plus panel

Closures: 0 - 20 cm

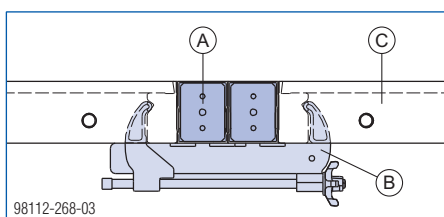

- A** Framax aluminium closure or Framax Xlife plus aluminium closure 3.00m / Framax fitting timber
- B** Framax adjustable clamp
- C** Framax Xlife plus panel



Note:

Fit the Framax adjustable clamp in the same position as the Framax multi function clamp

Framax adjustable clamp:

Permitted tensile force: 10.0 kN

Closures: 17 - 35 cm

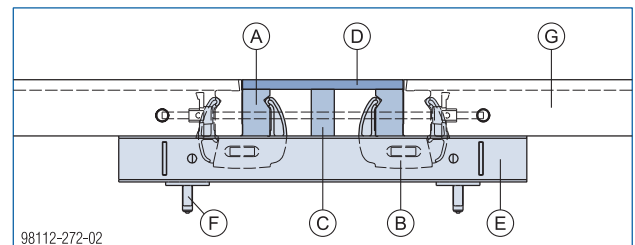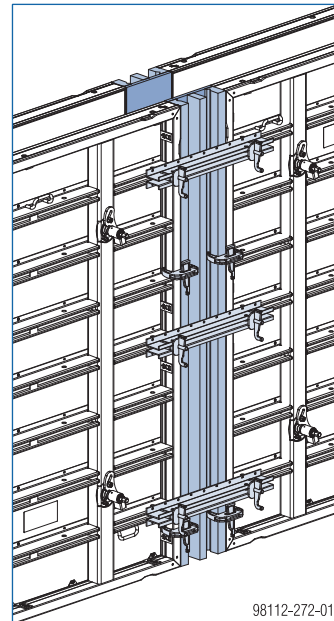

- A** Framax moulded timber 27mm (for 27mm formwork sheet) or Framax moulded timber 21mm (for 21mm formwork sheet) or Framax moulded timber 18mm (for 18mm formwork sheet)
- B** Framax quick acting clamp RU
- C** Squared timber
- D** Formwork sheet
- E** Framax universal waling
- F** Framax wedge clamp
- G** Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

Note:

A tension anchor can be made using a tie rod and Star grip nut 15.0 G.


Closure with non-tied closure panels

A non-tied closure can be made between two panels with a width of 2.70 m using closure panels.

Observe the following points:

- The closure panel does not need to be tied.
- **2 additional clamps** are needed at each inter-panel joint to the closure panel.
- The max. width of the closure panel depends on the panel height and must not be exceeded.

Pour height 2.70 m

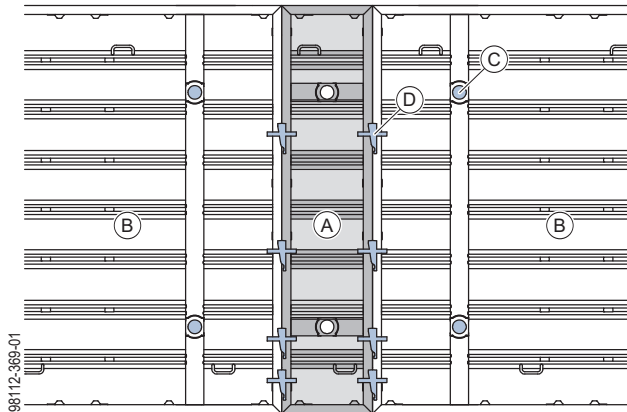


A Framax Xlife plus panel (max. width of 0.60m)

B Framax Xlife plus panel 2.70x2.70m

C Framax Xlife plus form tie 20.0

D Framax quick acting clamp RU

Pour height 3.00 m

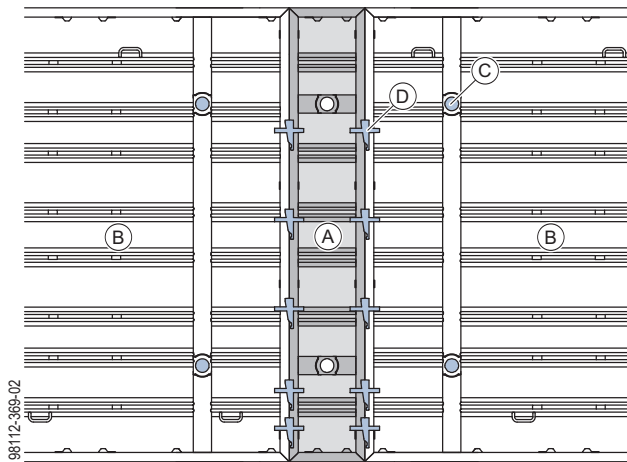


A Framax Xlife plus panel (max. width of 0.50m)

B Framax Xlife plus panel 2.70x3.00m

C Framax Xlife plus form tie 20.0

D Framax quick acting clamp RU

Pour height 3.30 m

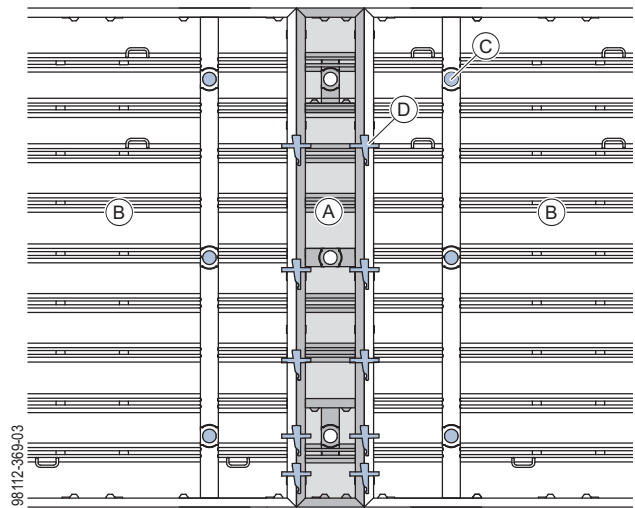


A Framax Xlife plus panel (max. width of 0.45m)

B Framax Xlife plus panel 2.70x3.30m

C Framax Xlife plus form tie 20.0

D Framax quick acting clamp RU

90 degree corners

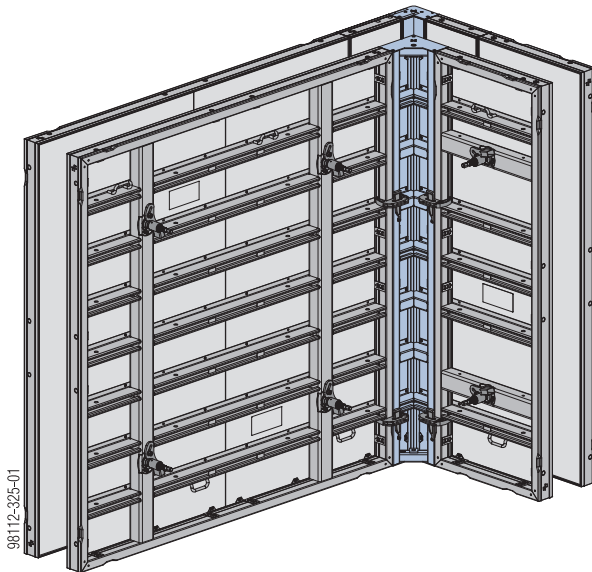


Note:

Seal off any unneeded anchoring sleeves with the **Framax Xlife plus frame hole plug 32mm NG**.

Inside formwork

Framax Xlife plus inside corner 30/30cm

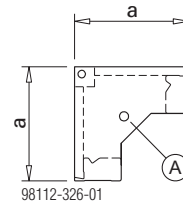

a ... 30 cm




The hole drilled in the inside corner enables a vertical stacking connection to be made using universal fixing bolts + super plates.

A Framax Xlife plus inside corner 30/30cm or
Framax Xlife inside corner

Outside formwork

Right-angled outside corners can be formed in any of the following ways:



- **Framax outside corner (A)**
- **Framax Xlife plus outs. corner 10/10cm (B)**
- **Framax Xlife universal panel (C)**

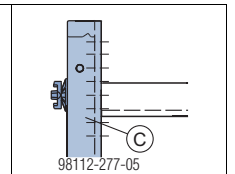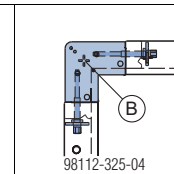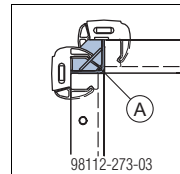

Note:

For details regarding extra inter-panel connections on outside corners (for increased tensile loads) see the section headed [Inter-panel connections for increased tensile loads](#).

Framax outside corner

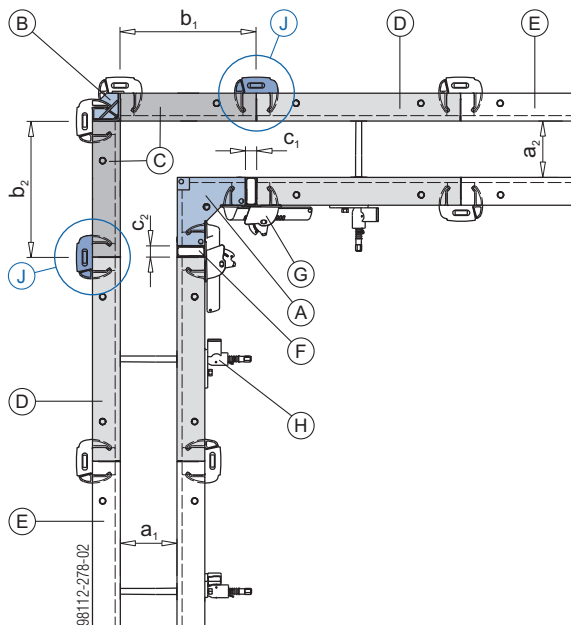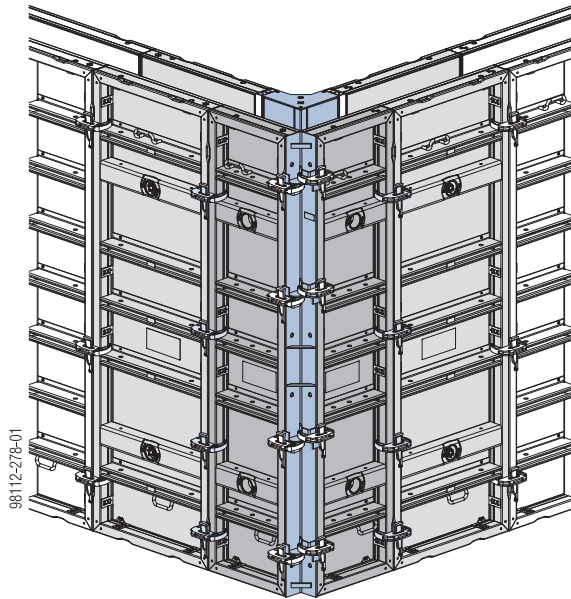

a_{1,2} ... wall thickness
b_{1,2} ... panel width
c_{1,2} ... closure width

A Framax Xlife plus inside corner 30/30cm or Framax Xlife inside corner

B Framax outside corner

C Framax Xlife plus panel 0.45m - 0.75m

D Framax Xlife plus panel (no 1.35m or 3.00m wide panel!)

E Framax Xlife plus panel

F Closure 0 - 15 cm (Framax aluminium closure / Framax fitting timber)

G Framax multi function clamp

H Tie rod system Framax Xlife plus 20.0

J Inter-panel connection (see the section headed [Inter-panel connection, corner gangform \(outside\) with adjoining Framax Xlife plus panel](#))

Width of the Framax Xlife plus panel in the outside corner

| Wall thickness (a) | Panel width (b) |
|--------------------|-----------------|
| 15 cm | 0.45m (45 cm) |
| >15 - 20 cm | 0.50m (50 cm) |
| >20 - 25 cm | 0.55m (55 cm) |
| >25 - 30 cm | 0.60m (60 cm) |
| >30 - 40 cm | 0.75m (75 cm) |

Closure width in the inside corner

Closure width **c** =
panel width **b** [cm] - 30 cm - wall thickness **a** [cm]

Example:

- Wall thickness = 35 cm
=> Panel width (b) = **90 cm (75 cm)**

Closure width = 75 cm - 90 cm - 35 cm = **10 cm**



When there is a **closure on both sides** of the inside corner, bracing can be achieved economically with the **universal corner waling**.

Inter-panel connections

| Connectors | |
|----------------------------------|--------------------------------------------|
| Quick acting clamp RU | Wedge bolt and tensioning wedge |

a ... wall thickness

A Framax outside corner

B Framax Xlife plus panel

C Quick acting clamp RU

D Framax wedge bolt RA 7.5

E Framax tensioning wedge R

Required number of connectors:

| Wall thickness | Height of outside corner | Quick acting clamp RU | Tensioning wedge + wedge bolt |
|----------------------|--------------------------|-----------------------|-------------------------------|
| up to 30 cm | 0.60m | 2 | — |
| | 1.35m | 4 | — |
| | 2.70m | 8 | — |
| | 3.00m | 10 | — |
| | 3.30m | 10 | — |
| > 30 and up to 40 cm | 0.60m | 2 | 2 |
| | 1.35m | — | 4 |
| | 2.70m | — | 8 |
| | 3.00m | — | 8 |
| | 3.30m | — | 10 |




NOTICE

Do not oil or grease wedged connections.




When striking the formwork, separate the gang-form at the Framax outside corner (remove the connectors on one side of the Framax outside corner).

Framax Xlife plus outs. corner 10/10cm

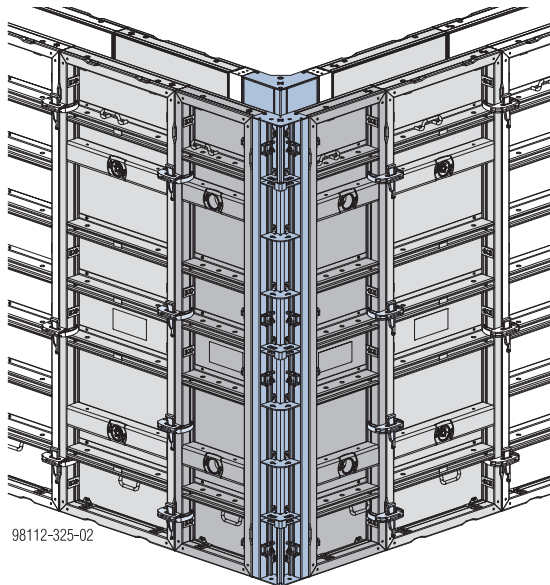

98112-325-02

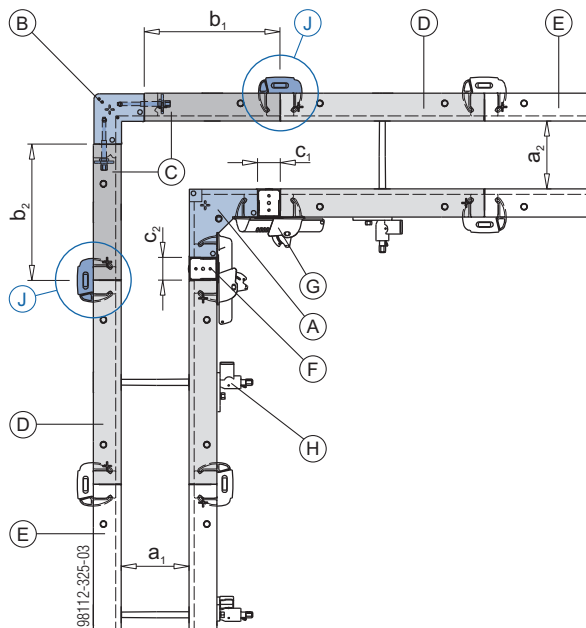

$a_{1,2}$... wall thickness

$b_{1,2}$... panel width

$c_{1,2}$... closure width

A Framax Xlife plus inside corner 30/30cm or Framax Xlife inside corner

B Framax Xlife plus outs. corner 10/10cm

C Framax Xlife plus panel **0.45m - 0.75m**

D Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

E Framax Xlife plus panel

F Closure **0 - 15 cm** (Framax aluminium closure / Framax fitting timber)

G Framax multi function clamp

H Tie rod system Framax Xlife plus 20.0

J Inter-panel connection (see the section headed [Inter-panel connection, corner gangform \(outside\) with adjoining Framax Xlife plus panel](#))

Width of the Framax Xlife plus panel in the outside corner

| Wall thickness (a) | Panel width (b) |
|--------------------|-----------------|
| 15 - 25 cm | 0.45m (45 cm) |
| >25 - 30 cm | 0.50m (50 cm) |
| >30 - 35 cm | 0.55m (55 cm) |
| >35 - 40 cm | 0.60m (60 cm) |

Closure width in the inside corner

Closure width **c** =
panel width **b** [cm] - 20 cm - wall thickness **a** [cm]

Example:

- Wall thickness = 35 cm
=> Panel width (b) = **0.6m (60 cm)**


Closure width = 60 cm - 20 cm - 35 cm = **5 cm**



When there is a **closure on both sides** of the inside corner, bracing can be achieved economically with the **universal corner waling**.


Inter-panel connections

Clamping bolt 15.0 in parking position:

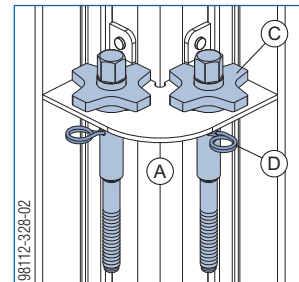

98112-328-02

Clamping bolt 15.0 installed:

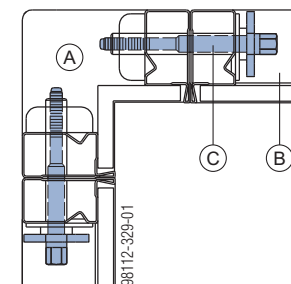

98112-329-01

A Framax Xlife plus outs. corner 10/10cm

B Framax Xlife plus panel

C Clamping bolt 15.0

D Spring cotter D3 with twin lug

Number of connectors:

One clamping bolt 15.0 must be screwed into each cross hole of the outside corner.

Clamping bolt 15.0:


Permitted tensile force: 25.0 kN

Permitted shear force: 25.0 kN

Assembly


The outside corner is assembled on the flat, at ground level.

- Lay the Framax Xlife plus panel and the Framax Xlife plus outside corner 10/10cm on squared timbers 10/10cm.

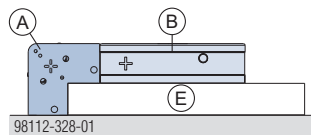

- A** Framax Xlife plus outs. corner 10/10cm
- B** Framax Xlife plus panel
- E** Squared timber 10/10cm

- Remove the clamping bolts from the parking position, insert them from the panel side and screw them into the cross holes.

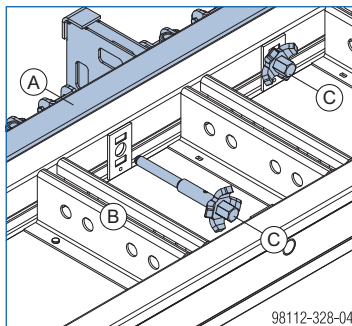

- A** Framax Xlife plus outs. corner 10/10cm
- B** Framax Xlife plus panel
- C** Clamping bolt 15.0

Tighten the clamping bolt with the Framax Xlife plus ratchet.




- Install the bottom clamping bolt and provisionally secure the outside corner to the panel with 2 quick acting clamps RU.

This makes the rest of the clamping bolts easier to install.

- Turn the gang-form over (180°), position the second squared timber (necessary for detaching the Framax lifting hook) and set down the gang-form.
- Crane lift the second Framax Xlife plus panel onto the outside corner.


- Join this panel to the outside corner in the same way.

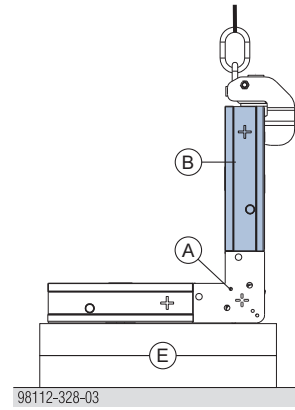

- A** Framax Xlife plus outs. corner 10/10cm
- B** Framax Xlife plus panel
- E** Squared timber 10/10 cm + squared timber 10/10 cm


Lifting by crane

Vertical repositioning of the Framax Xlife plus outside corner:

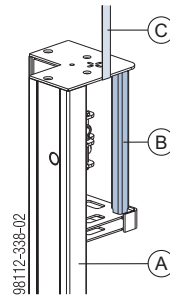

- A** Framax Xlife plus outs. corner 10/10cm
- B** Shaped tube
- C** Textile strap (site-provided)

Repositioning the corner gang-form:


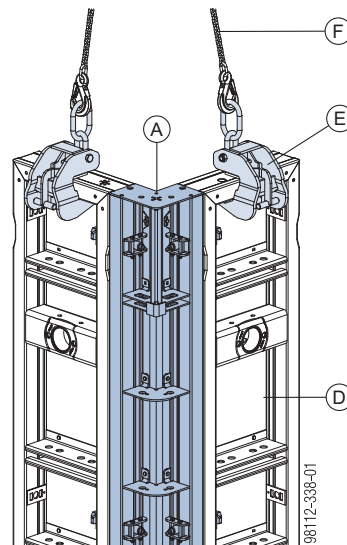


- A** Framax Xlife plus outs. corner 10/10cm
- D** Framax Xlife plus panel
- E** Framax lifting hook
- F** Two-part lifting chain



Follow the directions in the 'Framax lifting hook' Operating Instructions!

Framax Xlife universal panel

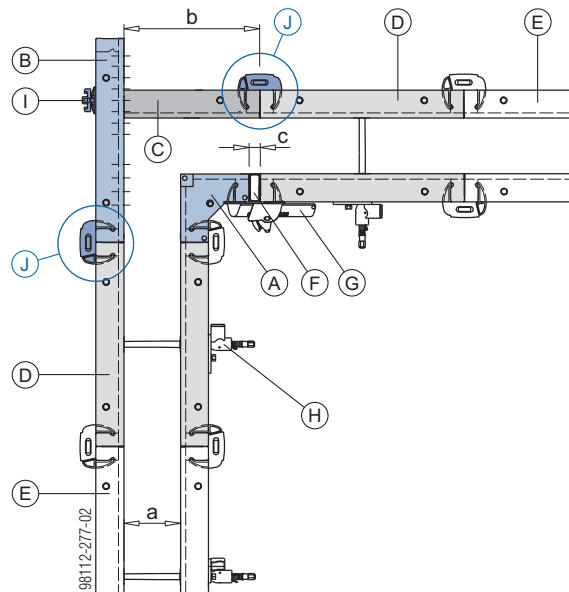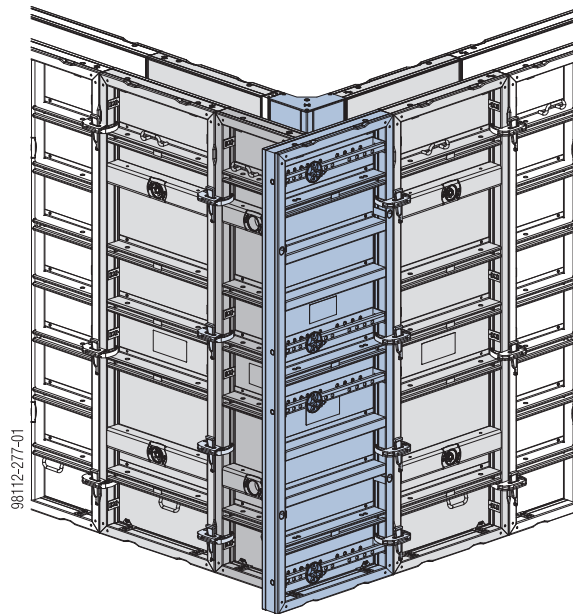

$a_{1,2}$... wall thickness

$b_{1,2}$... panel width

$c_{1,2}$... closure width

A Framax Xlife plus inside corner 30/30cm or Framax Xlife inside corner

B Framax Xlife universal panel 0.90m

C Framax Xlife plus panel **0.45m - 0.75m**

D Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

E Framax Xlife plus panel

F Closure **0 - 15 cm** (Framax aluminium closure / Framax fitting timber)

G Framax multi function clamp


H Tie rod system Framax Xlife plus 20.0

I Framax universal fixing bolt + Super plate 15.0

J Inter-panel connection (see the section headed [Inter-panel connection, corner gangform \(outside\) with adjoining Framax Xlife plus panel](#))

Note:

Different wall-thickness grids (5 and 6 cm) are possible by installing the 0.90 m wide universal panel upside down.

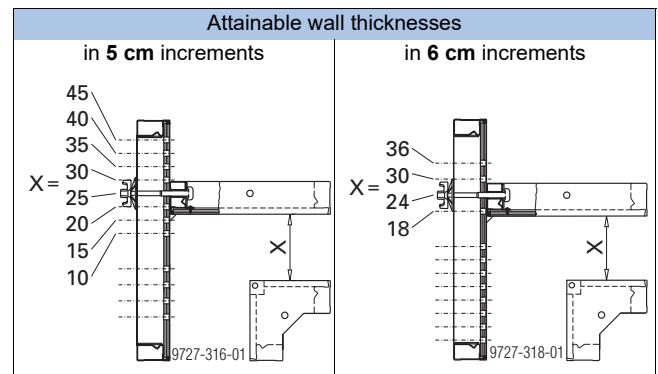

If the entire outside corner is raised and repositioned by crane, then no universal walings are needed for height-bracing the panels.

Note:

Seal off the unused holes in the formwork sheet of the Universal panels with **Framax plugs R 24.5**.

Width of the Framax Xlife plus panel in the outside corner

| Wall thickness (a) | Panel width (b) |
|--------------------|-----------------|
| 15 cm | 0.45m (45 cm) |
| >15 - 20 cm | 0.50m (50 cm) |
| >20 - 25 cm | 0.55m (55 cm) |
| >25 - 30 cm | 0.60m (60 cm) |
| >30 - 40 cm | 0.75m (75 cm) |

Closure width in the inside corner

Closure width c =
panel width b [cm] - 30 cm - wall thickness a [cm]

Example:

- Wall thickness = 35 cm
=> Panel width (b) = **90 cm (75 cm)**

Closure width = 75 cm - 90 cm - 35 cm = **10 cm**



When there is a **closure on both sides** of the inside corner, bracing can be achieved economically with the **universal corner waling**.







Inter-panel connections

Required numbers of universal fixing bolts + Super plates 15.0:

| | |
|-----------------------------------------|---|
| Framax Xlife universal panel 1.35m | 2 |
| Framax Xlife universal panel 2.70m | 4 |
| Framax Xlife plus universal panel 3.00m | 4 |
| Framax Xlife universal panel 3.30m | 5 |

Inter-panel connection, corner gangform (outside) with adjoining Framax Xlife plus panel

Wall thickness from 15 to 30 cm
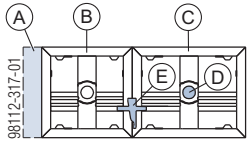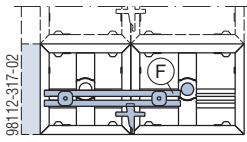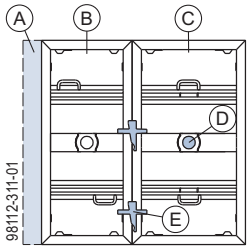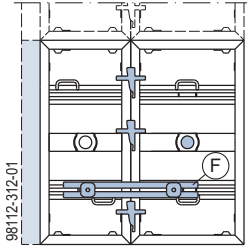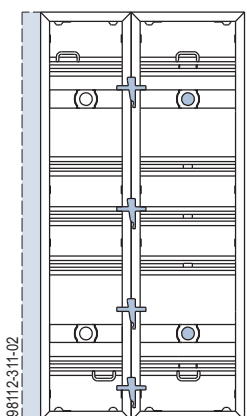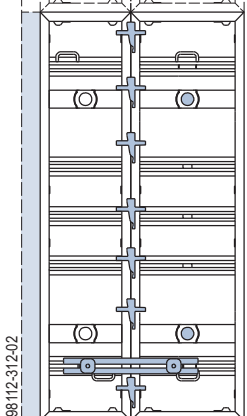
| Fresh-concrete pressure $\sigma_{hk, max, hydr} = 80 \text{ kN/m}^2$ (hydrostatic) | | Fresh-concrete pressure $\sigma_{hk, max} = 80 \text{ kN/m}^2$ (acting on whole area) | |
|------------------------------------------------------------------------------------|-------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Situation 1 | | Situation 1 | Situation 2 |
| Panel height | 0.60m |  |  |
| | 1.35m |  |  |
| | 2.70m |  |  |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used

B Framax Xlife plus panel 0.45m - 0.60m

C Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

D Framax Xlife plus form tie 20.0

E Framax quick acting clamp RU
(or Framax multi function clamp for a closure)






F Framax universal waling + 2 Framax wedge clamps

G Framax multi function clamp

Alternative with Quick acting clamp RU and universal fixing bolt (fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 0.60 m | 1 | 1 |
| 1.35 m | 2 | 2 |
| 2.70 m | 4 | 3 |

Wall thickness from 15 to 30 cm
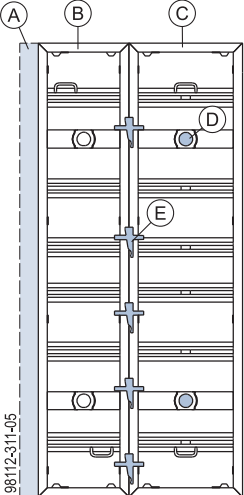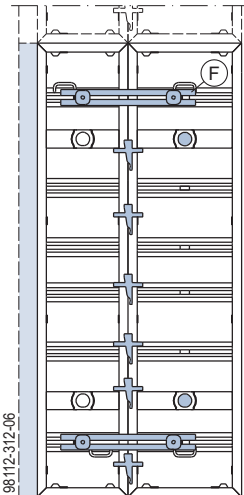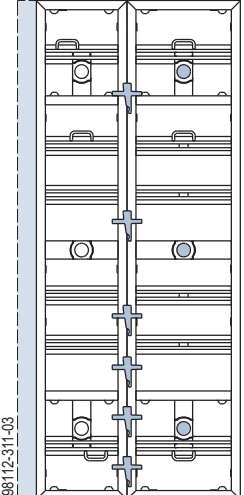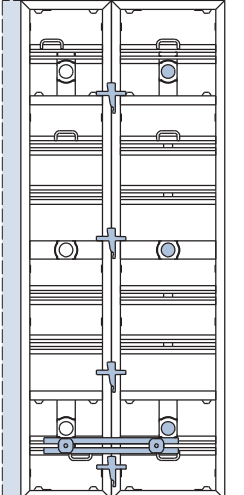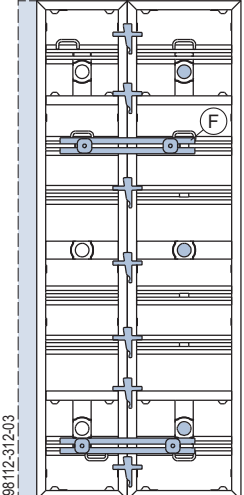
| Fresh-concrete pressure $\sigma_{hk, max, hydr} = 75 \text{ kN/m}^2$ (hydrostatic) | | Fresh-concrete pressure $\sigma_{hk, max} = 75 \text{ kN/m}^2$ (acting on whole area) | |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Situation 1 | | Situation 2 | |
| Panel height 3.00 m |  | |  |
| | | | |
| Fresh-concrete pressure $\sigma_{hk, max, hydr} = 80 \text{ kN/m}^2$ (hydrostatic) | | Fresh-concrete pressure $\sigma_{hk, max} = 80 \text{ kN/m}^2$ (acting on whole area) | |
| Situation 1 | | Situation 2 | |
| Panel height 3.30 m |  |  |  |
| | | | |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used

B Framax Xlife plus panel 0.45m - 0.60m

C Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

D Framax Xlife plus form tie 20.0

E Framax quick acting clamp RU
(or Framax multi function clamp for a closure)







F Framax universal waling + 2 Framax wedge clamps

Alternative with Quick acting clamp RU and universal fixing bolt (fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 3.00 m *) | 4 | 3 |
| 3.30 m | 4 | 4 |

*) Fresh-concrete pressure max. 75 kN/m²

Wall thickness >30 and up to 40 cm
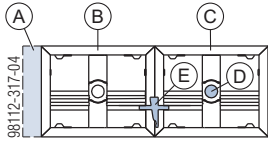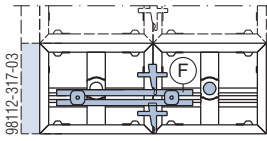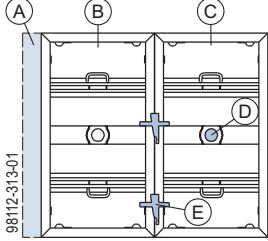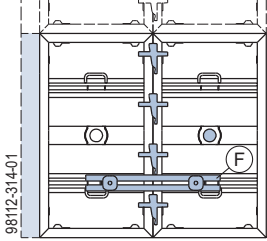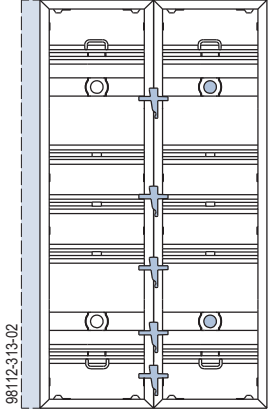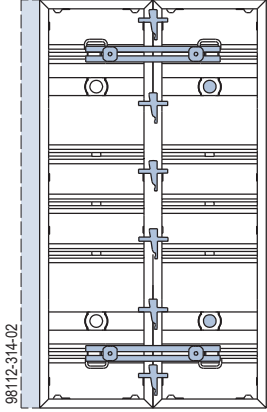
| Fresh-concrete pressure $\sigma_{hk, max, hydr} = 80 \text{ kN/m}^2$ (hydrostatic) | | Fresh-concrete pressure $\sigma_{hk, max} = 80 \text{ kN/m}^2$ (acting on whole area) | |
|------------------------------------------------------------------------------------|-------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Situation 1 | | Situation 1 | Situation 2 |
| Panel height | 0.60m |  |  |
| | 1.35m |  |  |
| | 2.70m |  |  |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used

B Framax Xlife plus panel **0.75m** (with Framax Xlife plus outs. corner 10/10cm: **0.60m**)

C Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

D Framax Xlife plus form tie 20.0





E Framax quick acting clamp RU
(or Framax multi function clamp for a closure)

F Framax universal waling + 2 Framax wedge clamps

Alternative with Quick acting clamp RU and universal fixing bolt (fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 0.60 m | 1 | 1 |
| 1.35 m | 3 | 2 |
| 2.70 m | 5 | 3 |

Wall thickness >30 and up to 40 cm

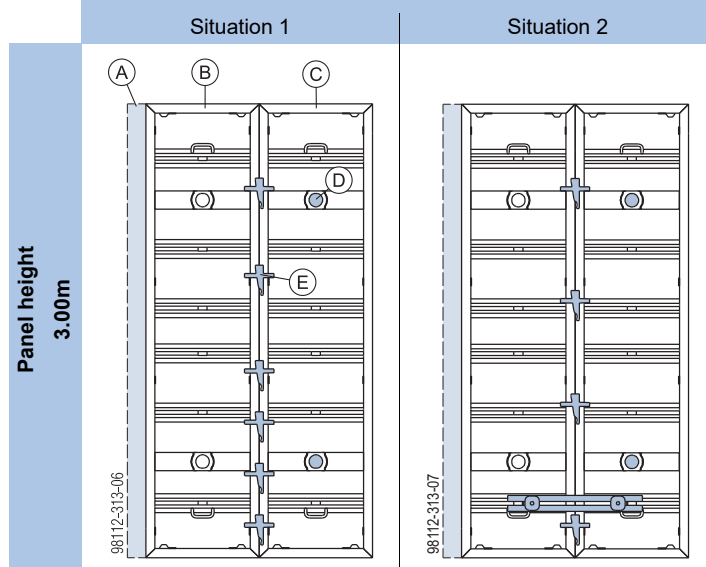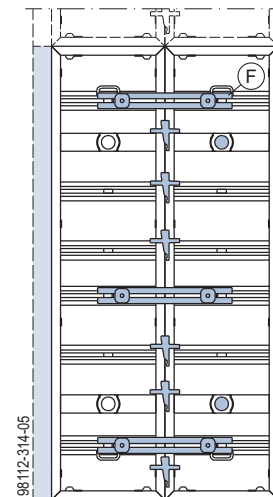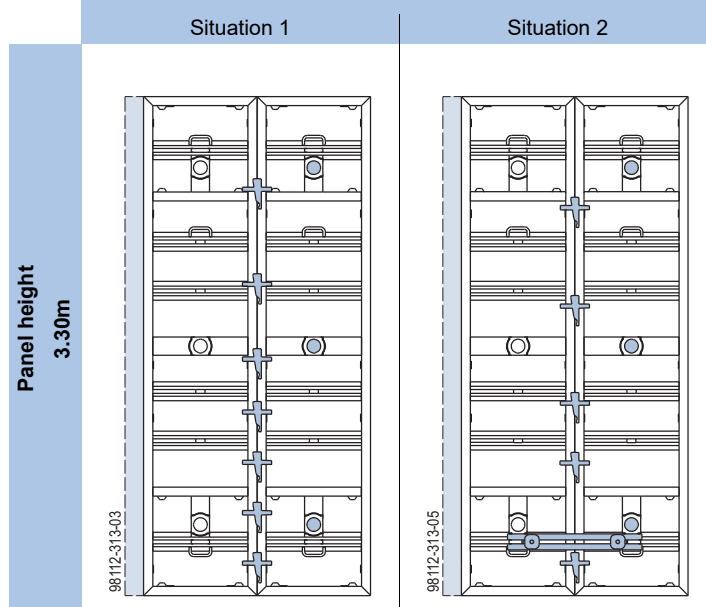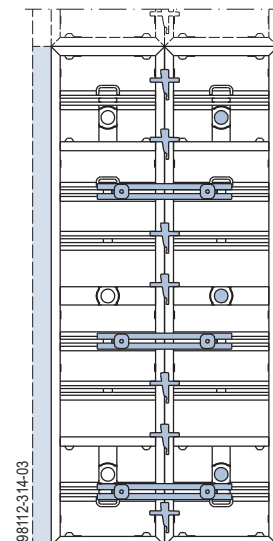Fresh-concrete pressure $\sigma_{hk, max, hydr} = 75 \text{ kN/m}^2$ (hydrostatic)Fresh-concrete pressure $\sigma_{hk, max} = 75 \text{ kN/m}^2$ (acting on whole area)Fresh-concrete pressure $\sigma_{hk, max, hydr} = 80 \text{ kN/m}^2$ (hydrostatic)Fresh-concrete pressure $\sigma_{hk, max} = 80 \text{ kN/m}^2$ (acting on whole area)

- A** Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used
- B** Framax Xlife plus panel **0.75m** (with Framax Xlife plus outs. corner 10/10cm: **0.60m**)
- C** Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)
- D** Framax Xlife plus form tie 20.0
- E** Framax quick acting clamp RU
(or Framax multi function clamp for a closure)
- F** Framax universal waling + 2 Framax wedge clamps

Alternative with Quick acting clamp RU and universal fixing bolt (fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 3.00 m *) | 5 | 3 |
| 3.30 m | 5 | 4 |

*) Fresh-concrete pressure max. **75 kN/m²**



Box-out in the corner zone

Note:

Box-outs in the corner zone (tying through box-out) require additional bracing with universal walings (inside and outside formwork).

T-junctions

Wall thickness up to 30 cm

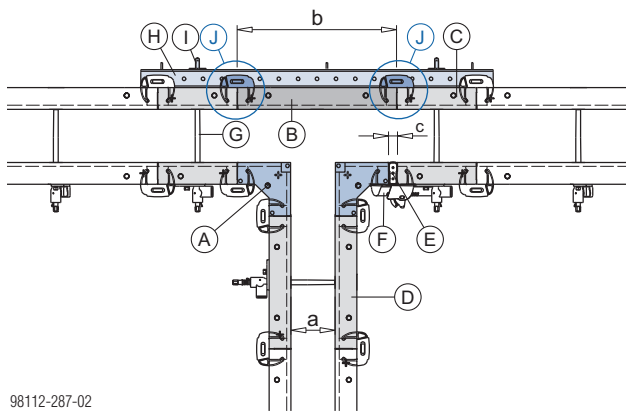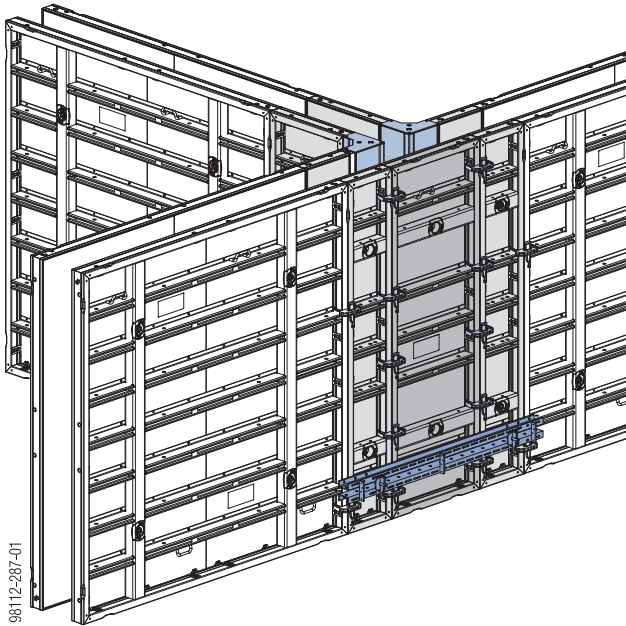

a ... wall thickness (max. 30 cm)

b ... panel width

c ... closure width

A Framax Xlife plus inside corner 30/30cm or Framax Xlife inside corner

B Framax Xlife plus panel **0.75m / 0.90m**

C Framax Xlife plus panel (**max. width of 0.45m**)

D Framax Xlife plus panel (**no 1.35m or 3.00m wide panel!!**)

E Closure **0 - 15 cm** (Framax aluminium closure / Framax fitting timber)

F Framax multi function clamp

G Tie rod system Framax Xlife plus 20.0


H Multi-purpose waling WS10 Top50

I Framax wedge clamp

J Inter-panel connection (see the section headed [T-junction: Inter-panel connections on Framax Xlife plus panels in the straight wall](#))

Note:

If the wall sections are short it is advisable to brace the inside corner with a **universal corner waling**.

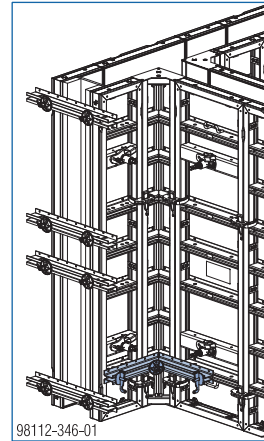

Width of the Framax Xlife plus panel in the straight wall

| Wall thickness (a) | Panel width (b) |
|--------------------|-----------------|
| 15 cm | 0.75m (75 cm) |
| >15 - 30 cm | 0.90m (90 cm) |

Closure width in the inside corner


Closure width **c** =
panel width **b** [cm] - 60 cm - wall thickness **a** [cm]

Example:


- Wall thickness = 25 cm
=> Panel width (b) = **90 cm (0.90m)**

Closure width = 90 cm - 60 cm - 25 cm = **5 cm**

Wall thickness up to 40 cm

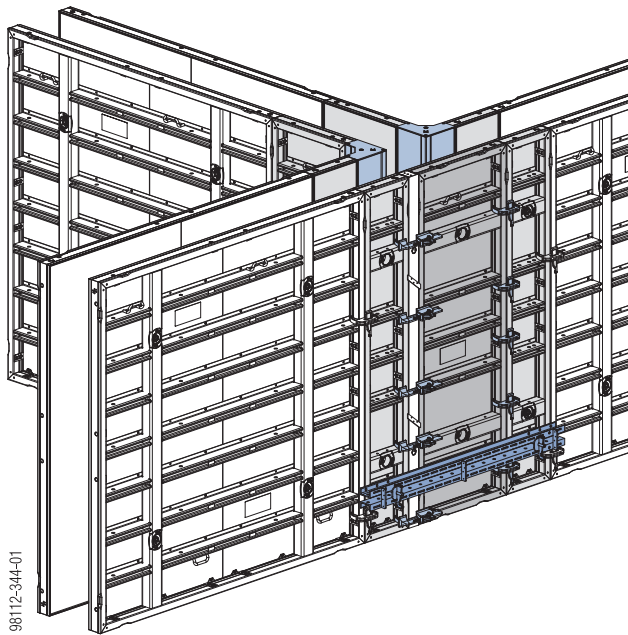

98112-344-01

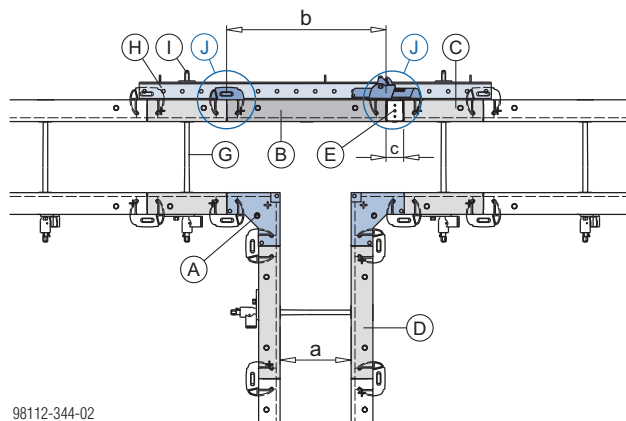

98112-344-02

a ... wall thickness (max. 40 cm)

b ... panel width

c ... closure width

A Framax Xlife plus inside corner 30/30cm or
Framax Xlife inside corner

B Framax Xlife plus panel **0.90m**

C Framax Xlife plus panel (**max. width of 0.30m**)

D Framax Xlife plus panel
(**no 1.35m or 3.00m wide panel!**)

E Closure **0 - 15 cm** (Framax aluminium closure / Framax fitting
timber)

G Tie rod system Framax Xlife plus 20.0

H Multi-purpose waling WS10 Top50


I Framax wedge clamp

J Inter-panel connection (see the section headed [T-junction: Inter-panel connections on Framax Xlife plus panels in the straight wall](#))

Permitted fresh-concrete pressure: 60kN/m² (acting on whole area)

Note:

If the wall sections are short it is advisable to brace the inside corner with a **universal corner waling**.

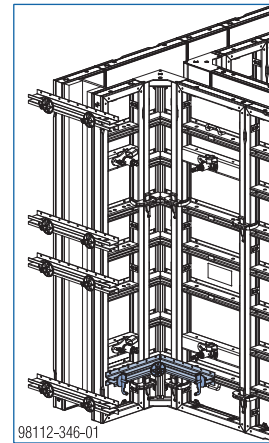

98112-346-01

Width of the Framax Xlife plus panel in the straight wall

| Wall thickness (a) | Panel width (b) |
|--------------------|-----------------|
| >30 - 40 cm | 0.90m (90 cm) |

Closure width in the straight wall


Closure width **c** =
60 cm + wall thickness **a** [cm] - panel width **b** [cm]

Example:

- Wall thickness = 40 cm
=> Panel width (b) = **90 cm (0.90m)**

Closure width = 60 cm + 40 cm - 90 cm = **10 cm**

Variant with the Doka tie rod system 20.0

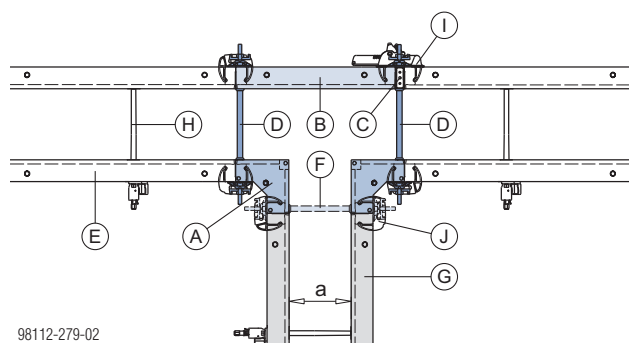

98112-279-02

a ... max. 40 cm

- A** Framax Xlife inside corner
- B** Framax Xlife panel 0.90m
- C** Closure (Framax aluminium closure / Framax fitting timber)
- D** Doka tie rod system 20.0
- E** Framax Xlife plus panel
- F** Doka tie rod system 20.0
(A form tie is only needed in this position if a Framax Xlife plus panel with a width of 1.35m is used as a connecting panel (**G**).)
- G** Connecting panel
- H** Tie rod system Framax Xlife plus 20.0
- I** Framax multi function clamp
- J** Framax quick acting clamp RU

Permitted fresh-concrete pressure: 80kN/m²

T-junction: Inter-panel connections on Framax Xlife plus panels in the straight wall

Wall thickness from 15 to 30 cm


| Fresh-concrete pressure $\sigma_{hk, max}$ | |
|--------------------------------------------|---------------------------------------------|
| 80 kN/m ² (hydrostatic) | 80 kN/m ² (acting on whole area) |
| 0.60m | |
| 1.35m | |
| 2.70m | |

Alternative for each inter-panel connection (fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 0.60 m | 1 | 1 |
| 1.35 m | 2 | 2 |
| 2.70 m | 4 | 3 |
| 3.00 m *) | 4 | 3 |
| 3.30 m | 4 | 4 |


*) Fresh-concrete pressure max. 75 kN/m²

Wall thickness from 15 to 30 cm

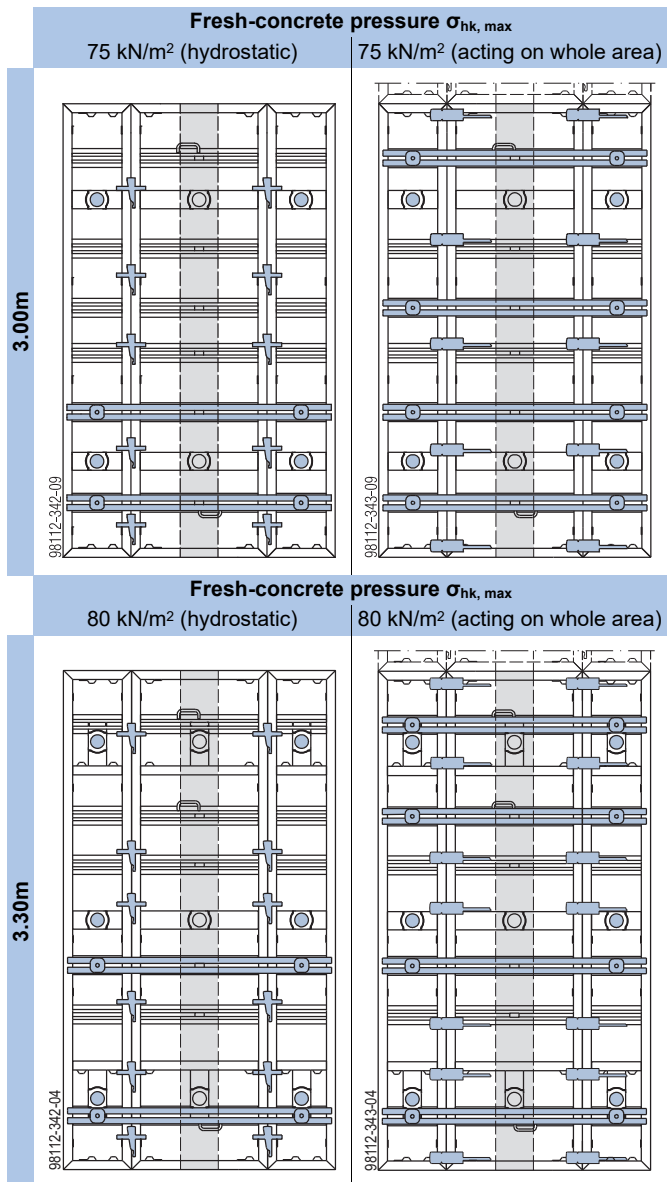





- A** Framax Xlife plus panel 0.75m or 0.90m
- B** Framax Xlife plus panel (max. width of 0.45m)
- F** Framax Xlife plus form tie 20.0
- G** Framax quick acting clamp RU
- H** Framax multi function clamp
- I** Multi-purpose waling WS10 Top50 1.75m
- J** Multi-purpose waling WS10 Top50 2.00m
(fix with Framax wedge clamp to the next panel)
- K** Framax wedge clamp

Wall thickness >30 and up to 40 cm

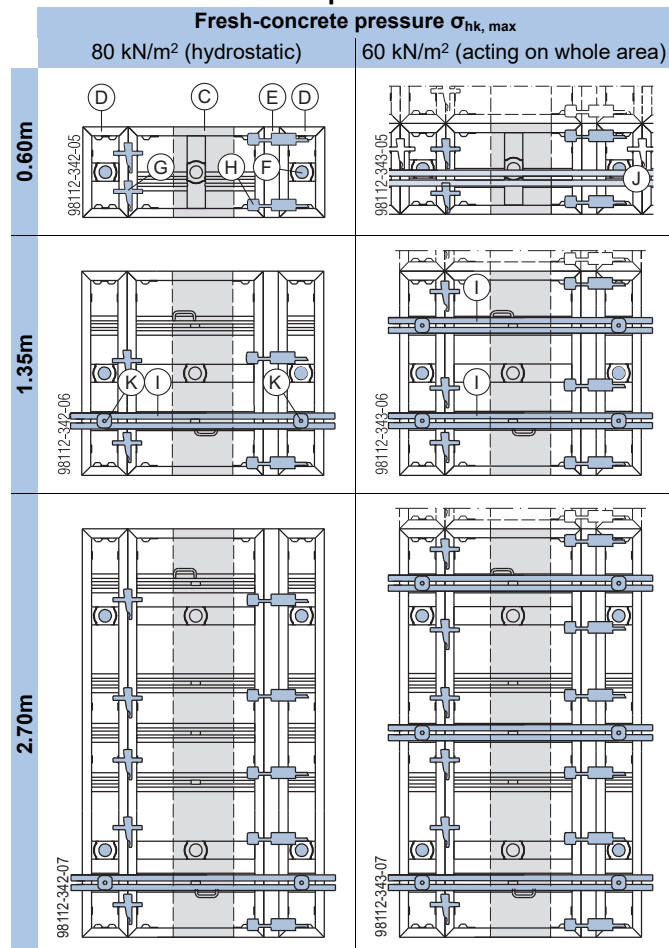Alternative for each inter-panel connection
(fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 0.60 m | 1 | 1 |
| 1.35 m | 2 | 2 |
| 2.70 m | 4 | 3 |
| 3.00 m | 4 | 3 |
| 3.30 m | 4 | 4 |


Wall thickness >30 and up to 40 cm
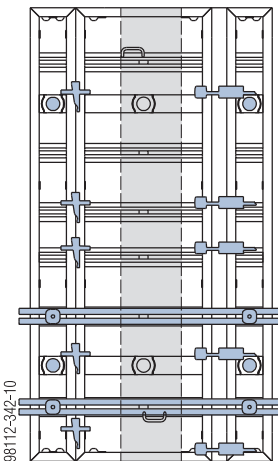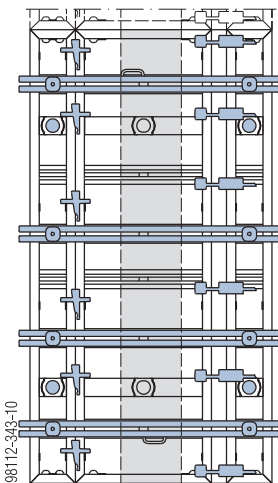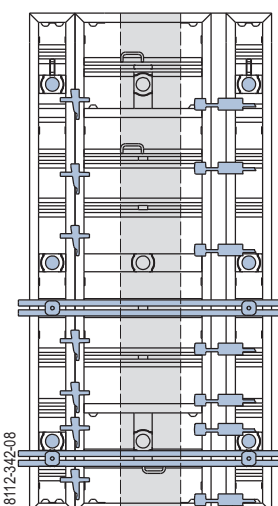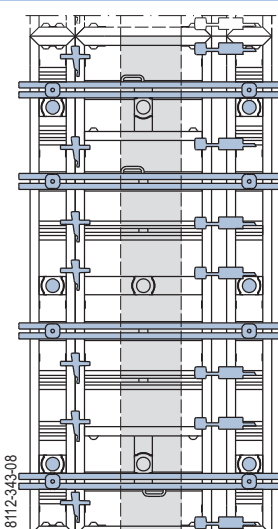
| Fresh-concrete pressure $\sigma_{hk, max}$ | |
|----------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| 75 kN/m ² (hydrostatic) | 60 kN/m ² (acting on whole area) |
| <div>3.00m</div> <div></div> <div>98112-342-10</div> | <div></div> <div>98112-343-10</div> |
| Fresh-concrete pressure $\sigma_{hk, max}$ | |
| 80 kN/m ² (hydrostatic) | 60 kN/m ² (acting on whole area) |
| <div>3.30m</div> <div></div> <div>98112-342-08</div> | <div></div> <div>98112-343-08</div> |
| C Framax Xlife plus panel 0.90m | |
| D Framax Xlife plus panel (max. width of 0.30m) | |
| E Closure 0 - 10 cm (Framax aluminium closure / Framax fitting timber) | |
| F Framax Xlife plus form tie 20.0 | |
| G Framax quick acting clamp RU | |
| H Framax multi function clamp | |
| I Multi-purpose waling WS10 Top50 1.75m | |
| J Multi-purpose waling WS10 Top50 2.00m (fix with Framax wedge clamp to the next panel) | |
| K Framax wedge clamp | |

Edges

with Framax frontal triangular ledge

The Framax frontal triangular ledge can be slipped over the front end of the panel without being nailed and is used with the universal panel to form outside corners (integral slot grid for universal fixing bolts). It is also possible to form edges using the Framax triangular ledge, of course.

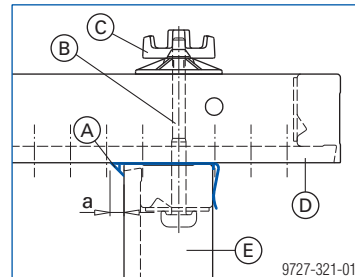


a ... 20 mm

- A** Framax frontal triangular ledge or Framax triangular ledge 2.70m
- B** Framax universal fixing bolt
- C** Super plate 15.0
- D** Framax Xlife universal panel
- E** Framax Xlife plus panel

with the Framax triangular ledge


Where outside corners are formed using the Framax outside corner, the Quick acting clamps used for the interconnection mean that the Framax triangular ledge has to be used.

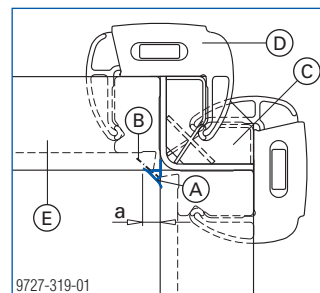


a ... 20 mm

- A** Framax triangular ledge 2.70m
- B** Wire nail 22x40
- C** Framax outside corner
- D** Framax quick acting clamp RU
- E** Framax Xlife plus panel


Acute & obtuse-angled corners

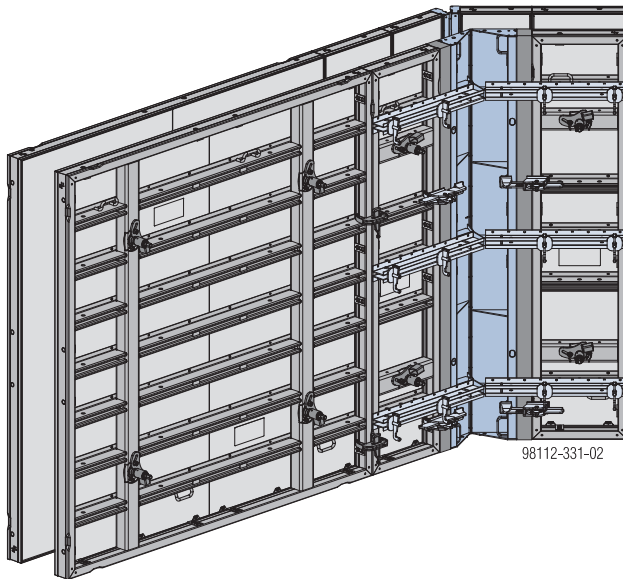

98112-331-02

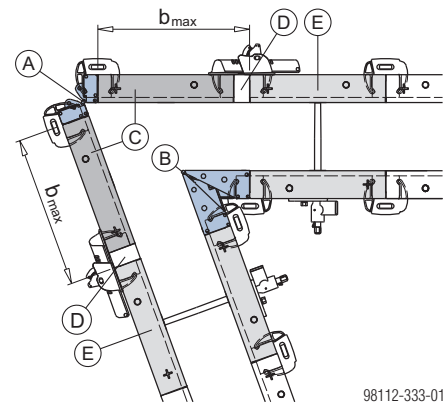


98112-333-01

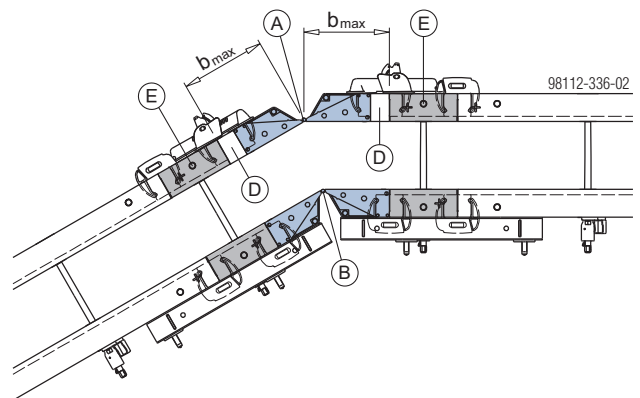


98112-336-02

Hinged inside corner I

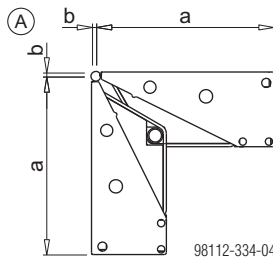

98112-334-04


a ... 29.3 cm
b ... 0.7 cm

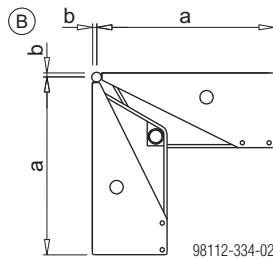

98112-334-02


a ... 29.2 cm
b ... 0.7 cm

Hinged outside corner A

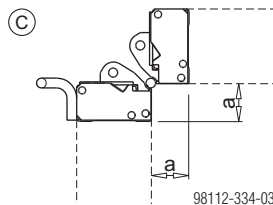

98112-334-03

a ... 6.3 cm

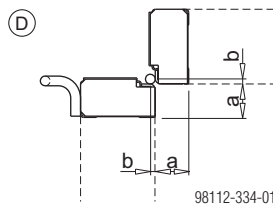

98112-334-01

a ... 5.5 cm
b ... 0.8 cm

A Framax hinged inside corner I galv.

B Framax hinged inside corner I

C Framax hinged outside corner A galv.

D Framax hinged outside corner A

Note:

Vertical stacking of the **Framax hinged outside corner A** and the **Framax hinged outside corner A galv.** on top (and vice versa) is not possible!

| b_{max} (panel width + closure) | Fresh-concrete pressure $\sigma_{hk, max}$ | |
|--------------------------------------|--------------------------------------------|----------------------|
| 100 cm | 80 kN/m ² | hydrostatic |
| 80 cm | 50 kN/m ² | acting on whole area |
| 70 cm | 60 kN/m ² | |
| 60 cm | 70 kN/m ² | |
| 52 cm | 80 kN/m ² | |

A Hinged outside corner
(Framax hinged outside corner A or Framax hinged inside corner I)

B Hinged inside corner
(Framax hinged inside corner I)

C Framax Xlife plus panel

D Closure (Framax aluminium closure / Framax fitting timber)

E Framax Xlife plus panel (max. width 0.60m)

Note:

Seal off any unneeded form-tie sleeves with the **Framax Xlife plus frame hole plug 32mm NG**.

Inside formwork

Use the **Hinged inside corner I** as the inside hinged corner to form acute and obtuse angles.
Bracing with **universal walings** is necessary for angles $\geq 120^\circ$.

Required number of universal walings:

| | |
|-------------------------------|---|
| Framax Xlife plus panel 0.60m | 2 |
| Framax Xlife plus panel 1.35m | 4 |
| Framax Xlife plus panel 2.70m | 6 |
| Framax Xlife plus panel 3.00m | 6 |
| Framax Xlife plus panel 3.30m | 8 |

Position of the universal walings:
In every support level of the Hinged inside corner I.



NOTICE

With closures, provide additional universal walings in accordance with the section headed [Length adjustment using closures](#).

Outside formwork

The following possibilities are available as outside hinged corners for forming acute and obtuse angles:

- **Hinged outside corner A (60°-135°)**
- **Hinged inside corner I (90°-180°)**


Number of connectors needed in the hinged outside corner:

| Panel height | Number of clamps |
|--------------|------------------|
| 0.60 m | 2 |
| 1.35 m | 6 |
| 2.70 m | 12 |
| 3.00 m | 14 |
| 3.30 m | 14 |


Note:

For details regarding extra inter-panel connections on outside corners (for increased tensile loads) see the section headed [Inter-panel connections for increased tensile loads](#).

Hinged outside corner A (60°-135°)

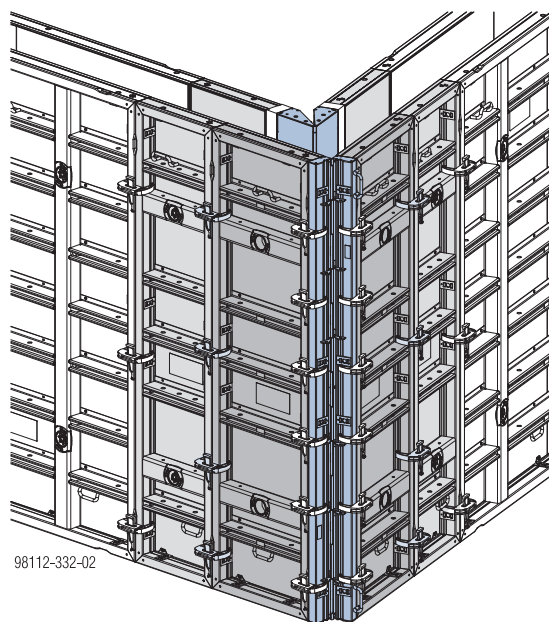

98112-332-02

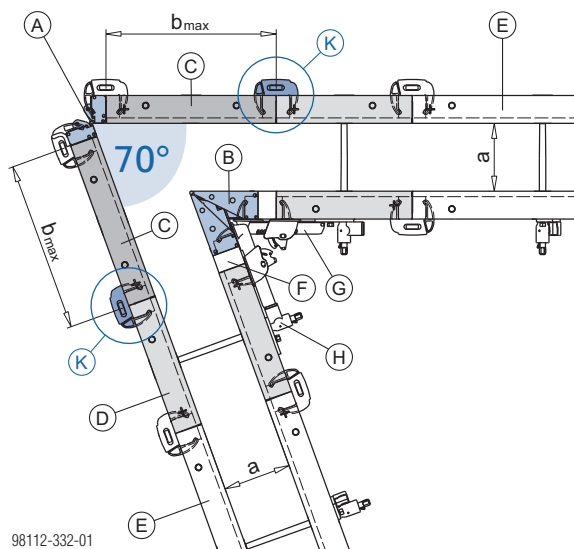


98112-332-01

a ... 30 cm



- A** Framax hinged outside corner A
- B** Framax hinged inside corner I
- C** Framax Xlife plus panel 0.75m
- D** Framax Xlife plus panel (max. width 0.60m)
- E** Framax Xlife plus panel
- F** Closure 8 cm
- G** Framax multi function clamp
- H** Tie rod system Framax Xlife plus
- K** Inter-panel connection
(see the section headed [Inter-panel connection, corner gang-form \(outside: with hinged corner\) with adjoining Framax Xlife plus panel](#))

**NOTICE****Possible collision of tie-rod and connector parts in the inside corner (angle 60°)!**

- If the inside angle is small, if necessary use universal fixing bolts and Star grip nuts 15.0 G (L) as connectors at the inside hinged corner!

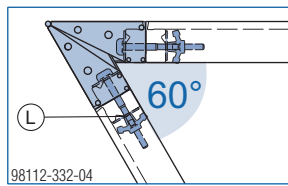



- When forming thin walls, if necessary install the Framax Xlife plus form ties (H) from the outside!

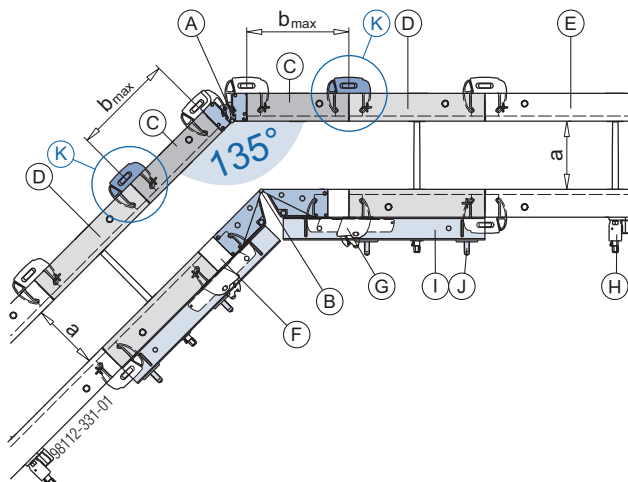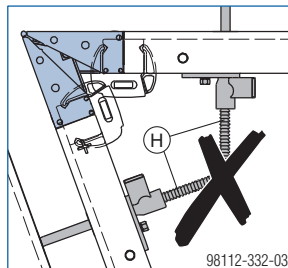

a ... 30 cm

- A** Framax hinged outside corner A
- B** Framax hinged inside corner I
- C** Framax Xlife plus panel 0.45m
- D** Framax Xlife plus panel (max. width 0.60m)
- E** Framax Xlife plus panel
- F** Closure 9 cm
- G** Framax multi function clamp
- H** Tie rod system Framax Xlife plus
- I** Framax universal waling 0.90m
- J** Framax wedge clamp
- K** Inter-panel connection
(see the section headed [Inter-panel connection, corner gang-form \(outside; with hinged corner\) with adjoining Framax Xlife plus panel!](#))

Hinged inside corner I (90°-180°)

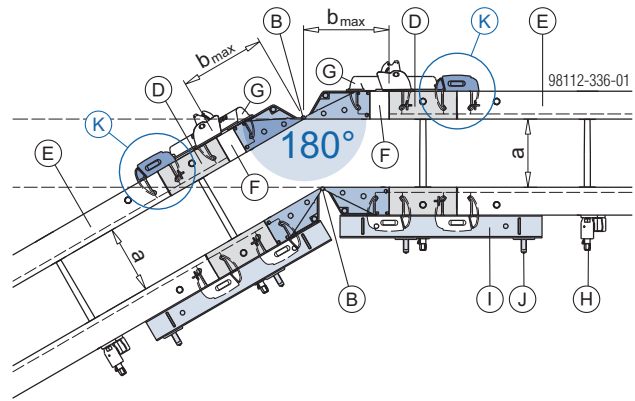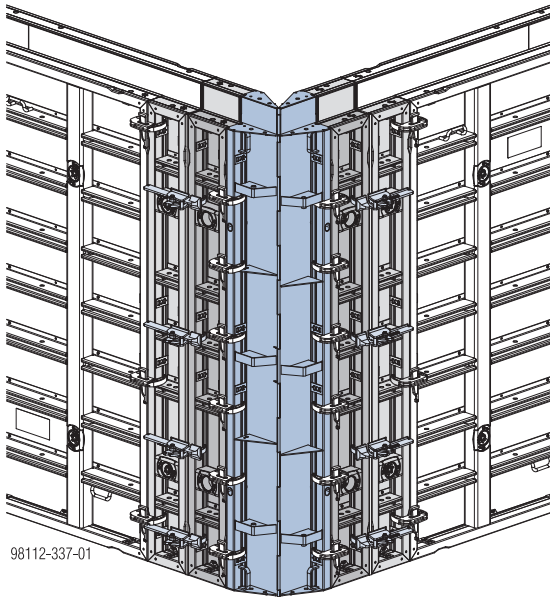

a ... 30 cm

B Framax hinged inside corner I

D Framax Xlife plus panel (max. width 0.60m)

E Framax Xlife plus panel

F Closure 8 cm

G Framax multi function clamp


H Tie rod system Framax Xlife plus

I Framax universal waling 0.90m

J Framax wedge clamp

K Inter-panel connection

(see the section headed [Inter-panel connection, corner gang-form \(outside: with hinged corner\) with adjoining Framax Xlife plus panel](#))

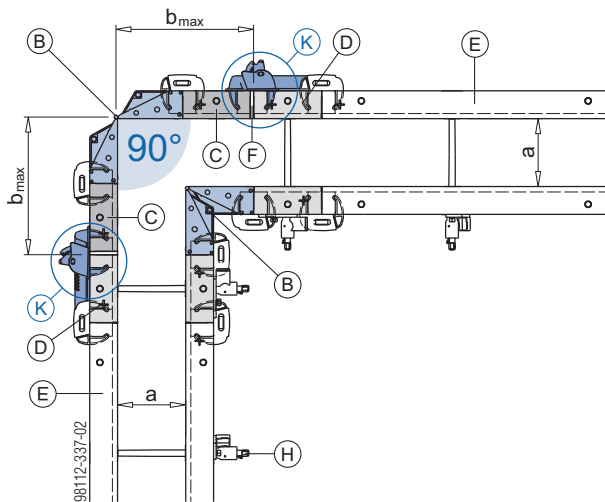

a ... 30 cm

B Framax hinged inside corner I

C Framax Xlife plus panel 0.30m

D Framax Xlife plus panel (max. width 0.60m)

E Framax Xlife plus panel

F Closure 2 cm


H Tie rod system Framax Xlife plus

K Inter-panel connection

(see the section headed [Inter-panel connection, corner gang-form \(outside: with hinged corner\) with adjoining Framax Xlife plus panel](#))

Note:

The hinged inside corner I can be fixed at an angle of 90° using universal fixing bolts and Super plates 15.0.

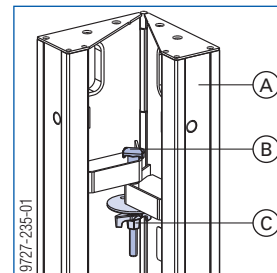

A Framax hinged inside corner I

B Framax universal fixing bolt

C Super plate 15.0

Inter-panel connection, corner gangform (outside; with hinged corner) with adjoining Framax Xlife plus panel

| Fresh-concrete pressure, hydrostatic | | Fresh-concrete pressure acting on whole area | |
|--------------------------------------|-------|----------------------------------------------|-----------|
| | | Variant 1 | Variant 2 |
| Panel height | 0.60m | | |
| | 1.35m | | |
| | 2.70m | | |


A Hinged outside corner *)

(Framax hinged outside corner A or Framax hinged inside corner I; Inter panel-connection, see the table 'Number of connectors needed in the hinged outside corner')

B Framax Xlife plus panel 0.30m - 0.75m**C** Framax Xlife plus panel (max. width 0.60m)**D** Framax Xlife plus form tie 20.0**E** Framax quick acting clamp RU
(or Framax multi function clamp for a closure)**F** Framax universal waling + 2 Framax wedge clamps**G** Framax multi function clamp

Alternative with Quick acting clamp RU and universal fixing bolt (fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 2.70 m | 4 | 3 |

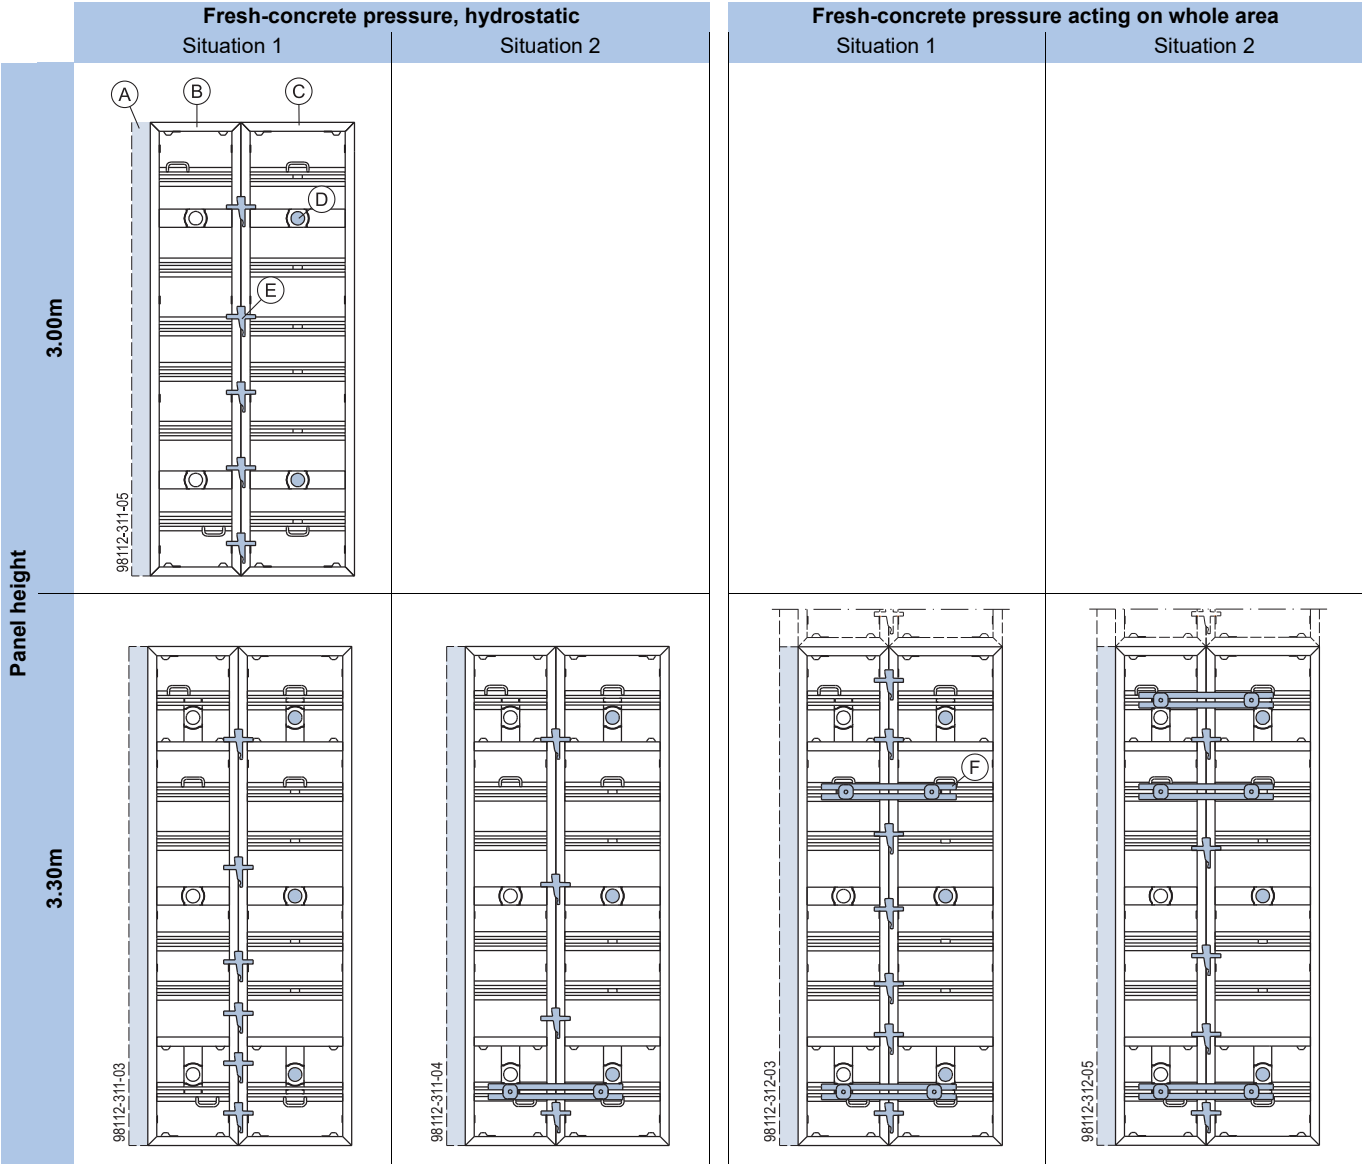


- A Hinged outside corner *)
(Framax hinged outside corner A or Framax hinged inside corner I; Inter panel-connection, see the table 'Number of connectors needed in the hinged outside corner')
- B Framax Xlife plus panel 0.30m - 0.75m
- C Framax Xlife plus panel (max. width 0.60m)
- D Framax Xlife plus form tie 20.0
- E Framax quick acting clamp RU
(or Framax multi function clamp for a closure)
- F Framax universal waling + 2 Framax wedge clamps

Alternative with Quick acting clamp RU and universal fixing bolt (fresh-concrete pressure acting on whole area)

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 3.30 m | 4 | 4 |

Shaft formwork

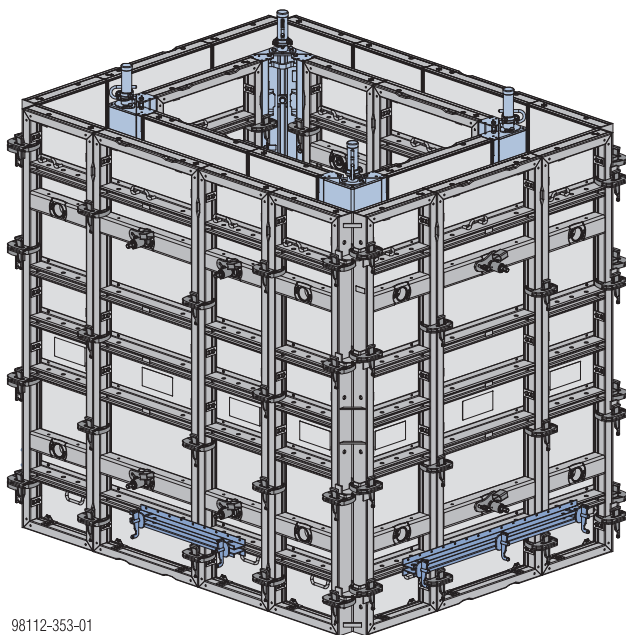

98112-353-01

Inside formwork

The **Framax-stripping corner I** is used to form right-angled inside corners in the shaft.


With it, the entire shaft formwork unit is detached from the wall in one piece and then repositioned by crane.

Product features:


- No negative impression in the concrete.
- Formwork set-up and stripping function integrated in the inside corner.
- The entire shaft formwork is repositioned in one piece.

The possibilities for setting up and stripping the formwork are as follows:


- Framax stripping spindle I
- Framax stripping spindle I with ratchet
- Framax stripping cylinder I (hydraulic)

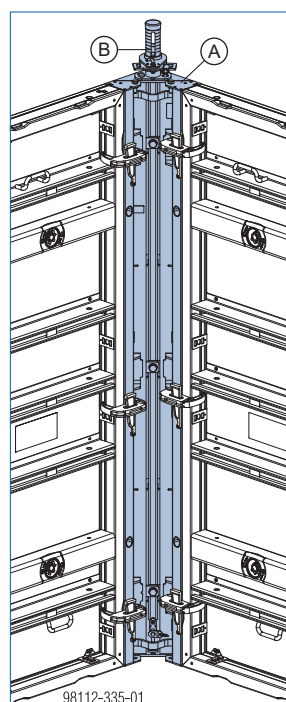

98112-335-01

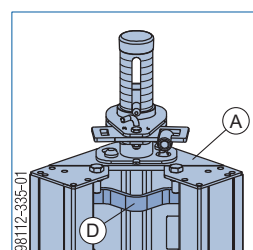

98112-335-01

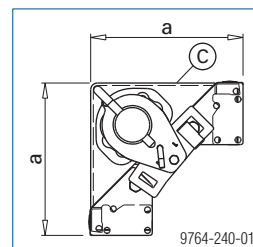

9764-240-01

a ... 30.0 cm

A Framax stripping corner I

B Framax stripping spindle I or
Framax stripping spindle I with ratchet or
Framax stripping cylinder I

C Steel form-facing

D Slinging point (to be used exclusively for lifting **only one** stripping corner on its own!)

Required number of Framax quick acting clamps RU:

| Height of the Stripping corner I | Number of clamps |
|----------------------------------|------------------|
| 1.35 m | 4 |
| 2.70 m | 6 |
| 3.30 m | 8 |



Note:

In order to obtain the full available stripping-play, make sure that the Framax quick acting clamps RU are mounted at staggered heights.

Position of closures (fitting timbers) in the inside shaft formwork:

- whenever possible, not directly next to the stripping corners


Formwork-stripping clearance:

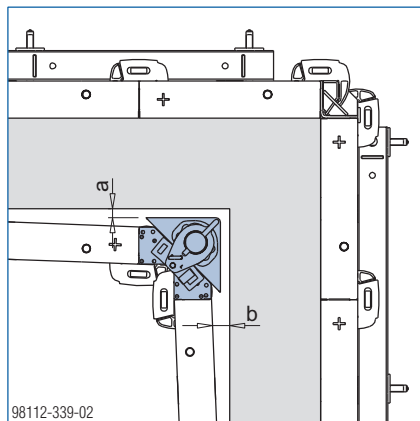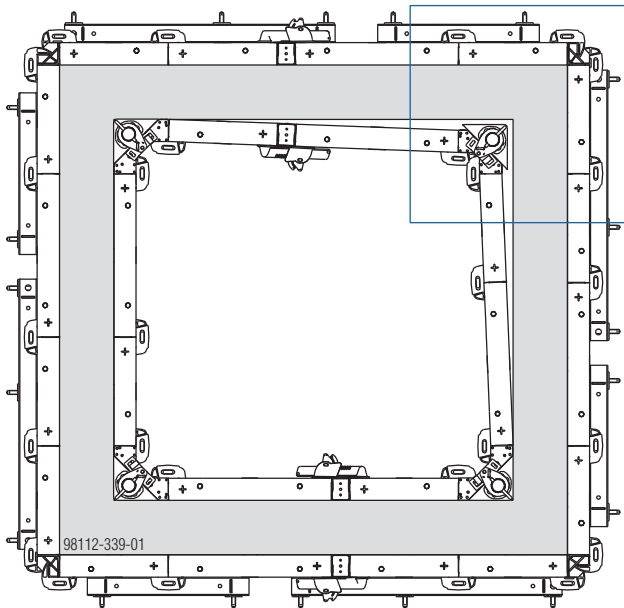

a ... 3.0 cm
b ... 6.0 cm

Vertical stacking of Framax stripping corners I

- Connect the bottom stripping corner to the framed formwork panel.
- Pull the coupling bolt out of the top stripping corner.
- Remove the two hexagon bolts from the bottom stripping corner.
- Engage the top stripping corner flush on the bottom stripping corner.
- Push the coupling bolt back in.
- Bolt the stripping corners together with the 2 hexagon bolts and hexagon nuts removed beforehand.
- Vertically stack the next framed formwork panel and connect it to the stripping corner.

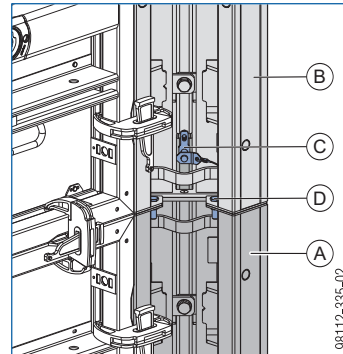

A Bottom stripping corner I

B Top stripping corner I

C Coupling bolt

D Hexagon bolt ISO 4019 M16x45 8.8 galv. +
Hexagon nut ISO 4032 M16 8 galv.

Animation:


<https://player.vimeo.com/video/256373947>

Operating the Framax stripping corner I with stripping spindle

Assembly

These mounting instructions apply to both **Stripping spindles I** and **Stripping spindles I with ratchet**.

- 1) Pull out the U-bolt from the stripping spindle.
- 2) Place the stripping spindle on the centring stud of the stripping corner.
- 3) Twist the stripping spindle clockwise until fully engaged.
- 4) Position the ratchet or spindle nut between the holes in the push-rod.
- 5) Fix the stripping spindle with the U-bolt.

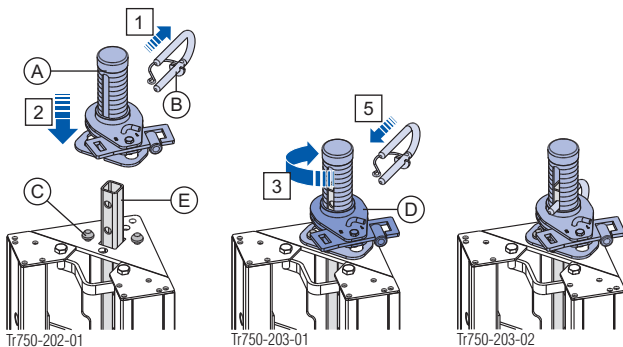


- A Framax stripping spindle I or Framax stripping spindle I with ratchet
- B U-bolt
- C Centring stud of stripping corner
- D Ratchet or spindle nut
- E Push-rod

Animation: <https://player.vimeo.com/video/256374622>

Operating the Framax stripping spindle I with ratchet


- Screw a Tie-rod 15.0mm into the Weldable coupler 15.0 of the ratchet.
- **Setting up:**
 - shift the change-over lever into the 'L' position
 - turn the ratchet **clockwise**
- **Stripping:**
 - shift the change-over lever into the 'R' position
 - turn the ratchet **anti-clockwise**.

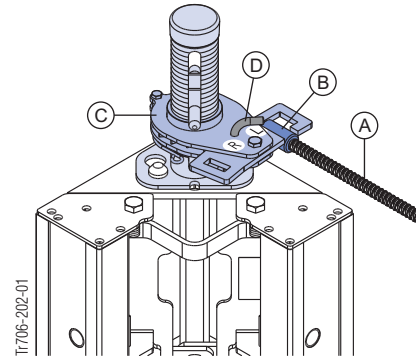

- A Tie-rod 15.0mm
- B Weldable coupler 15.0
- C Ratchet
- D Change-over lever

Operating the Framax stripping spindle I


- Push a Tie rod 15.0mm through one of the holes in the spindle nut.
- **Setting up:** Twist the spindle nut **clockwise**.
- **Stripping:** Twist the spindle nut **anti-clockwise**.

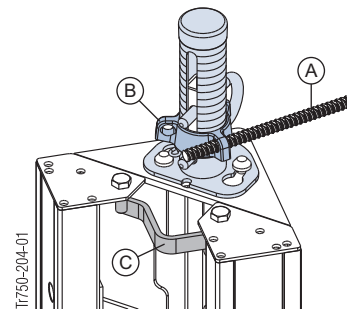

- A Tie rod 15.0mm
- B Spindle nut
- C Slinging point (to be used exclusively for lifting **only one** stripping corner on its own!)

Operation of the Framax stripping corner I hydraulic

With the **Framax stripping cylinder I**, formwork up to 5.40 m high can be erected and stripped hydraulically.

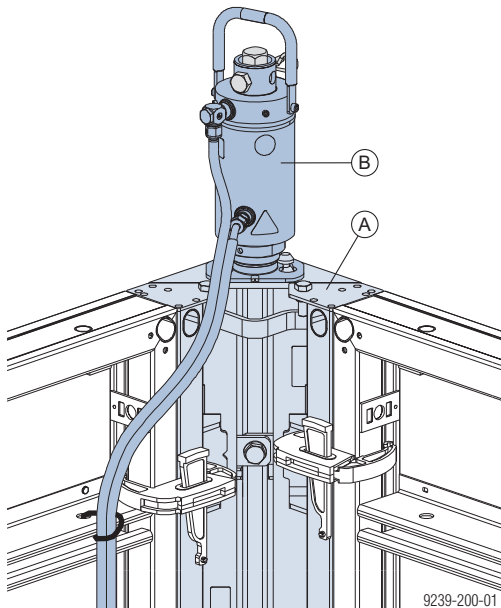

A Framax stripping corner I


B Framax stripping cylinder I



NOTICE

It is not permissible to install the stripping cylinder on a stripping corner that does not have a hole for the locking pin!

This hole is a standard feature of all stripping corners manufactured from 2005 onward.

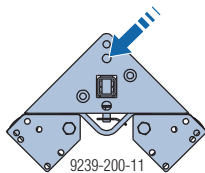

Depending on requirements, the Framax stripping cylinder I can be used with various hydraulic units and accessories.

Compatible hydraulic units


- Hydraulic unit Framax V4 with
 - Cordless screwdriver 18 V (1800 rotation/min)
- Hydraulic unit V45 50/60Hz with
 - System pressure controller Xclimb 60 V45
- Hydraulic unit SCP V1200 50/60Hz with
 - Coupling adapter Framax stripping cylinder I




Follow the directions in the 'Framax stripping corner I hydraulic' Operating Instructions!

Lifting by crane

Framax lifting hook

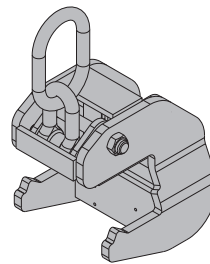



Follow the Operating Instructions!

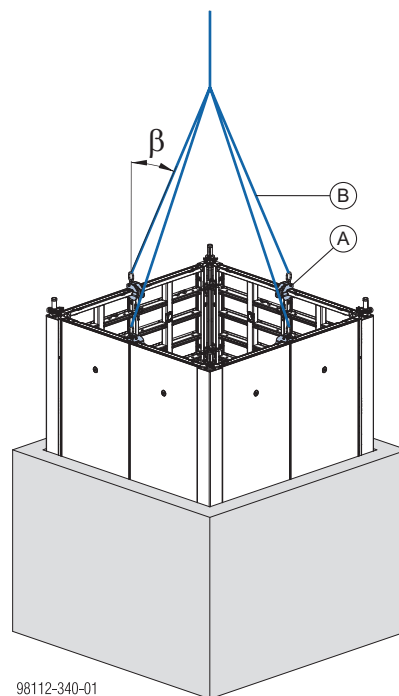

β ... max. 15°

A Framax lifting hook

B 4-part lifting chain

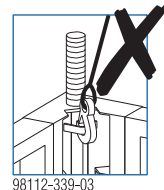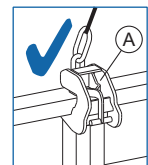

Do not use the slinging point on the Stripping corner I for lifting the shaft formwork.


► The shaft formwork **may only be lifted using lifting hooks.**

Permitted weight of the shaft formwork:
4000 kg with 4 Framax lifting hooks



Use a lifting beam for repositioning large gang-forms.

Outside formwork

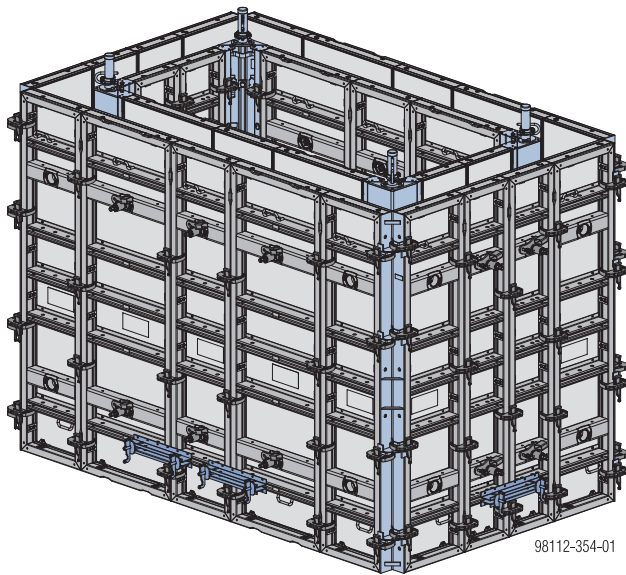

in corner zones

Note:

For instructions on forming right-angled outside corners and on bracing in the corner zone, see the section headed [90 degree corners!](#)

in the straight wall



NOTICE

If more than three single form-tie panels are used next to each other in the shaft, bracing with universal walings is required.

Observe the following points:


- Position the universal walings in such a way that **at most two single form-tie panels without bracing** are placed side by side.
- Always position universal walings **at the second inter-panel joint away from each corner**.
- Always position the universal walings **in the bottom function profile**.
- **Max. closure width** between the single form-tie panels: **15 cm** with **Framax multi function clamp**

Bracing



NOTICE


Position Framax wedge clamps close to the Framax Xlife plus tie and close to the outside corner.

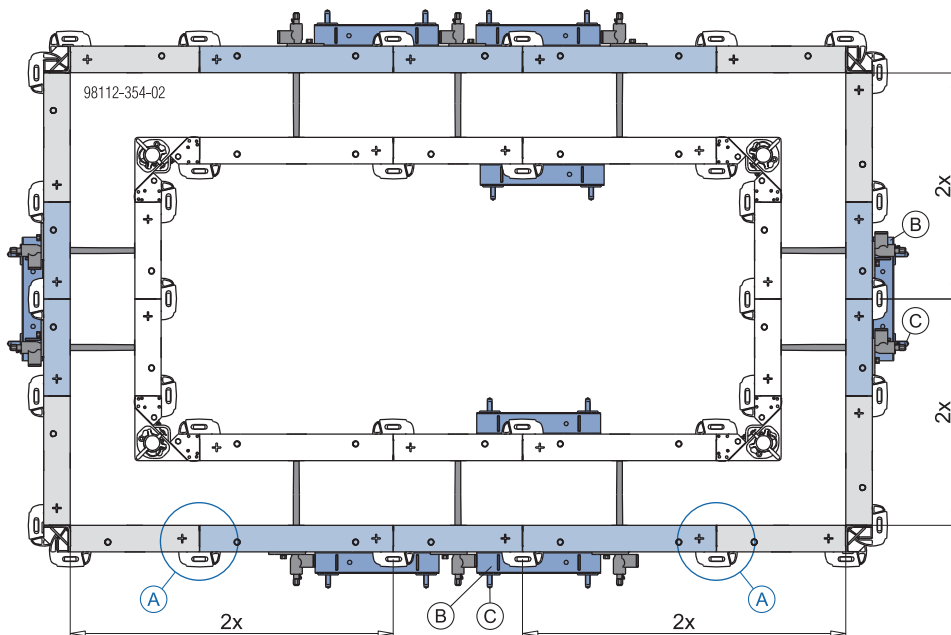

x ... inter-panel joint

- A** Inter-panel connection
(see the section headed [Inter-panel connection, corner gang-form \(outside\) with adjoining Framax Xlife plus panel](#))
- B** Framax universal waling
- C** Framax wedge clamp

Shaft widths with only one form tie

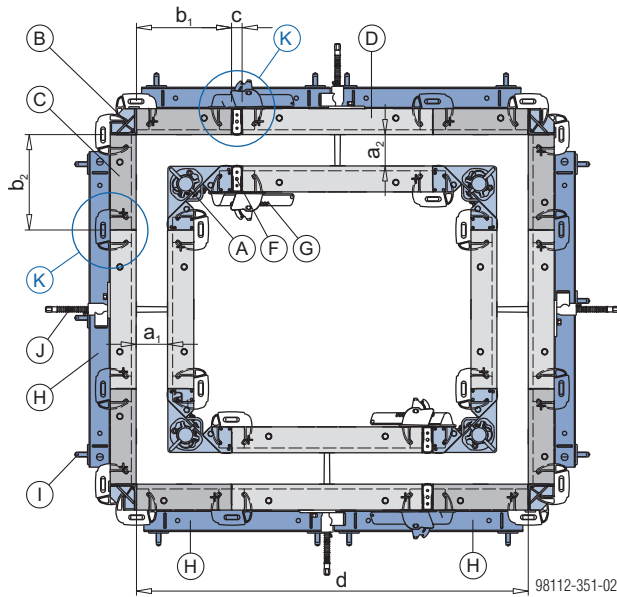

$a_{1,2}$... wall thickness

$b_{1,2}$... panel width (depends on the outside corner used, see the section headed [90 degree corners](#))

c ... closure width

d ... shaft width on the outside = max. 2.10 m

A Framax stripping corner I

B Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel)

C Framax Xlife plus panel **0.45m - 0.75m**

D Framax Xlife plus panel (**max. width of 0.90m**)

F Closure **0 - 15 cm** (Framax aluminium closure / Framax fitting timber)

G Framax multi function clamp

H Framax universal waling

I Framax wedge clamp






J Tie rod system Framax Xlife plus 20.0

K Inter-panel connection

(see the section headed [Inter-panel connections, outside formwork for shaft widths with only one form tie](#))

Inter-panel connections, outside formwork for shaft widths with only one form tie

Wall thickness from 15 to 30 cm
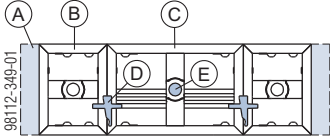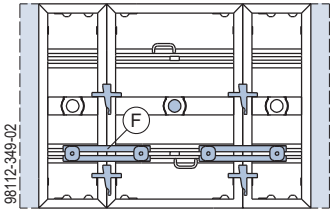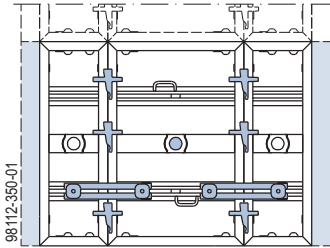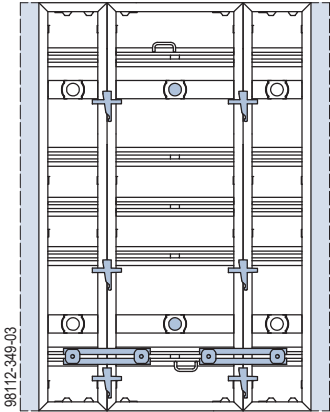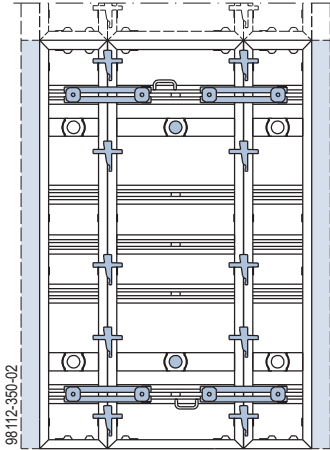
| | | Fresh-concrete pressure $\sigma_{hk, max}$ | |
|--------------|-------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| | | 80 kN/m ² (hydrostatic) | 80 kN/m ² (acting on whole area) |
| Panel height | 0.60m |  | |
| | 1.35m |  |  |
| | 2.70m |  |  |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used

B Framax Xlife plus panel **0.45m - 0.60m**

C Framax Xlife plus panel (**max. width of 0.90m**)

D Framax quick acting clamp RU
(or Framax multi function clamp for a closure)

E Framax Xlife plus form tie 20.0

F Framax universal waling + 2 Framax wedge clamps

Wall thickness from 15 to 30 cm

| Fresh-concrete pressure $\sigma_{hk, max}$ | |
|---------------------------------------------|--|
| 75 kN/m ² (hydrostatic) | |
| 75 kN/m ² (acting on whole area) | |
| Panel height 3.00m | |
| | |
| Fresh-concrete pressure $\sigma_{hk, max}$ | |
| 80 kN/m ² (hydrostatic) | |
| 80 kN/m ² (acting on whole area) | |
| Panel height 3.30m | |
| | |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used

B Framax Xlife plus panel **0.45m - 0.60m**







C Framax Xlife plus panel (**max. width of 0.90m**)

D Framax quick acting clamp RU
(or Framax multi function clamp for a closure)

E Framax Xlife plus form tie 20.0

F Framax universal waling + 2 Framax wedge clamps

Wall thickness >30 and up to 40 cm
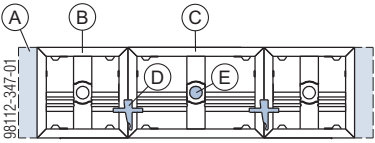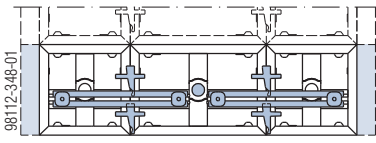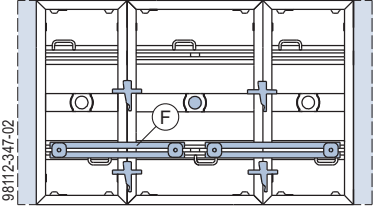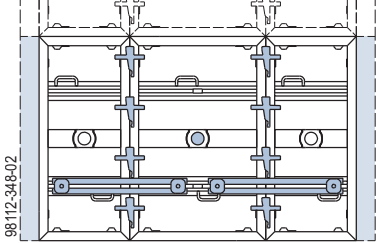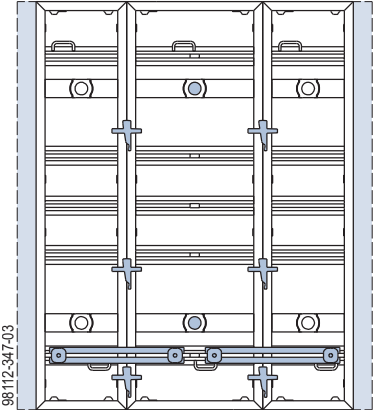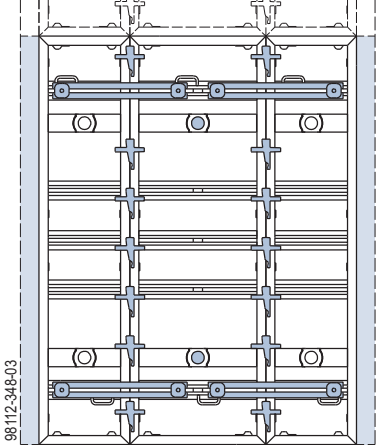
| | | Fresh-concrete pressure $\sigma_{hk, max}$ | |
|--------------|-------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| | | 80 kN/m ² (hydrostatic) | 60 kN/m ² (acting on whole area) |
| Panel height | 0.60m |  |  |
| | 1.35m |  |  |
| | 2.70m |  |  |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used

B Framax Xlife plus panel **0.60m or 0.75m**

C Framax Xlife plus panel (**max. width of 0.90m**)

D Framax quick acting clamp RU
(or Framax multi function clamp for a closure)

E Framax Xlife plus form tie 20.0

F Framax universal waling + 2 Framax wedge clamps

Wall thickness >30 and up to 40 cm

| Fresh-concrete pressure $\sigma_{hk, max}$ | |
|--------------------------------------------------------------------|---------------------------------------------|
| 75 kN/m ² (hydrostatic) | 60 kN/m ² (acting on whole area) |
| <div data-bbox="67 190 630 728"> <p>Panel height 3.00m</p> </div> | <div data-bbox="646 190 1125 728"> </div> |
| 80 kN/m ² (hydrostatic) | 60 kN/m ² (acting on whole area) |
| <div data-bbox="67 784 630 1332"> <p>Panel height 3.30m</p> </div> | <div data-bbox="646 784 1125 1332"> </div> |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner / Framax Xlife universal panel); Inter-panel connection, see the section on the outside corner used

B Framax Xlife plus panel 0.60m or 0.75m

C Framax Xlife plus panel (max. width of 0.90m)

D Framax quick acting clamp RU
(or Framax multi function clamp for a closure)

E Framax Xlife plus form tie 20.0

F Framax universal waling + 2 Framax wedge clamps


Shaft for use of self-compacting concrete



NOTICE

For use of self-compacting concrete (SCC), note the following:

For bracing **across the entire width of the shaft, use a single, full-length waling** (instead of two or more universal walings)!

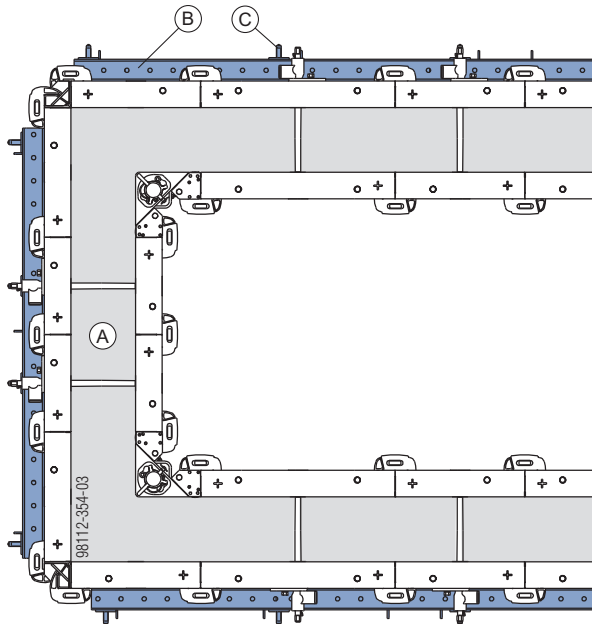

A Self-Compacting Concrete (SCC)

B Multi-purpose waling WS10 Top50

C Framax wedge clamp

Inter-panel connections for increased tensile loads

As a rule, only **2 clamps** are needed per 2.70 m, **3 clamps** per 3.00 m and **3 clamps** per 3.30 m formwork height as a tension link between the panels.


However, where **increased tensile loads** need to be sustained near outside corners and stop-ends, **extra inter-panel connectors** are needed.

Wall thickness up to 40 cm:

For each panel joint up to 1.35 m:

- 1 additional clamp

Near stop-ends

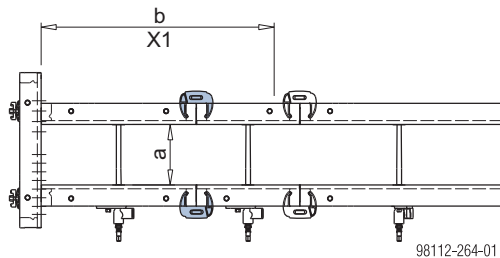


a ... up to 40 cm

b ... 1.35 m

X1 ... 1 additional clamp

Near outside corners

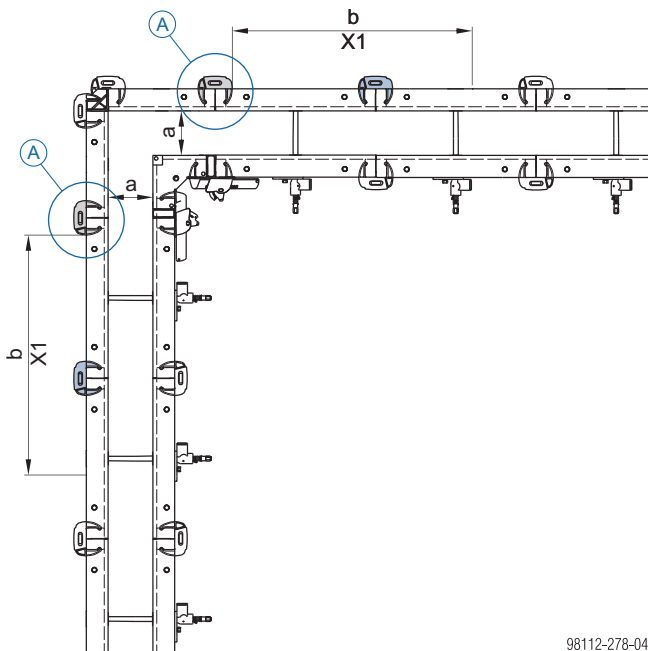

a ... up to 40 cm

b ... 1.35 m

X1 ... 1 additional clamp

A Inter-panel connection (see the section headed [Inter-panel connection, corner gangform \(outside\) with adjoining Framax Xlife plus panel](#))

Stop-end formwork


There are **3 ways** of forming **stop ends**:

- with universal waling
- with stop-end waler tie
- with universal panel

Note:


For details regarding extra inter-panel connections on stop-ends (for increased tensile loads) see the section headed [Inter-panel connections for increased tensile loads](#).

with universal walings

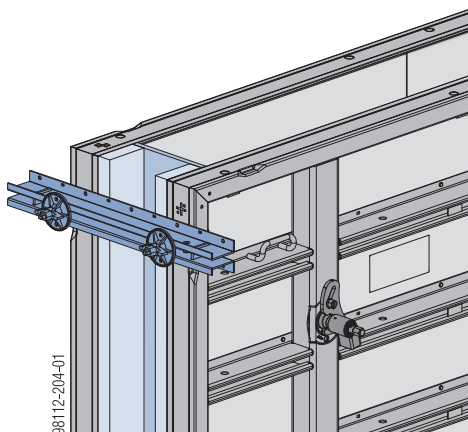

Universal walings make it possible to form **stop-ends continuously across any thickness of wall**.

They are mounted using universal fixing bolts and Super plates 15.0 fixed through the cross boreholes in the panels.

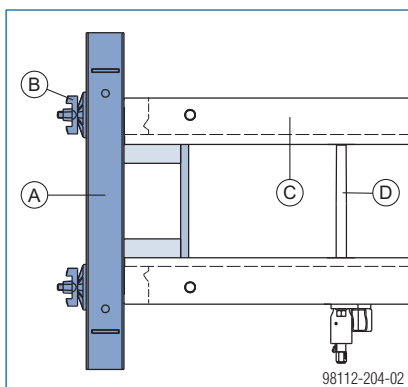

- A Framax universal waling
- B Framax universal fixing bolt + Super plate 15.0
- C Framax Xlife plus panel (panel width > 0.30m)
- D Doka tie rod system


Framax universal waling:

Permitted moment: 5.2 kNm


Framax universal fixing bolt:

permitted tensile force in the cross borehole of the Framax Xlife plus panel: 25.0 kN

with stop-end waler ties

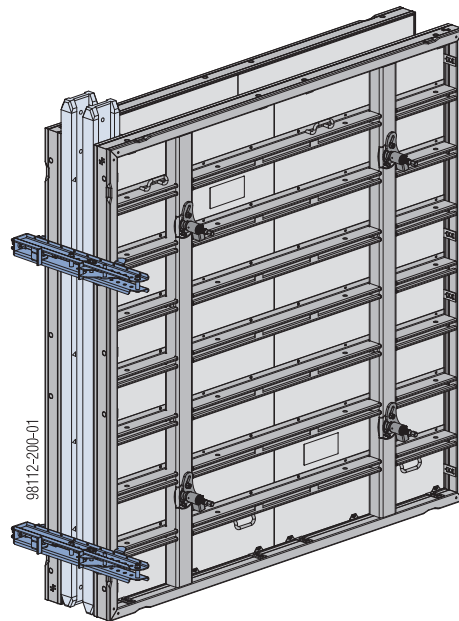

The stop-end waler ties make it possible to form stop-ends continuously from wall thicknesses of 15 cm to 45 cm.

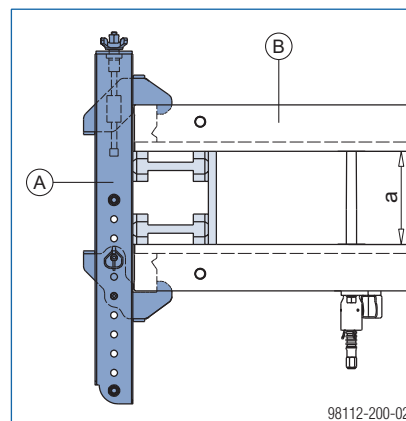

a ... 15 to 45 cm

- A Framax stop-end waler tie
- B Framax Xlife plus panel

Position of stop-end waler tie:

panel upright

panel on its side


G Function profile

H Cross-borehole plate

Installation:

- Fix the required wall thickness with double bolts.
- Position the stop-end waler tie on the formwork.
- Fine-adjust the screwjack clamp with the star grip nut, and tighten it.

Stop-end waler tie
15-45cm

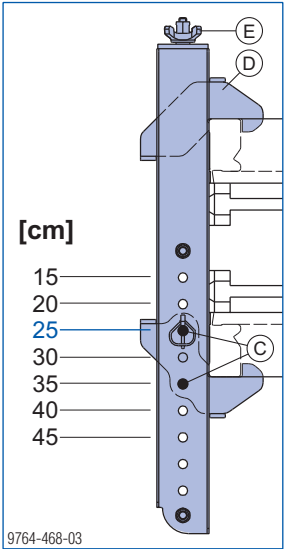

- C Double bolt
- D Screwjack clamp
- E Star grip nut

Required numbers of Framax stop-end waler ties

| Panels upright | | | |
|----------------|--------|--------|--------|
| Panel height | 2.70 m | 3.00 m | 3.30 m |
| | 2 | 3 | 3 |


| Panels on their sides | | |
|-----------------------|-----------------|-----------------|
| Panel width | 0.30 m - 0.60 m | 0.75 m - 1.35 m |
| | 1 | 2 |

Positions of Framax stop-end waler ties

| Panels upright | | | |
|-------------------------------|-------------------------|-------------------------|--|
| Number of stop-end waler ties | | | |
| 2 | 3 | 3 | |
| (panel height of 2.70m) | (panel height of 3.00m) | (panel height of 3.30m) | |
| | | | |

| Panels on their sides | | |
|-------------------------------|---|--|
| Number of stop-end waler ties | | |
| 1 | 2 | |
| | | |

with universal panels

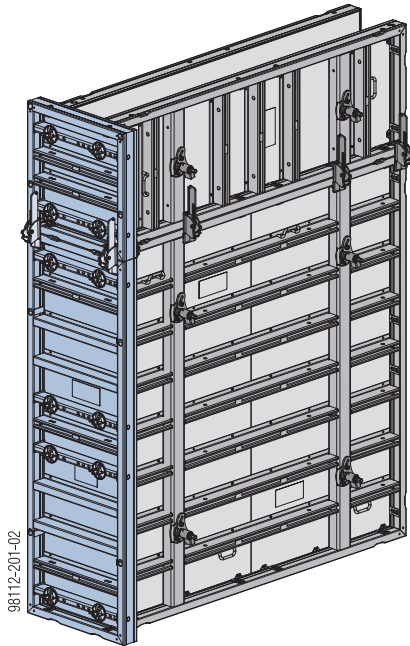

The universal panels are mounted using universal fixing bolts and Super plates 15.0.

Required numbers of universal fixing bolts + Super plates 15.0:

| | |
|--------------------------|----|
| Universal panel 0.90m | 4 |
| Universal panel 1.35m | 4 |
| Universal panel 2.70m | 8 |
| Universal panel 3.00m *) | 10 |
| Universal panel 3.30m | 10 |


*) Framax Xlife plus universal panel

Note:

Seal off the unused holes in the formwork sheet of the universal panels with **Framax plugs R 24.5**.

Universal panel 0.90m, 1.35m and 2.70m

The stop-end formwork can be **flexibly adapted to different wall thicknesses** by the two integrated hole-grids.

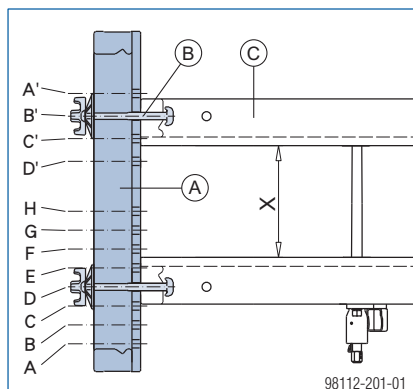


- A** Framax Xlife universal panel 0.90m
- B** Framax universal fixing bolt + Super plate 15.0
- C** Framax Xlife plus panel (panel width > 0.30m)

| Combination | Wall thickness X | |
|----------------|------------------|--------------------|
| A' with H to A | 16 to 51 cm | in 5 cm increments |
| B' with H to A | 10 to 45 cm | |
| C' with H to A | 4 to 39 cm | |
| D' with G to A | 3 to 33 cm | |


Universal panel 3.30m

The continuous **5 cm hole-grid** makes it possible to form stop-ends on walls of **up to 60 cm thick**.

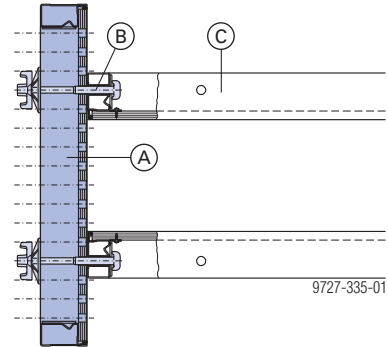

- A** Framax Xlife universal panel 0.90m
- B** Framax universal fixing bolt + Super plate 15.0
- C** Framax Xlife plus panel (panel width > 0.30m)

Stop-ends with joint-sealing tapes

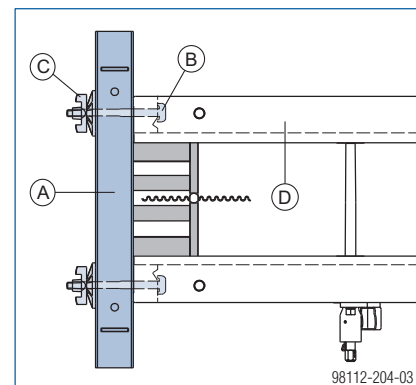


- A** Framax universal waling or Multi-purpose waling WS10 Top50
- B** Framax universal fixing bolt
- C** Super plate 15.0
- D** Framax Xlife plus panel

Wall junctions, offsets and steps


Connecting to existing walls

Right-angled connections

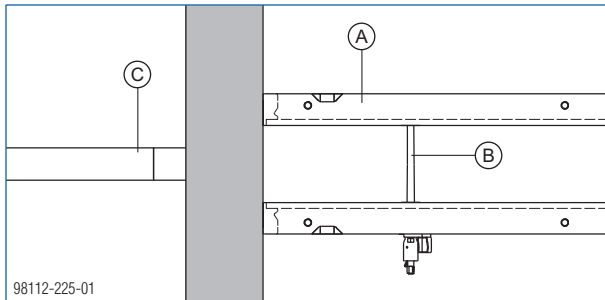


- A** Framax Xlife plus panel
- B** Tie rod system Framax Xlife plus 20.0
- C** Timber brace

In-line connections

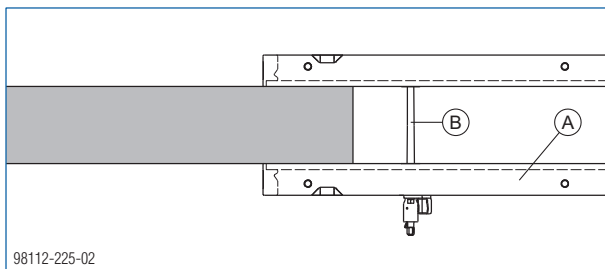

- A** Framax Xlife plus panel
- B** Tie rod system Framax Xlife plus 20.0


Corner connections

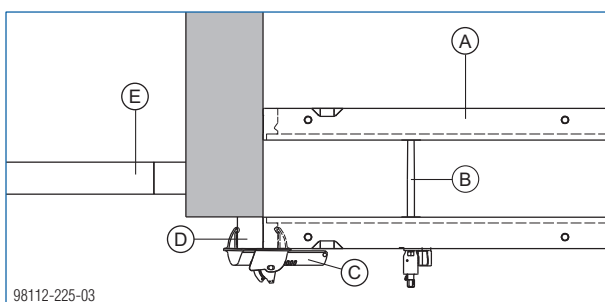

- A** Framax Xlife plus panel
- B** Tie rod system Framax Xlife plus 20.0
- C** Framax multi function clamp
- D** Squared timber
- E** Timber brace

Wall steps


Wall step of 10 cm

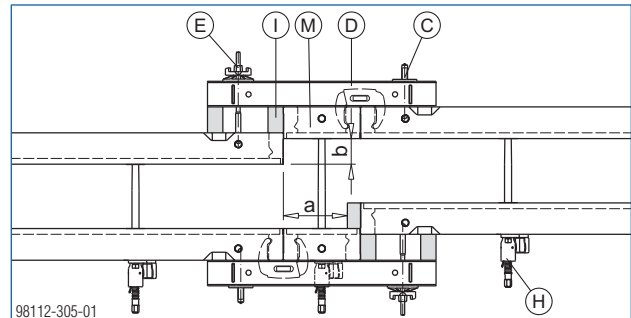

- a ... 30 cm
- b ... 10 cm

- C** Framax wedge clamp
- D** Framax universal waling 0.90m
- E** Super plate 15.0 + Framax universal fixing bolt 10-25cm
- H** Tie rod system Framax Xlife plus 20.0
- I** Squared timber
- M** Framax Xlife plus panel 0.30m

Wall step from 10 to 45 cm






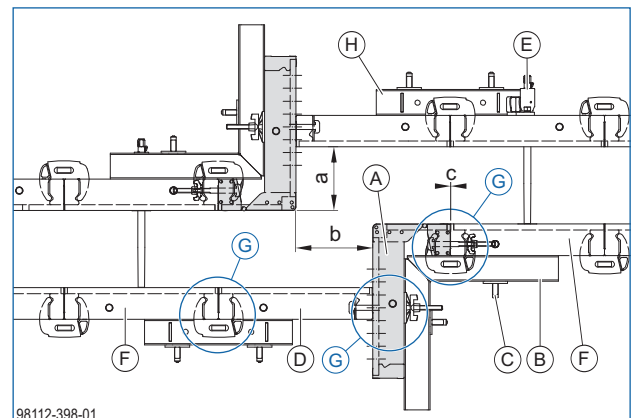


- a ... 10 to 45 cm, in 5 cm increments
- b ... max. 30 cm
- c ... 0 cm (no closure permitted!)

- A** Framax Xlife pilaster panel right
- B** Framax universal corner waling
- C** Framax wedge clamp
- D** Framax Xlife plus panel 0.45m - 0.75m
- E** Tie rod system Framax Xlife plus 20.0
- F** Framax Xlife plus panel 0.45m - 0.60m
- G** Inter-panel connection (see the section headed [Inter-panel connections with wall step 10 - 45 cm](#))


Permitted fresh-concrete pressure: 60kN/m² (acting on whole area)

Inter-panel connections with wall step 10 - 45 cm
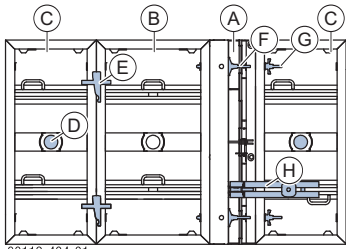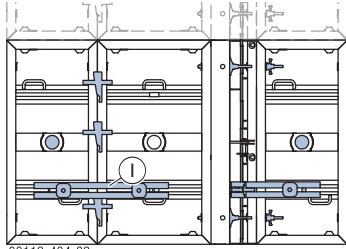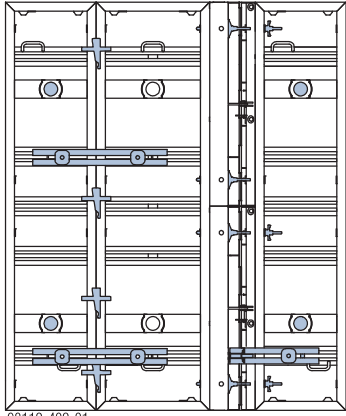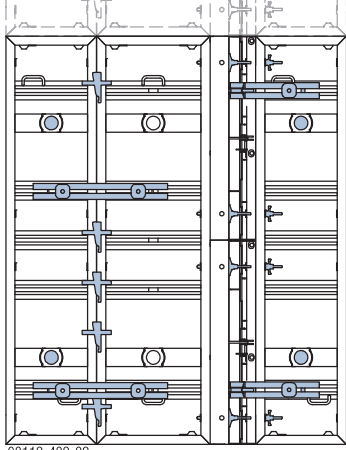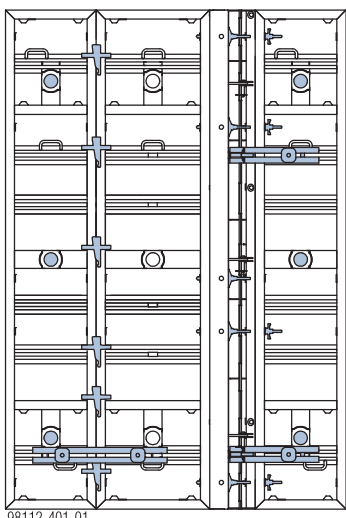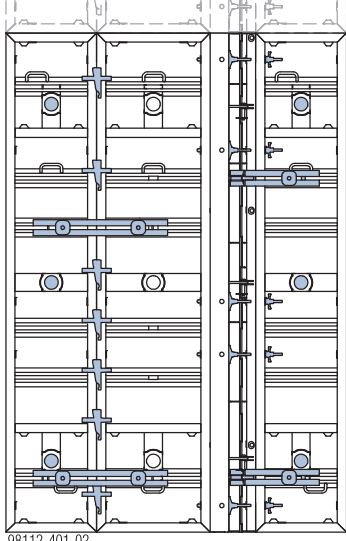
| | | Fresh-concrete pressure $\sigma_{hk, max}$ | |
|--------------|--------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| | | 16.9 kN/m ² (hydrostatic) | 60 kN/m ² (acting on whole area) |
| Panel height | 1.35 m |  <p>98112-404-01</p> |  <p>98112-404-02</p> |
| | 2.70 m |  <p>98112-402-01</p> |  <p>98112-402-02</p> |
| | 3.30 m |  <p>98112-401-01</p> |  <p>98112-401-02</p> |

- A** Framax Xlife pilaster panel right
- B** Framax Xlife plus panel **0.45m - 0.75m**
- C** Framax Xlife plus panel **0.45m - 0.60m**
- D** Framax Xlife plus form tie 20.0
- E** Framax quick acting clamp RU
- F** Framax universal fixing bolt + Super plate 15.0
- G** Framax universal fixing bolt + Star grip nut 15.0 G
- H** Framax universal corner waling + 2 Framax wedge clamps
- I** Framax universal waling + 2 Framax wedge clamps

Wall step from 35 to 90 cm

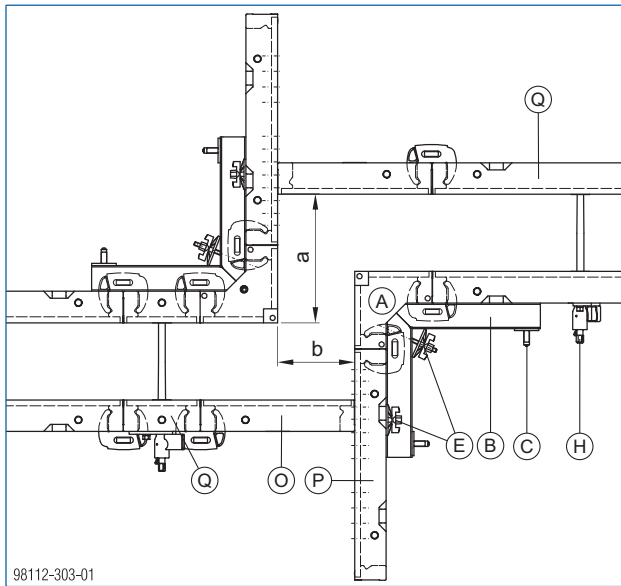

a ... 35 to 90 cm, in 5 cm increments

b ... 30 cm

A Framax Xlife plus inside corner 30/30cm or
Framax Xlife inside corner

B Framax universal corner waling

C Framax wedge clamp


E Super plate 15.0 + Framax universal fixing bolt

H Tie rod system Framax Xlife plus 20.0

O Framax Xlife plus panel 0.60m

P Framax Xlife universal panel 0.90m

Q Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

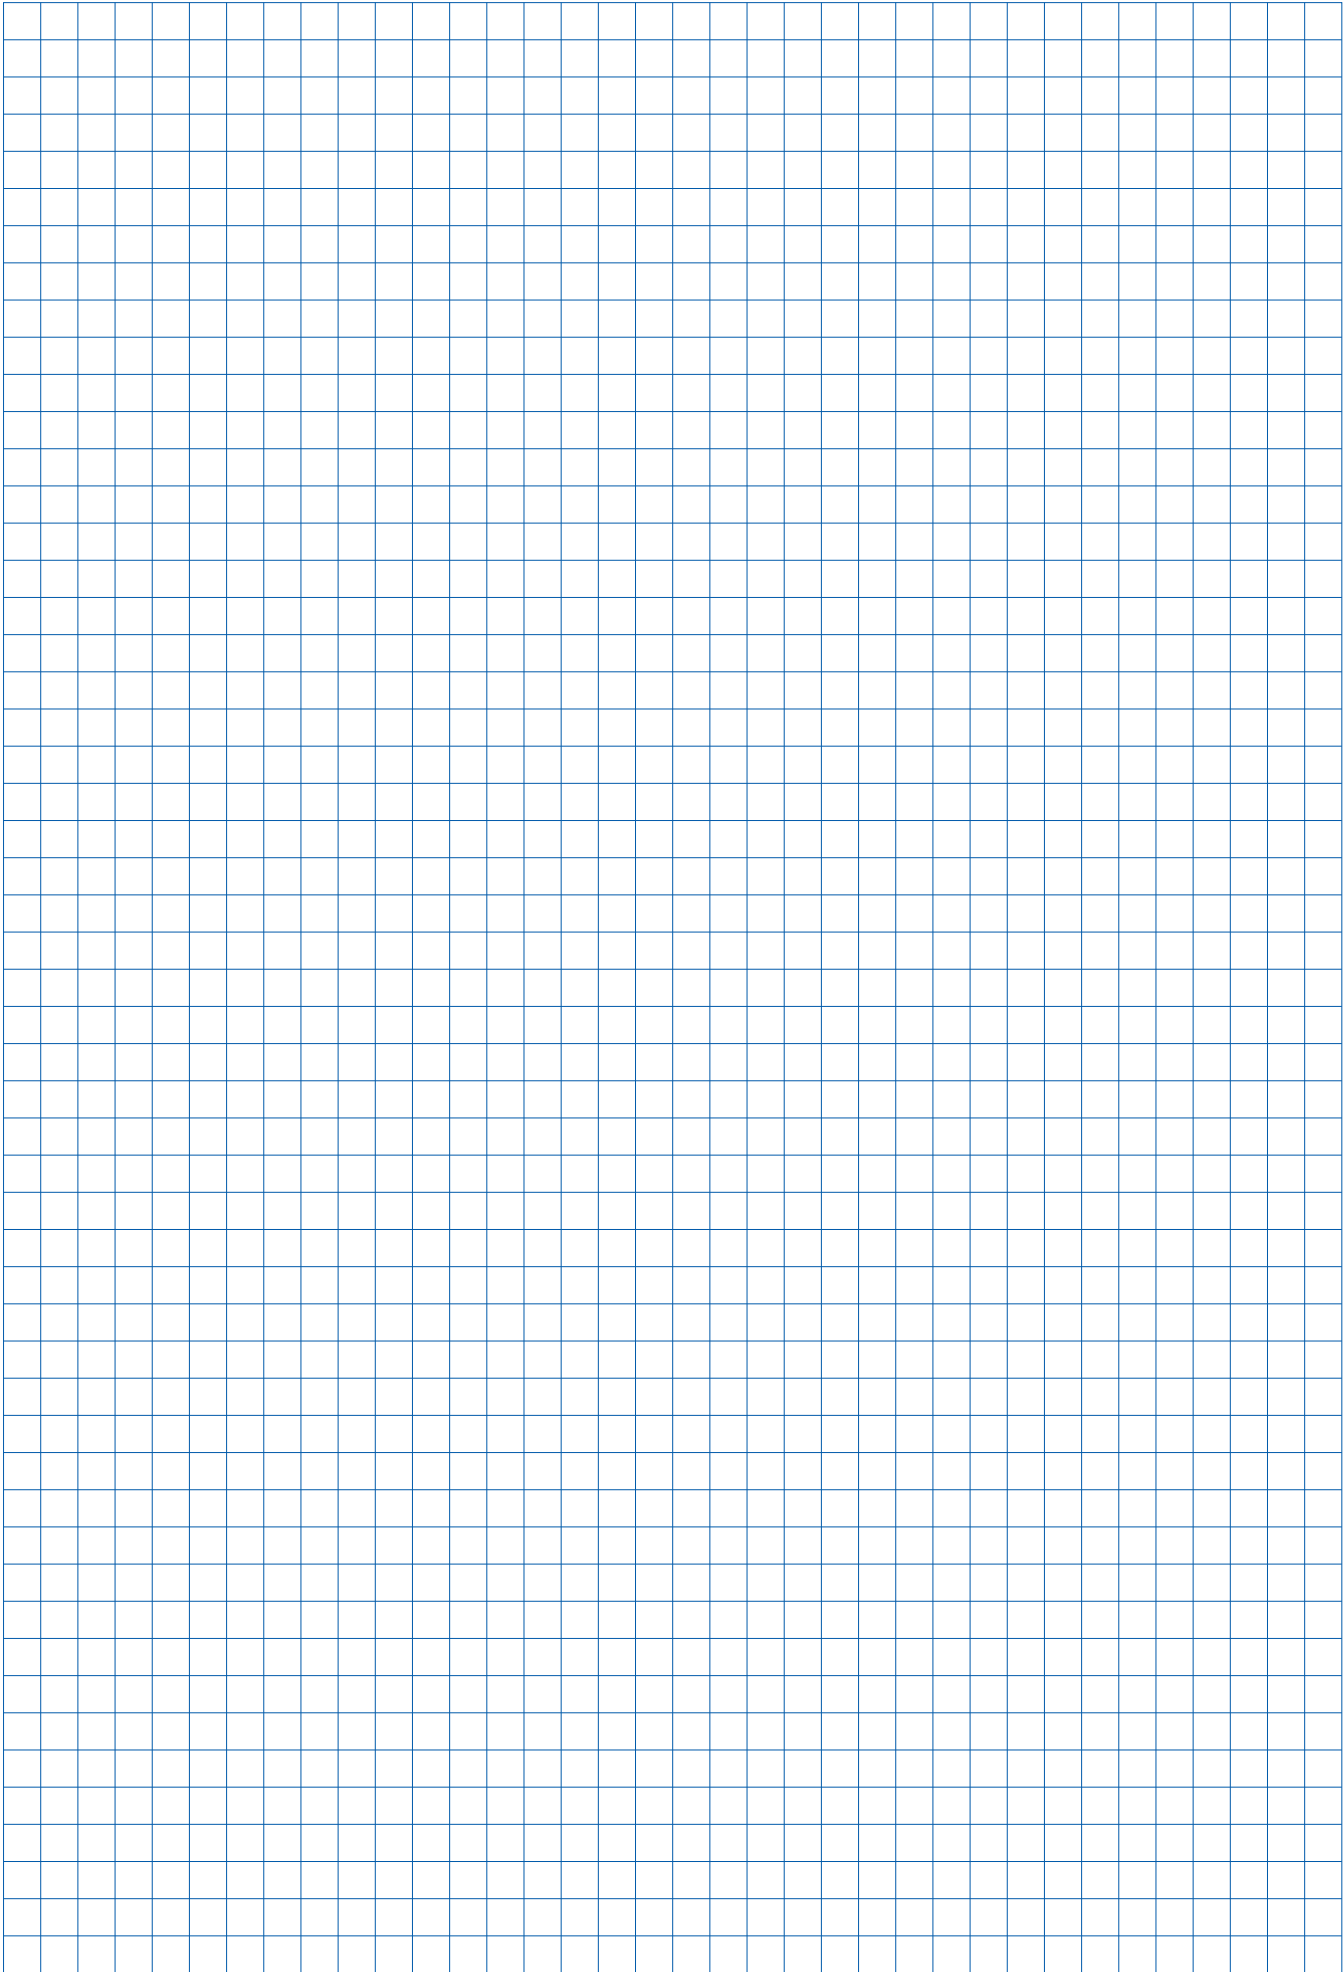

Wall thickness >45 and up to 60 cm

The following form ties are used for wall thicknesses > 45 and up to 60 cm:

- Framax Xlife plus form tie 20.0 45-60cm
- Framax head anchor 15-100cm

For more information, see the section headed [Tie rod system Framax Xlife plus](#).

Note:

For wall thicknesses > 45 and up to 60 cm, the descriptions in this document apply with the following exceptions taken into account:

- **Inter-panel connection near stop-end formwork**
- **Inter-panel connection near outside corners**

Inter-panel connections for increased tensile loads:


For each panel joint up to 1.35 m:

- 2 additional clamps

For each panel joint between 1.35 m and 2.70 m:

- 1 additional clamp

Inter-panel connection near stop-end formwork

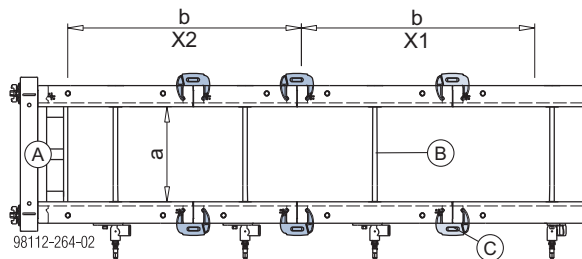

a ... wall thickness (> 45 and up to 60 cm)

b ... 1.35 m

X1 ... 1 additional clamp

X2 ... 2 additional clamps

A Stop-end formwork (see the section headed [Stop-end formwork](#))

B Framax Xlife plus form tie 20.0 45-60cm

C Framax quick acting clamp RU

Inter-panel connections near outside corners

Note:


For more information, see the section headed [90 degree corners](#).



NOTICE

When forming walls in the thickness range > 45 and up to 60 cm, take the lower permitted fresh-concrete pressure in the corner area into account!

Permitted fresh-concrete pressure: 60 kN/m²

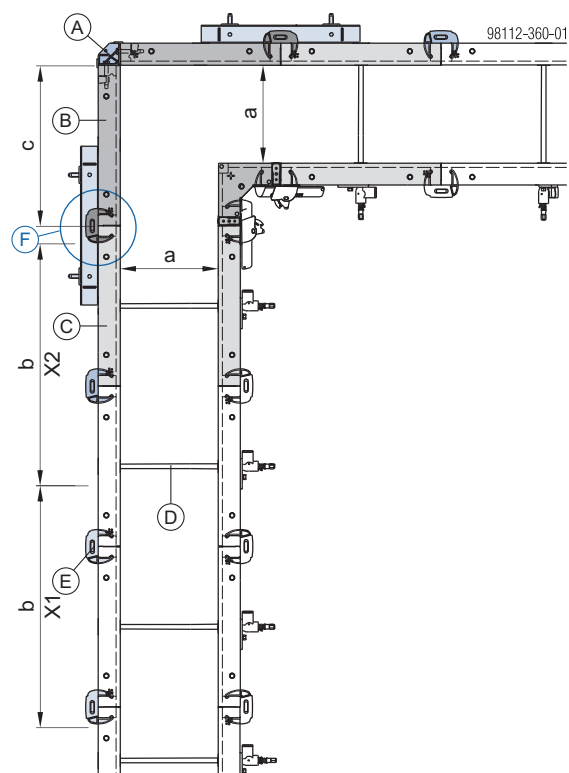

a ... wall thickness (> 45 and up to 60 cm)

b ... 1.35 m

X1 ... 1 additional clamp

X2 ... 2 additional clamps

c ... panel width 75 cm (a = 45 cm) or 90 cm (a = 45 - 60cm)

A Framax outside corner or
Framax Xlife plus outs. corner 10/10cm

B Framax Xlife plus panel 0.75m / 0.90m

C Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)

D Framax Xlife plus form tie 20.0 45-60cm







E Framax quick acting clamp RU

F Inter-panel connection (see table 'Inter-panel connection, corner gangform with adjoining Framax Xlife plus panel')

Required number of connectors**Outside corner:**

| Height of outside corner | Quick acting clamp RU | Tensioning wedge + wedge bolt |
|--------------------------|-----------------------|-------------------------------|
| 0.60 m | 2 | 2 |
| 1.35 m | — | 4 |
| 2.70 m | — | 8 |
| 3.00 m | — | 8 |
| 3.30 m | — | 10 |

Inter-panel connection, corner gangform with adjoining Framax Xlife plus panel
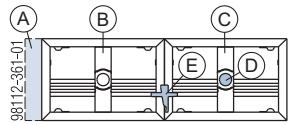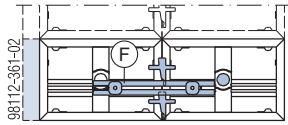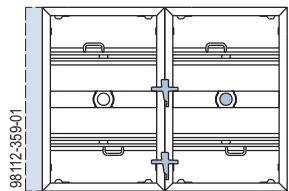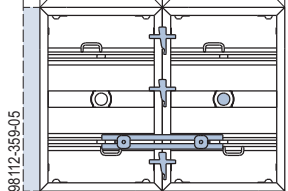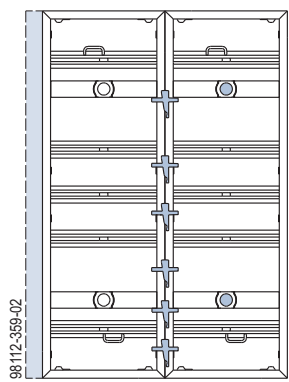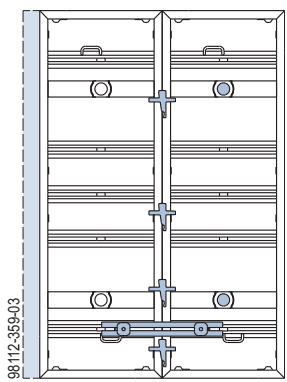
| Fresh-concrete pressure $\sigma_{hk, max, hydr} = 60 \text{ kN/m}^2$ (hydrostatic) | | Fresh-concrete pressure $\sigma_{hk, max} = 60 \text{ kN/m}^2$ (acting on whole area) | |
|------------------------------------------------------------------------------------|-------|---------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Situation 1 | | Situation 2 | |
| Panel height | 0.60m |  |  |
| | 1.35m |  |  |
| | 2.70m |  |  |

A Outside corner (Framax Xlife plus outs. corner 10/10cm / Framax outside corner; Inter-panel connection, see the section on the outside corner used)

B Framax Xlife plus panel **0.75m / 0.90m**

C Framax Xlife plus panel
(no 1.35m or 3.00m wide panel!)


D Framax Xlife plus form tie 20.0 45-60cm

E Framax quick acting clamp RU
(or Framax multi function clamp for a closure)

F Framax universal waling + 2 Framax wedge clamps

Alternative with Quick acting clamp RU and universal fixing bolt (fresh-concrete pressure acting on whole area)


| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|-----------------------|----------------------------------------------|
| 0.60 m | 1 | 1 |
| 1.35 m | 3 | 2 |
| 2.70 m | 5 | 3 |

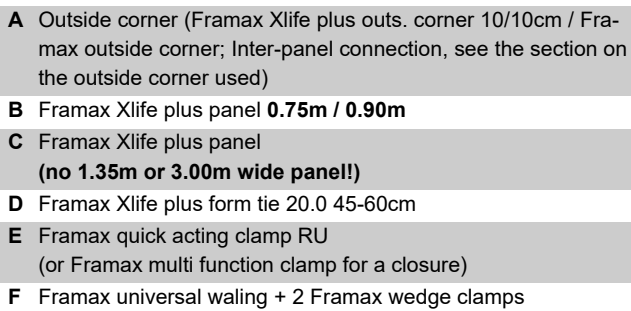

| Panel height | Quick acting clamp RU | Universal fixing bolt + Star grip nut 15.0 G |
|--------------|--------------------------|-------------------------------------------------|
| 3.00 m | 4 | 4 |
| 3.30 m | 5 | 4 |


Window and door openings

Window and door box-outs can be formed quickly and stripped out non-destructively with **box-out clamps**. Planks are fixed in the box-out clamps by means of the integrated star grip nuts.

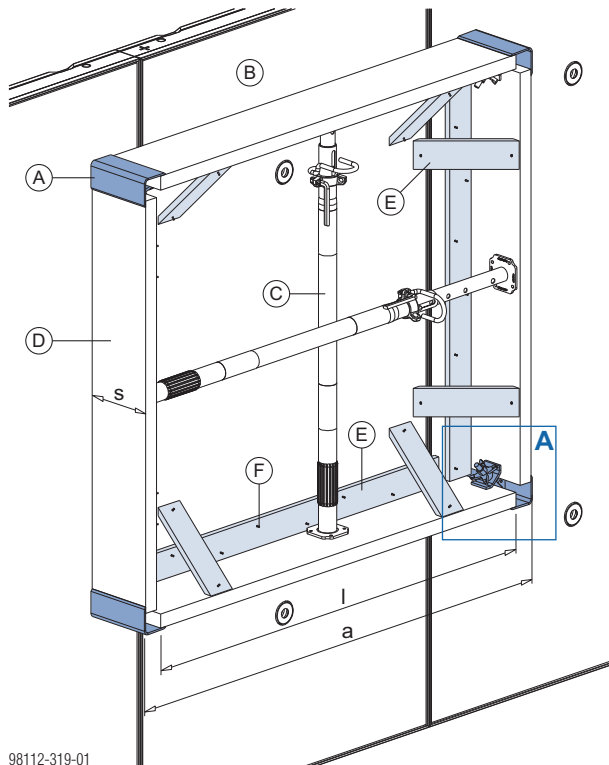

98112-319-01

Close-up A:

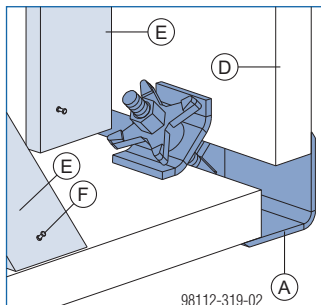

98112-319-02


a ... clear width of opening
l ... length of plank = a minus 12 cm
s ... plank width = wall thickness

- A Box-out clamp
- B Framax Xlife plus panel
- C Doka floor prop
- D Plank (wall thickness/2-5 cm)
- E Board (10/3 cm)
- F Double-headed nail

Assembly:

- Place the box-out clamps on the ground, fit boards into them and tighten the star grip nuts.
- Fasten the box-outs to the wall formwork with boards 10/3 cm and nails.
- Brace vertically and horizontally with suitable floor props (as statically required).

Plumbing accessories

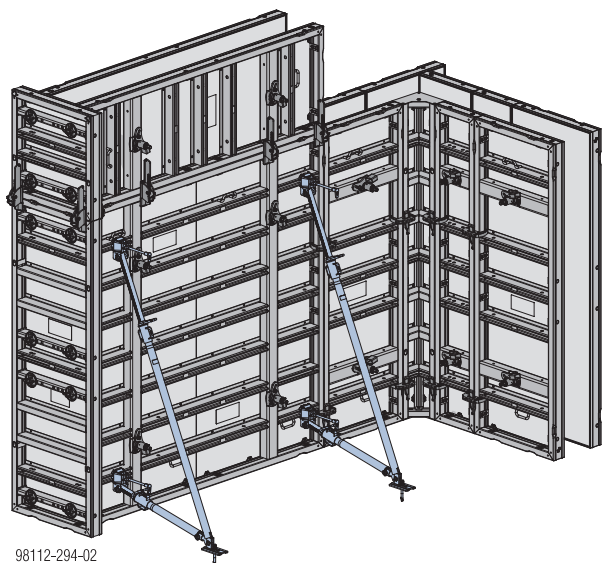

98112-294-02

Plumbing accessories brace the formwork against wind loads and make it easier to plumb and align the formwork.



WARNING

Risk of the formwork tipping over!

- Formwork panels must be held stable in **every phase** of construction work!
- Observe all applicable safety regulations!
- If **high wind speeds** are likely, and when work finishes for the day or before prolonged work-breaks, always take extra precautions to fix the formwork in place.


Suitable precautions:

- set up the opposing formwork
- place the formwork against a wall
- anchor the formwork to the ground (e.g. with Framax floor fixing plates)
- The safety pin is only for rough adjustment of the plumbing accessory. Do not attempt to remove or release the safety pin under load.



Universal dismantling tool

For easy operation of the spindle nuts.



Number of struts per 2.70 m width of gang-form:

| Formwork height [m] | Panel strut | | Eurex 60 550 |
|-------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----|--------------|
| | 340 | 540 | |
| 4.05 | 1 ^{*)} | — | — |
| 5.40 | — | 1 | — |
| 6.00 | 1 | 1 | — |
| 7.20 | 1 | 2 | — |
| 8.10 | — | 1 | 1 |
| Max. anchoring load: $F_{\text{exist}} = 13.5 \text{ kN}$ (actual load) $F_d = 20.3 \text{ kN}$ (design value incl. safety factors) | | | |

^{*)} Up to a height of 3.30 m, the spacing of the struts can be extended to 4.05 m apart.

Note:

- The values apply where the wind pressure $w_e = 0.65 \text{ kN/m}^2$. This results in a peak velocity pressure $q_p = 0.5 \text{ kN/m}^2$ (102 km/h) where $c_{p, \text{net}} = 1.3$. The greater wind loads encountered at exposed formwork-ends must be restrained by additional plumbing accessories (e.g. struts or pipe-braces). In cases where higher wind pressure is encountered, the number of struts must be determined by statical calculation!
- Values apply for an angle α of the plumbing strut of 60° .
- Values do not apply for gang-forms in the edge zone or for free-standing gang-forms.
 - Gang-forms in the edge zone must be supported by at least 2 plumbing accessories.
 - Free-standing gang-forms must be supported by at least 2 plumbing accessories.



For more information, see the Calculation Guide 'Wind loads to the Eurocodes', or consult your Doka technician!

Example: Where the formwork height is 7.20 m, the following are needed for every 5.40 m wide gang-form:



- 2 Panel struts 340
- 4 Panel struts 540

Pre-assembly


- Install heads on the plumbing accessory.
- Fix the plumbing accessory to the formwork and to the ground (see connection possibilities below for details).
- Precision adjustment of the plumbing strut with adjusting nut.



Safety pin (A) must be pushed all the way into the plumbing accessory.

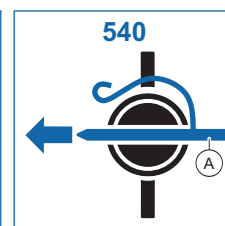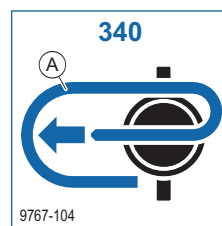

Fixing the struts to the formwork

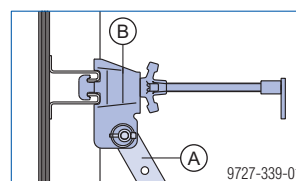


- A Panel strut 340 IB or 540 IB
- B Prop head EB

Animation: <https://player.vimeo.com/video/268536814>

Fixing to the ground

- Anchor the plumbing accessories in such a way as to resist tensile and compressive forces!


Drilled holes in footplate

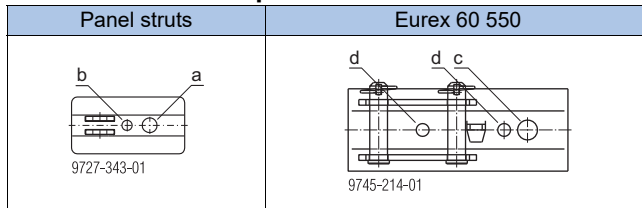

- a ... diam. 26 mm
 b ... diam. 18 mm (suitable for Doka express anchors)
 c ... diam. 28 mm
 d ... diam. 18 mm (suitable for Doka express anchors)

Anchoring the footplate

The **Doka express anchor** can be re-used many times over.

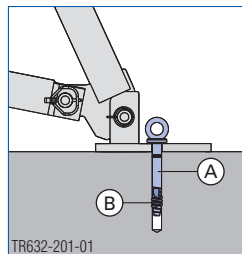

- A** Doka express anchor 16x125mm
B Doka coil 16mm

Characteristic cube compressive strength of the concrete ($f_{ck, cube}$): min. 15 N/mm² (C12/15 grade concrete)



Follow the directions in the 'Doka express anchor 16x125mm' User information booklet!

Required safe working load of alternative anchors:

$$F_d \geq 20.3 \text{ kN} \quad (F_{exist} \geq 13.5 \text{ kN})$$

Follow the manufacturers' applicable fitting instructions.


Fixing the framed formwork panel to the ground

with floor fixing plates


The Framax floor fixing plate is used to fix and secure framed formwork panels:

- As safeguard against lift-out by the wind.
- When panel struts are used without adjusting struts (plumbing struts).

Example: Use with plumbing strut

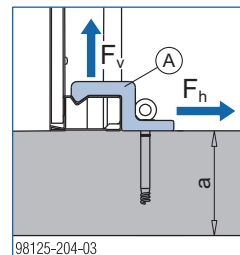


a ... min. 18 cm

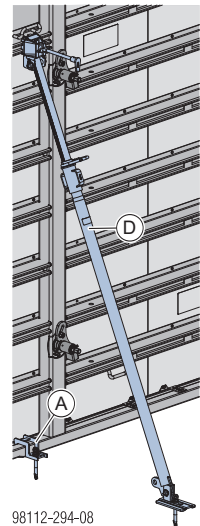

Distance from edge to panel outside edge: min. 15 cm

- A** Framax floor fixing plate
D Plumbing strut 340 IB or 540 IB

Install a Framax floor fixing plate underneath each plumbing strut.

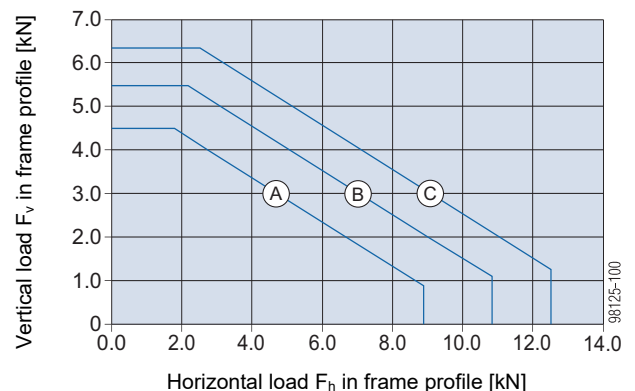


| | Characteristic cube compressive strength of the concrete $f_{ck, cube}$ | Max. anchoring load | |
|-----|-------------------------------------------------------------------------|---------------------|---------|
| | | F_{exist} | F_d |
| (A) | 10 N/mm ² (C8/10 grade concrete) | 9.2 kN | 13.8 kN |
| (B) | 15 N/mm ² (C12/15 grade concrete) | 11.2 kN | 16.8 kN |
| (C) | 20 N/mm ² (C16/20 grade concrete) | 12.9 kN | 19.4 kN |

Panel struts

Product features:

- Can be telescoped in 8 cm increments
- Fine adjustment by screw-thread
- All parts are captively integrated - including the telescopic tube (has safety stop to prevent dropout)

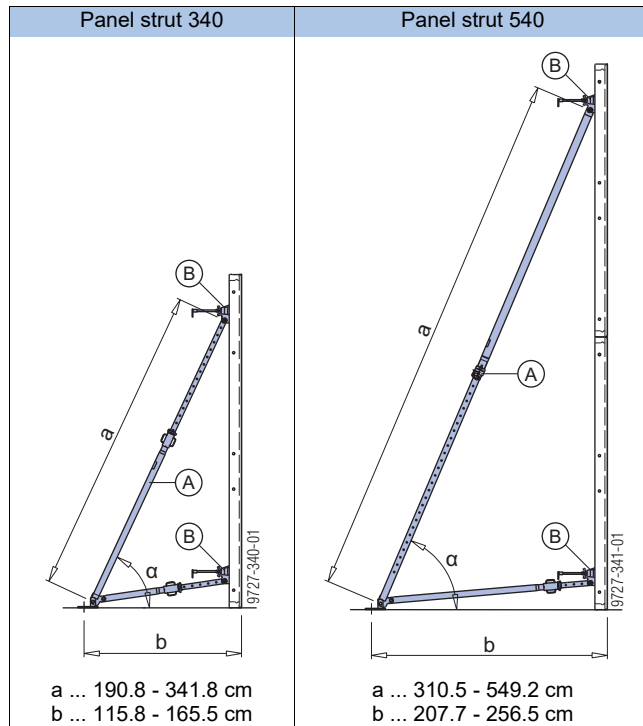

α ... approx. 60°

A Panel strut 340 IB or 540 IB

B Prop head EB


Eurex 60 550 used as a shoring & plumbing accessory

As the Doka plumbing strut Eurex 60 550 - fitted with the appropriate accessories - this prop can also be used **for shoring high wall formwork**.


- Can be connected directly – without modification – to Doka framed formwork and Doka timber-beam formwork
- The Adjusting strut 540 Eurex 60 IB makes handling much easier, especially when the formwork is being transferred.
- Can be telescoped in 10 cm increments, with continuous fine adjustment.



Follow the directions in the 'Eurex 60 550' User Information booklet!

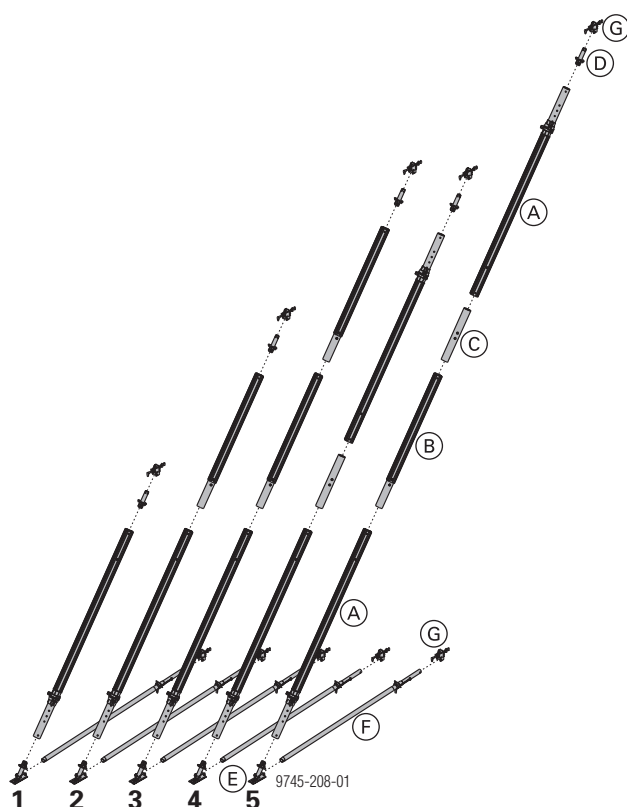

Example of a possible combination of type 2

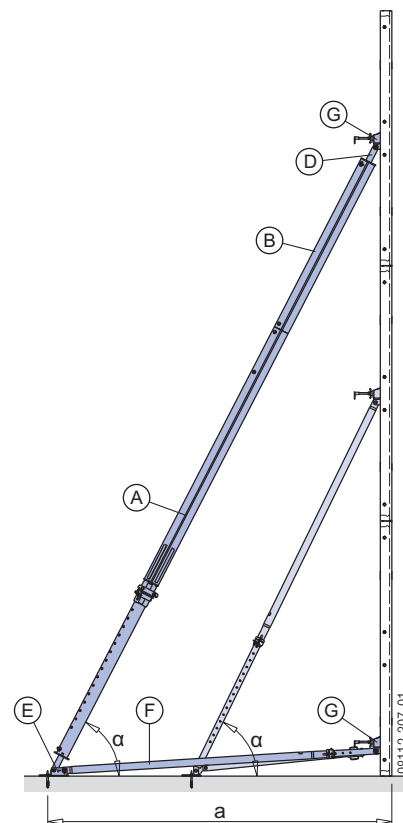

a ... 345.2 - 586.5 cm

α ... approx. 60°

A Plumbing strut Eurex 60 550

B Extension Eurex 60 2.00m

D Connector Eurex 60 IB

E Plumbing strut shoe Eurex 60 EB

F Adjusting strut 540 Eurex 60 IB

G Prop head EB


The rule-of-thumb here is:

The length of the shoring & plumbing accessory (i.e. the complete Eurex 60 550 plumbing-strut assembly) = the height of the gang-form to be braced.

| Type | Length extended L [m] | Plumbing strut Eurex 60 550 (A) | Extension Eurex 60 2.00m (B) | Coupler Eurex 60 (C) | Connector Eurex 60 IB (D) | Plumbing strut shoe Eurex 60 EB (E) | Adjusting strut 540 Eurex 60 IB (F) | Prop head EB (G) | Weight [kg] |
|------|-----------------------|---------------------------------|------------------------------|----------------------|---------------------------|-------------------------------------|-------------------------------------|------------------|-------------|
| 1 | 3.79 - 5.89 | 1 | — | — | 1 | 1 | 1 | 2 | 91.1 |
| 2 | 5.79 - 7.89 | 1 | 1 | — | 1 | 1 | 1 | 2 | 112.4 |
| 3 | 7.79 - 9.89 | 1 | 2 | — | 1 | 1 | 1 | 2 | 133.7 |
| 4 | 7.22 - 11.42 | 2 | — | 1 | 1 | 1 | 1 | 2 | 142.5 |
| 5 | 9.22 - 13.42 | 2 | 1 | 1 | 1 | 1 | 1 | 2 | 163.8 |

Pouring platforms

can be quickly readied for use, and make concreting both easy and safe.

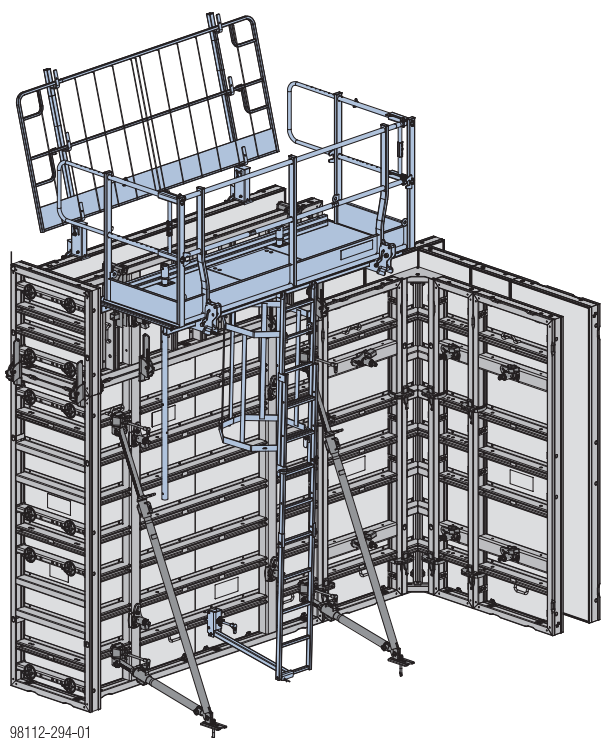


Xsafe plus platform

These pre-assembled, fold-out working platforms with their integral side railings, self-closing man-hole lids and integrable ladders are ready for immediate use and greatly improve workplace safety.

Note:

For detailed information on platform sizes, handling and accessories, see the 'Xsafe platform system plus' User Information booklet.

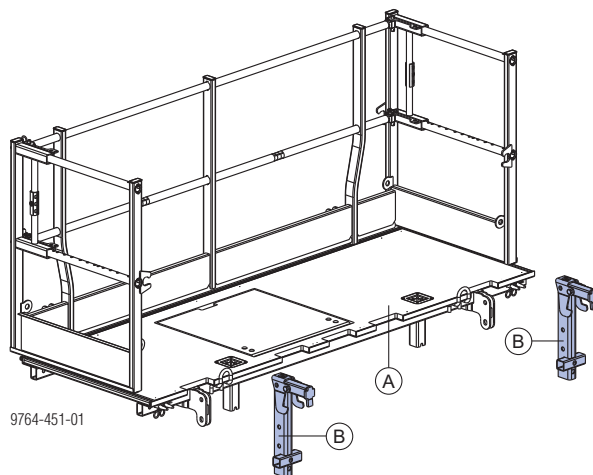

A Xsafe plus platform

B Xsafe plus lifting adapter Framax (2 per platform)

Permitted service load: 1.5 kN/m² (150 kg/m²)

Load Class 2 to EN 12811-1:2003


Preconditions for using the Xsafe plus platform with the Xsafe plus lifting adapter Framax:

- max. one platform level
- max. vertical stacking configuration where the gang-form is assembled face-down on the ground and has a width of 2.70 m:

Basic panel (2.70m / 3.00m / 3.30m) + 1.35m

Mounting the lifting adapter onto the platform:

- Use Connecting pins 10cm and Spring cotters 5mm to mount the lifting adapter to the platform.

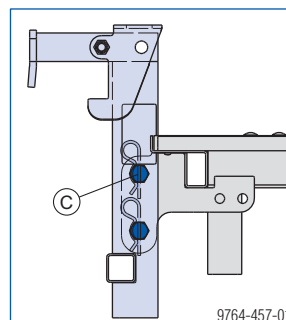

C Connecting pin 10cm and Spring cotter 5mm of the Xsafe plus platform

Precondition for use

Observe all applicable safety regulations.

Only fit pouring platforms to formwork structures of adequate stability ensuring that the expected loads can be taken.

Ensure that the formwork gang is sufficiently rigid.

Brace the formwork in a windproof manner when erecting it or when it is temporarily placed in the standing position.




NOTICE

If the formwork is lifted with the pouring platform still mounted to it, the platform must be secured so that it cannot slip to either side.

Lifting the platform onto the formwork:


- ▶ Attach a 4-part lifting chain (e.g. Doka 4-part chain 3.20m) to the platform and hoist it towards the formwork.

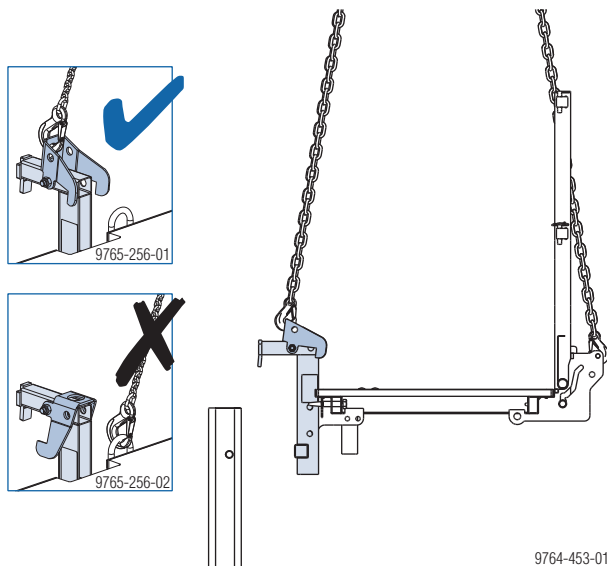

- ▶ Fix the platform to the top of the formwork.


Note:

On **horizontal panels**, mount the platform so that it is perfectly aligned with the panel (bearing profile of the lifting adapter is resting on the function profile of the panel).

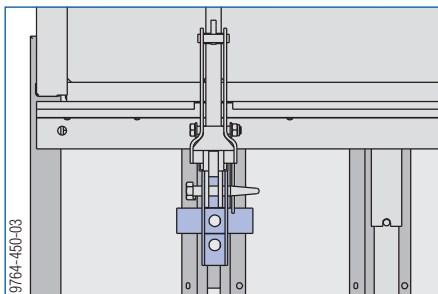

If under exceptional circumstances the platform is mounted at an offset to the outer edge of the panel, the bearing profile of the lifting adapter has to be widened.

- ▶ Push a hollow section into the bearing profile and secure it with a screw to prevent it dropping out.

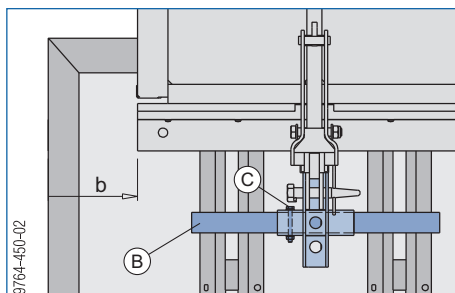

b ... offset

B Hollow section 40x40x2, L=550 mm, with diam. 10 mm borehole (site-provided)

C Hexagon bolt M8x65 + hexagon nut M8

Consequently, the bearing profile of the lifting adapter is resting on two function profiles of the panel.


- ▶ Detach the 4-part lifting chain.

The securing hooks latch into place automatically.



Do a sight-check to make sure that the securing hooks have latched into place!

The platform is now secured against accidental lift-out.

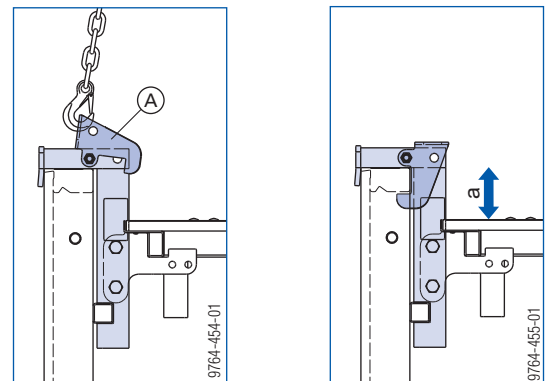

a ... 13 cm

A Securing hook

The level of the floor planking is 13 cm below the top edge of the formwork. This means that there is a 'boundary' on the side facing the formwork.

Lifting the platform off the formwork:

- ▶ Attach a four-part lifting chain to the platform and raise it.

When the platform is raised by the four-part lifting chain on the safety hook, the platform is automatically unlocked.


Extending the platform to either side

The platform can be lengthened at either end by using the **Xsafe plus platform extension 0.60m**.

**CAUTION**

Platforms with platform extensions can tip up. Falling hazard!


- ▶ Do not step onto the **platform extension** until the safety hooks have been fixed in place.
- ▶ **Fix the safety hooks** of both lifting adapters with Framax universal fixing bolts and Super plates 15.0.

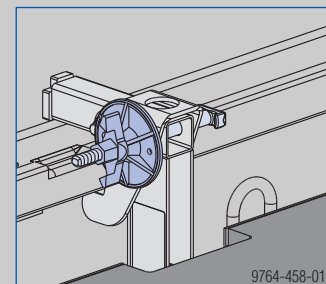

Xsafe plus telescopic ladder

Telescoping the ladder:


- Extend the Xsafe plus telescopic ladder or Xsafe aluminium telescopic ladder 1.55-2.70m to the required length and secure it with hinged pins (insert from outside to inside).

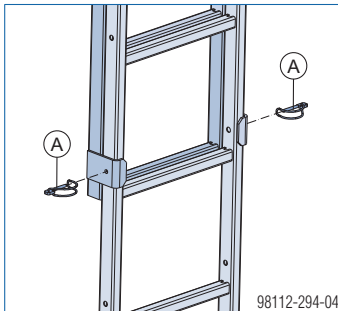

A Hinged pin (included in the scope of supply of the ladder)





- Check that the hinged pin is inserted the right way round!
- The clip of each hinged pin must be closed!

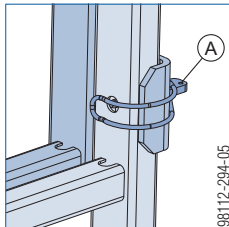

Connection to the Xsafe plus platform:

- Hook the telescopic ladder into the integrated ladder connection.
- Secure with Spring cotters 5mm.

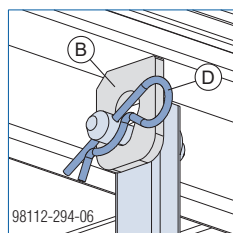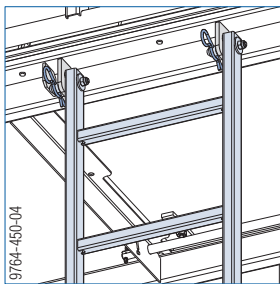


B Integrated ladder connection on the Xsafe plus platform


D Spring cotter 5mm



- The groove in the ladder pin (**C**) must be engaged in the hole of the ladder connection (**B**) !
- The ladder must be secured with Spring cotters 5mm (**D**) !

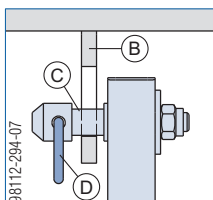

Connection to the formwork:

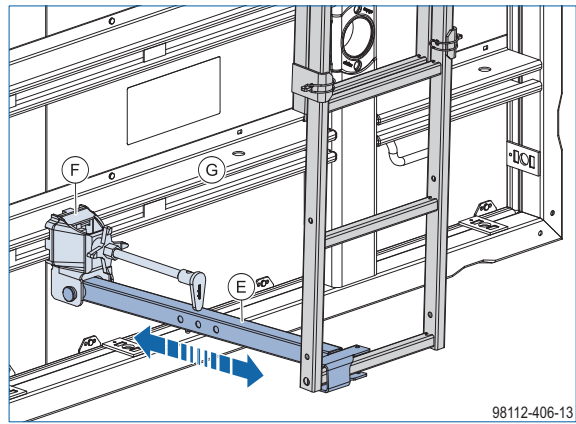

E Xsafe universal ladder holder

F Prop head EB

G Function profile of the Framax Xlife plus panel

Moving the formwork and the platform in one piece

The **Framax lifting hook** makes it possible to reposition or raise the formwork and Xsafe plus platform upright in one piece.




CAUTION


Use for raising upright or laying down formwork with basic panel height 2.70m, 3.00m or 3.30m with a vertical stacking > 1.35m is not permitted!

- In these cases, remove the platform before raising upright / laying down the formwork.

Repositioning:

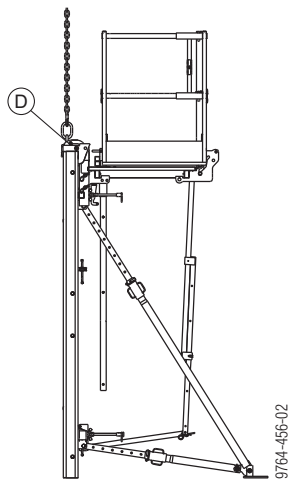

Raising upright / laying down:

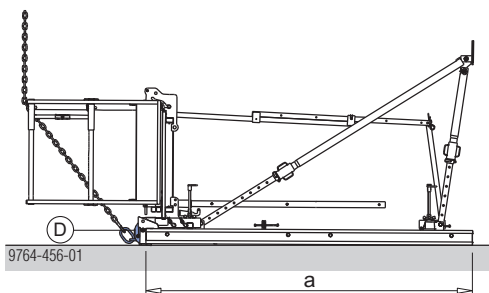


a ... Basic panel (2.70m / 3.00m / 3.30m) + 1.35m max.

D Framax lifting hook

Framax pouring platform U 1.25/2.70m

A pre-assembled, foldable, ready-to-use platform, 1.25 m wide, for convenient and safe working.

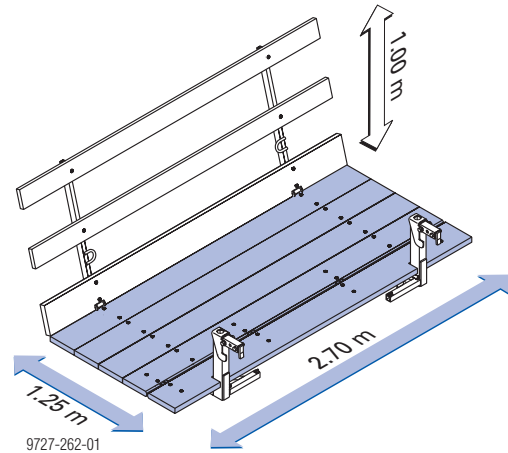

Permitted service load: 1.5 kN/m² (150 kg/m²)

Load Class 2 to EN 12811-1:2003




NOTICE

- It is not permissible to lay the formwork down flat together with the pouring platform!
- Planks can be used to bridge decking-to-decking gaps up to 50 cm for length adaptation. Minimum plank overlap 25 cm.
- The pouring platform cannot be installed if **Framax Xlife plus panels 0.60m** are used at the top for vertical stacking.
 - Use Framax Xlife plus panels 0.60m at the bottom for vertical stacking.



Other possible areas of use for the Framax pouring platform U:

- Framed formwork Framax Xlife
- Framed formwork Alu-Framax Xlife
- Large-area formwork Top 50 (with Top50 adapter for Framax pouring platform U)
- Wall formwork FF20 (with FF20 adapter for Framax pouring platform U)
- The level of the floor planking is 30 cm below the top edge of the formwork. This means that there is a 'boundary' on the side facing the formwork.
- The guard rail can be locked in either of two positions:
 - vertical
 - tilted by 15°
- Tilt-back board:
 - The front deck-board can be tilted back so that panel struts can be attached to the panel.
 - This lets you get at form ties at the top of the formwork, and makes room for any projecting universal walings.

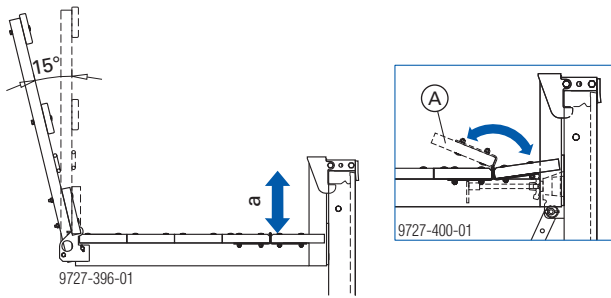


a ... 30 cm


A Tilt-back board

Preparing the pouring platform:

- Tilt up the guard rails and lock them in position.

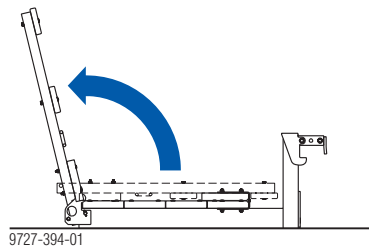

- Put both side stops into position.

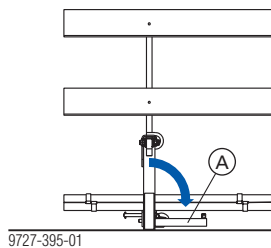


A Side stop


- Close the decking with the tilt-back board.

Lifting the platform onto the formwork:

- Attach a four-part lifting chain (e.g. Doka 4-part chain 3.20m) to the pouring platform and hoist it towards the formwork.

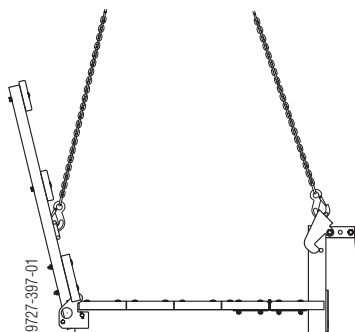

- Fix the pouring platform to the top of the formwork.

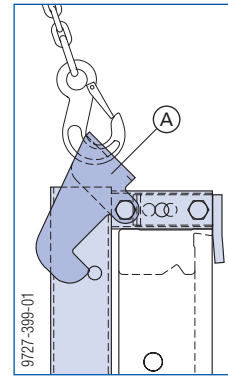


A Safety hook

- Detach the four-part lifting chain.
The safety hooks latch into place automatically.



Do a sight check to make sure that the safety hooks have latched into place!

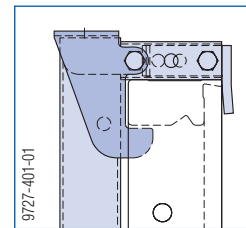

The pouring platform is now secured against accidental lift-out.



Lifting the platform off the formwork:

- Attach a four-part lifting chain to the pouring platform and raise it.
When the pouring platform is raised by the four-part lifting chain on the safety hook, the platform is automatically unlocked.

Transporting, stacking and storing

Stack of 10 Framax pouring platforms U

Single collapsed platform

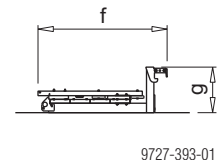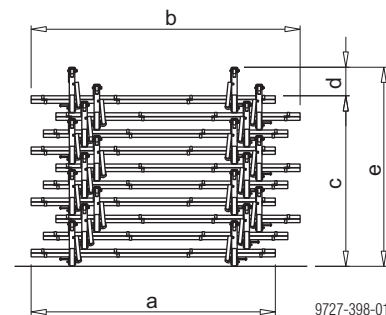

- a ... 268 cm
- b ... 295 cm
- c ... 10 x 18.7 cm
- d ... 31 cm
- e ... approx. 218 cm
- f ... 142 cm
- g ... 50 cm

Moving the formwork and the platform in one piece

The **Framax lifting hook** allows the formwork to be repositioned together with the pouring platform.




NOTICE

It is not permissible to set up or lay the formwork down flat together with the pouring platform!

Framax pouring platform O

1.25/2.70m

A pre-assembled, foldable, ready-to-use platform, 1.25 m wide, for convenient and safe working.

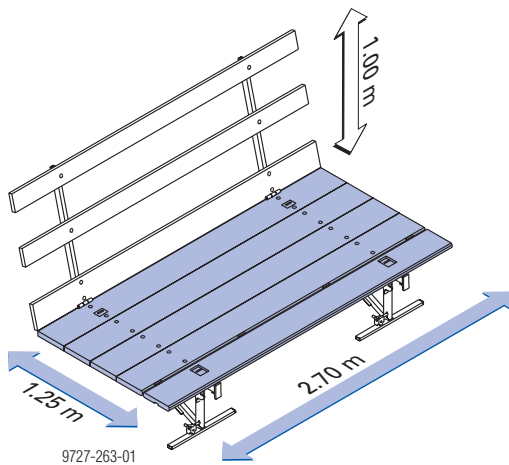

Permitted service load: 1.5 kN/m² (150 kg/m²)

Load Class 2 to EN 12811-1:2003




NOTICE

- It is not permissible to lay the formwork down flat together with the pouring platform!
- Planks can be used to bridge decking-to-decking gaps up to 50 cm for length adaptation. Minimum plank overlap 25 cm.



Other possible areas of use for the Framax pouring platform O:


- Framed formwork Framax Xlife
- Framed formwork Alu-Framax Xlife
- Large-area formwork Top 50 and Wall formwork FF20 - with Top50 adapter for Framax pouring platform O
- The level of the floor planking is above the top edge of the formwork.
- The guard rail can be locked in either of two positions:
 - vertical
 - tilted by 15°
- Tilt-back board:
 - The platform decking protects the formwork from concrete spatter.
 - This lets you get at form ties at the top of the formwork, and makes room for any projecting universal walings.

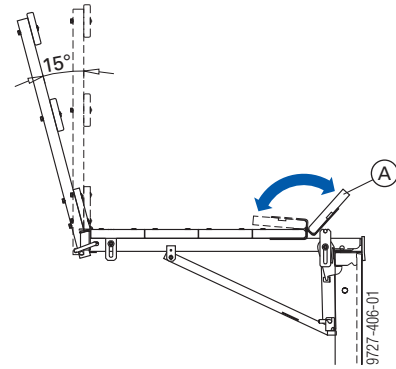


A Tilt-back board

Preparing the pouring platform:

- Tilt up the guard rails and lock them in position.

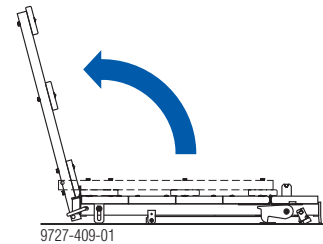


- Unfold the bracket (A) and latch it into place.

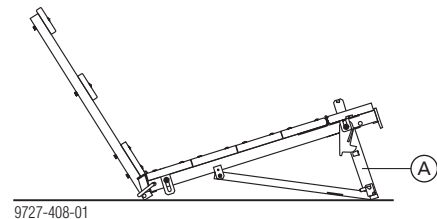


Lifting the platform onto the formwork:

- Attach a four-part lifting tackle (e.g. Doka 4-part chain 3.20m) to the pouring platform and hoist it towards the formwork.

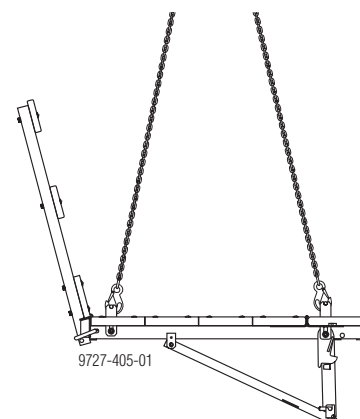

- Fix the pouring platform to the top of the formwork.

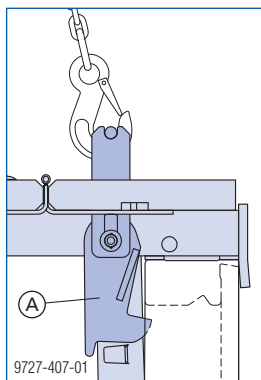


A Safety hook

- Detach the four-part lifting tackle. The safety hooks latch into place automatically.



Perform a sight-check of the crane-hoisting points recessed into the decking.

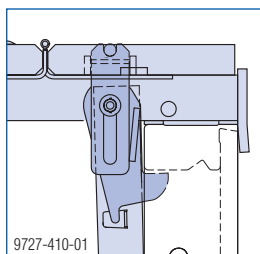

The pouring platform is now secured against accidental lift-out.


Lifting the platform off the formwork:

- Attach a four-part lifting tackle to the pouring platform and raise it. When the pouring platform is raised by the four-part lifting tackle on the crane suspension hook, the platform is automatically unlocked.


Transporting, stacking and storing

Stack of 12 Framax pouring platforms O

Single collapsed platform

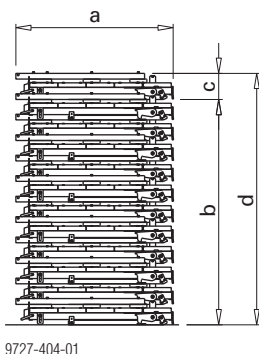

a ... 138 cm
b ... 11 x 18 cm
c ... 23 cm
d ... approx. 220 cm

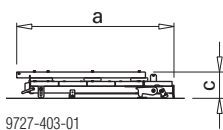

Moving the formwork and the platform in one piece

The **Framax lifting hook** allows the formwork to be repositioned together with the pouring platform.



NOTICE

It is not permissible to set up or lay the formwork down flat together with the pouring platform!

Sideguards on exposed platform-ends


On pouring platforms that do not completely encircle the structure, suitable sideguards must be placed across exposed end-of-platform zones.

Note:

The plank and board thicknesses stated comply with the EN 338 C24 timber.

Observe all national regulations applying to deck and guardrail boards.

Side handrail clamping unit T

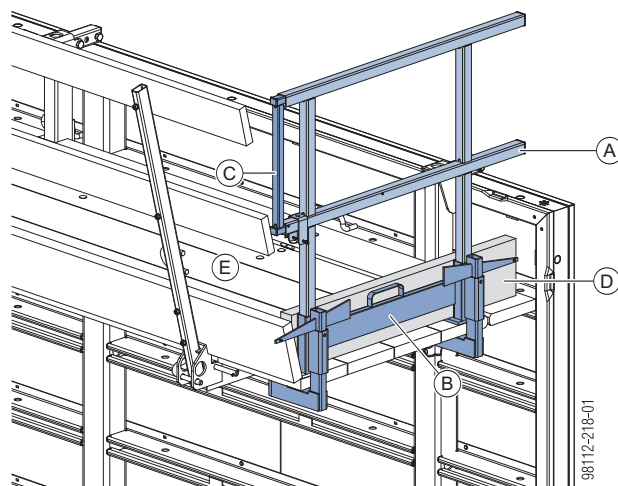

A Side handrail clamping unit T

B Clamping part

C Integrated telescopic railing


D Guardrail board min. 15/3 cm (site-provided)

E Pouring platform

Installation:

- Use the wedge (clamping range 4 to 6 cm) to fasten the clamping part to the decking of the pouring platform.
- Slot in the railing.
- Extend the telescopic railing to the desired length and secure it.
- Insert toeboard (guardrail board).

Pouring platforms with single brackets

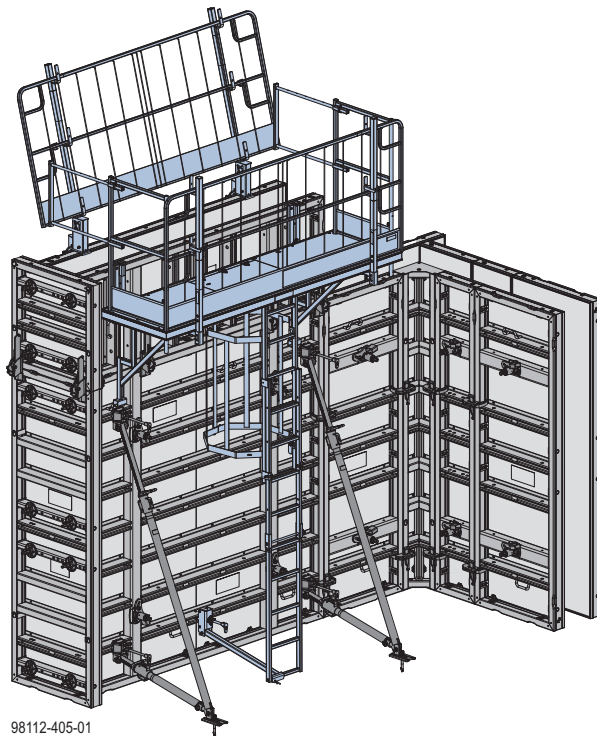

98112-405-01

Precondition for use


Observe all applicable safety regulations.

Only fit pouring platforms to formwork structures of adequate stability ensuring that the expected loads can be taken.

Ensure that the formwork gang is sufficiently rigid.

Brace the formwork in a windproof manner when erecting it or when it is temporarily placed in the standing position.

Xsafe bracket system

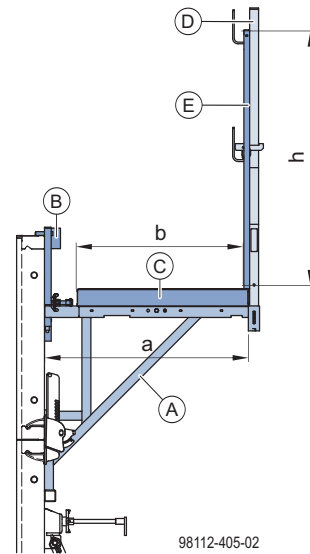

98112-405-02

a ... 90 cm
b ... 75 cm
h ... 114 cm

- A** Bracket XBS 90 EP
- B** Framax adapter XBS
- C** Deck XBS
- D** Handrail post XBS 1.40m
- E** Protective grating XP 1.20m

Permitted service load: 1.5 kN/m² (150 kg/m²)

Load Class 2 to EN 12811-1:2003

Max. influence width: 2.00 m

Framax adapter XBS

The Framax adapter XBS is used to install the Bracket XBS 90 EP on the Framax Xlife plus panel.


The movable clamping bolt allows the adapter to be adjusted flexibly to the respective position of the function profile.




NOTICE

The bearing surface of the adapter must fit flush with the frame or cross profile.


Possible fixing options

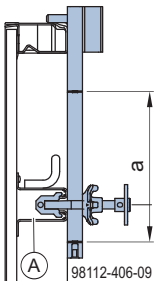


a ... Adjusting range 28 cm

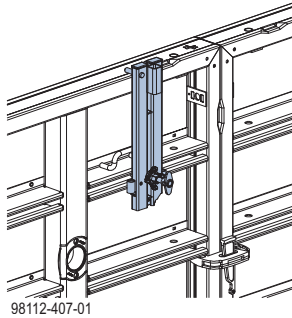

Panel upright

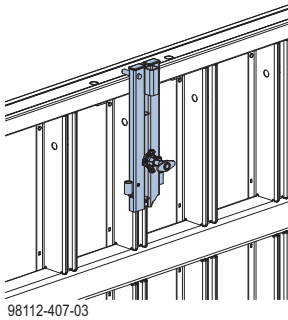


Panel on its side

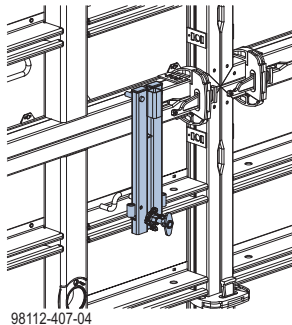

Inter-panel joint

Deck XBS 75

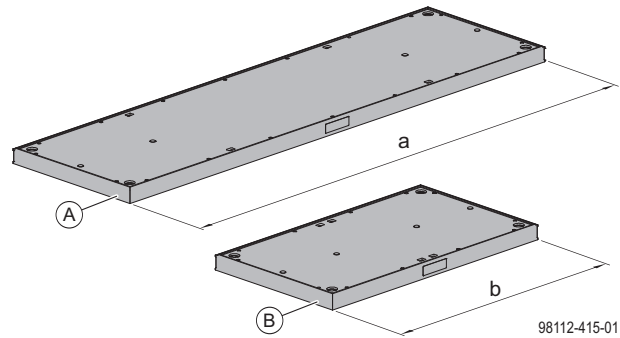


a ... 267.5 cm
b ... 132.5 cm

A Deck or Hatch deck XBS 75/270cm

B Deck XBS 75/135cm

Note:

The toothed strip engages in the securing hook of the bracket and serves to prevent the deck from tipping.

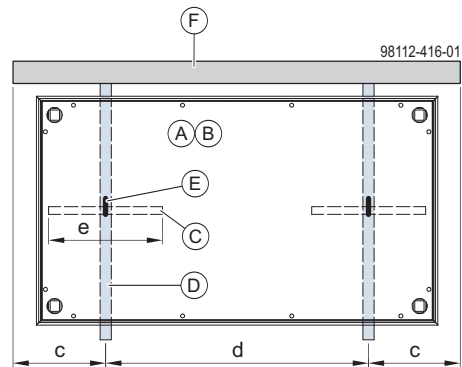

View from above

| Deck XBS 75/270cm (A) | Deck XBS 75/135cm (B) |
|-----------------------|-----------------------|
| c... 11 to 50 cm | 11 to 38 cm |
| d... 170 to 248 cm | 59 to 113 cm |
| e... 39 cm | 27 cm |

C Toothed strip of the deck XBS

D Bracket XBS

E Securing hook of the bracket XBS

F Formwork panel

Erection sequence



NOTICE



- For working at heights that cannot be reached from the floor, use a suitable elevated platform (e.g. Platform stairway 0.97m, Wheel-around scaffold DF or mobile scaffold tower)!
- Always comply with the country-specific safety regulations!
- Do not step on to the pouring platform until an all-round guardrail system (including counter railing) is in place!
Otherwise wear a personal fall-arrest system (e.g. safety harness)!

Note:


For details of the procedures for setting up and stripping the formwork, see the sections headed [Instructions for assembly and use for room-high formwork](#) and [Instructions for assembly and use for high formwork](#).

Horizontal assembly

- Pre-assemble the gang-form face-down on a prepared flat area (see the section headed [Inter-panel connections](#)).
- Attach the Tie-off set PPE type A for the personal fall-arrest system to the frame profile or function profile.


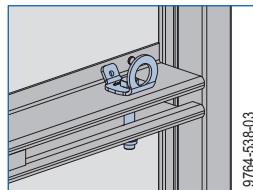
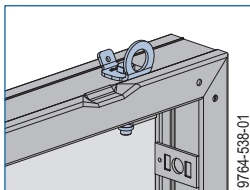


- Install the Framax adapter XBS on the gang-form while it is laid flat.

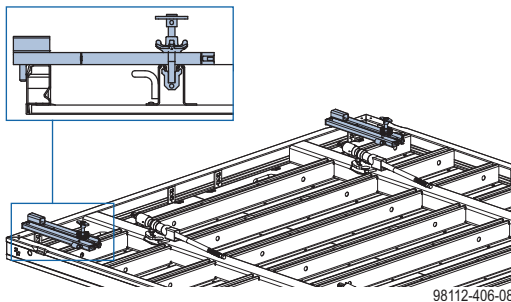

Check whether the bearing surface of the adapter is flush with the frame or cross profile.



- Hook the Bracket XBS 90 EP into the adapter. The bracket is hooked in correctly when the indicator on the adapter shows green.

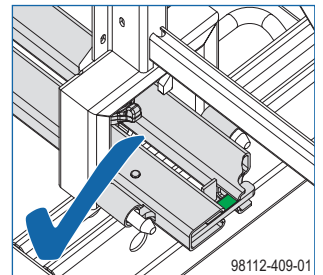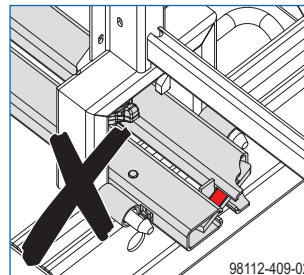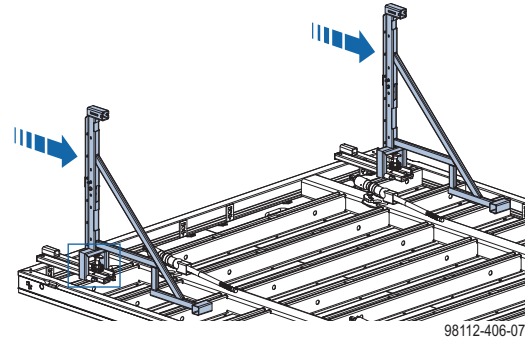

- Ensure that the securing hook of the bracket is in its operational position. Otherwise remove the safety pin (A), fold up the securing hook, insert the safety pin again and secure the safety pin (A) with a linch pin.

Parking position for wooden planks

Operational position for deck XBS

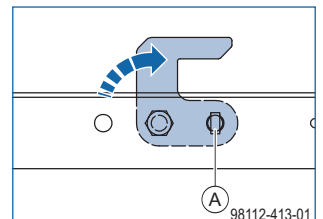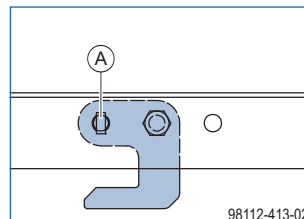

Wooden planks can also be used as platform decking instead of the deck XBS.


The wooden planks are secured from below using wood screws.

In this case the securing hook remains in parking position.

**NOTICE**


- Observe the installation direction for Hatch deck XBS 75/270cm! The hinges of the manhole lid must be on the formwork side.

- Push deck XBS onto the brackets. The securing hooks of the brackets must engage in the two toothed strips of the deck.

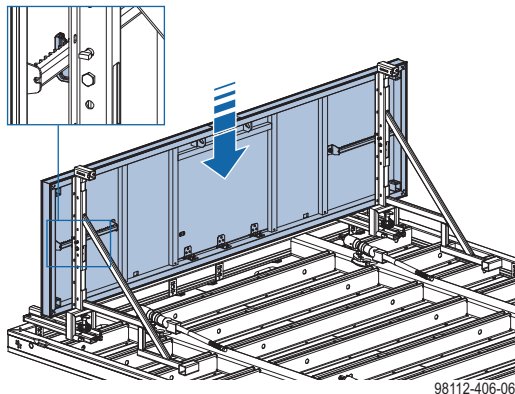


Do a sight-check to ensure that both brackets are hooked into the toothed strips to prevent slipping or tipping.

- Attach Handrail posts XBS 1.40m until the lock engages ('Easy-Click' function) and push the anti-lift-out guard of the handrail posts upwards.

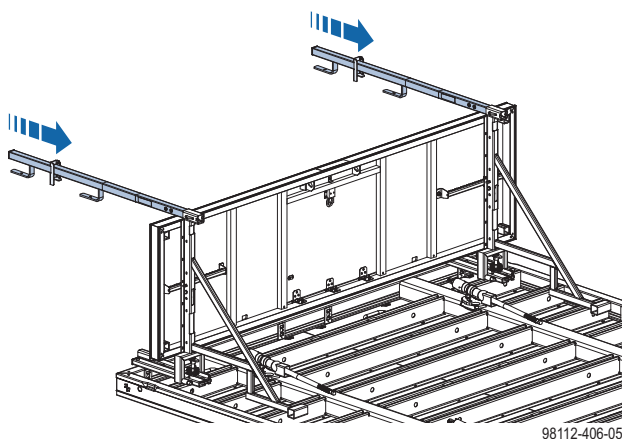


When the handrail posts have been installed, the decking is secured against being lifted out.

- Hook in protective grating XP and push the anti-lift-out guard down again. Before installing the protective grating, observe the notices in the section headed [Lifting the formwork and Xsafe bracket system in one piece!](#)

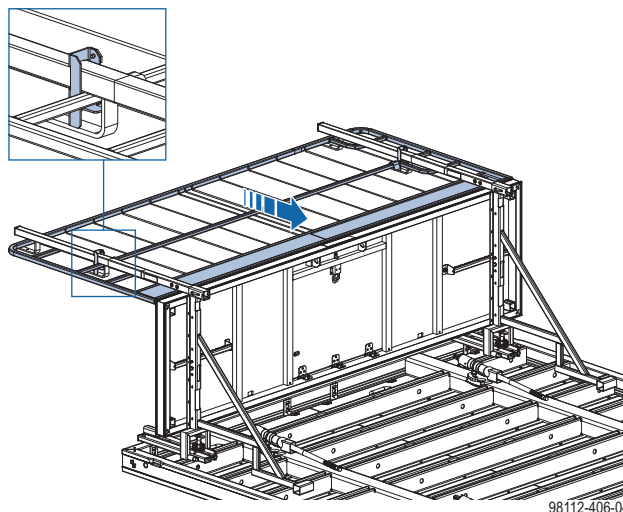

- Install panel struts (see the section headed [Plumbing accessories](#)).
- With Hatch deck XBS 75/270cm, install Xsafe plus telescopic ladder (see the section headed [Xsafe plus telescopic ladder](#)).
- Place suitable sideguards across exposed end-of-platform zones on pouring platforms that do not completely encircle the structure (see the section headed [Sideguards on exposed platform-ends](#)).
- Lift the gang-form to its new location (see the section headed [Lifting the formwork and Xsafe bracket system in one piece](#)).
- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Fix the panel struts to the ground stably.

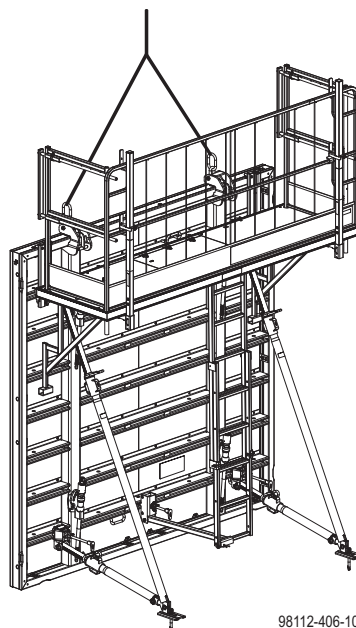


The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.

**WARNING**

No all-round guardrail system present on the pouring platform!

Danger to life from fatal falls!


- Use a personal fall-arrest system (e.g. safety harness)
The Tie-off set PPE type A (A) connected to the framed formwork panel serves as attachment point.

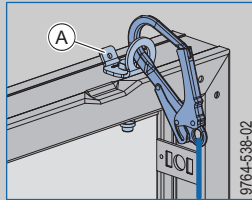

- Detach the gang-form from the crane.
- Dismantling is the reverse of the assembly procedure.

Assembling in the upright

- Pre-assemble the gang-form face-down on a prepared flat area (see the section headed [Inter-panel connections](#)).
- Mount panel struts to the gang-form while it is laid flat (see the section headed [Plumbing accessories](#)).

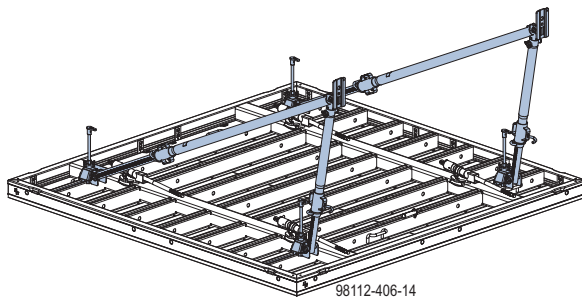


- Raise the gang-form by crane.
- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Lift the gang-form to its new location.
- Fix the panel struts to the ground stably.
The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.
- Use the Framax assembling tool to disengage the Framax lifting hooks from the gang-form (see the section headed [Lifting by crane](#)).

Mounting the pouring platform:

The pouring platform is installed from an elevated platform (e.g. Wheel-around scaffold DF).

**NOTICE**

- If the formwork height is 3.30m, install the brackets in the second function profile from the top to ensure reachability for installation from the elevated platform.
- Install the pouring platform from the elevated platform. (Installation steps and details, see the section headed [Horizontal assembly](#)).

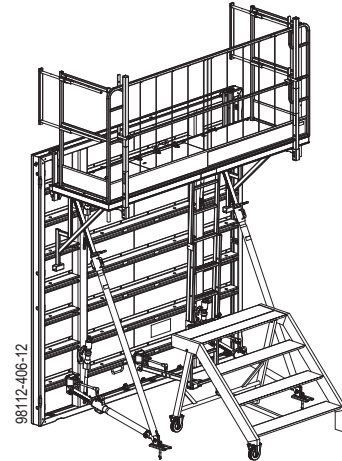

Dismantling is the reverse of the assembly procedure.

Lifting the formwork and Xsafe bracket system in one piece

The **Framax lifting hook** allows the formwork to be raised, repositioned and laid down for cleaning together with the Xsafe bracket system (see the section headed [Lifting by crane](#)).




Before repositioning, ensure that the decking is secured with the two securing hooks and handrail posts.

CAUTION

- ▶ Raising upright / laying down with installed edge protection and laying down for cleaning is only permitted up to a formwork weight of 760 kg (corresponding to basic panel height 2.70m, 3.00m or 3.30m with a vertical stacking of max. 1.35m).


Raising upright / laying down:

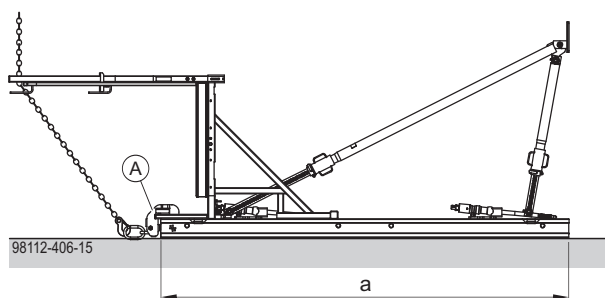

NOTICE

With a formwork weight of > 760 kg, remove the edge protection before raising upright / laying down!

Laying down for cleaning:

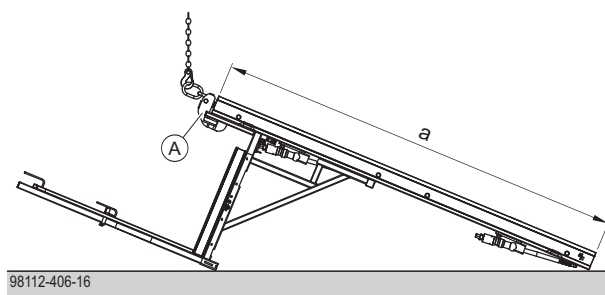

a ... basic panel (2.70m / 3.00m / 3.30m) + 1.35m max.

A Framax lifting hook



NOTICE

- Laying down for cleaning is permitted only with max. one deck level!
- Before laying down for cleaning, remove the panel struts (and fold down or remove the telescopic ladder, if applicable)!


Gap Filler Plank

The infill deck XBS allows deck openings in the Xsafe bracket system from 0.30 to 1.35 m to be bridged.

The infill deck XBS can be used in the straight wall or in inside corners (see the section headed [Inside corners](#)).

Note:

The infill deck is secured on one side and rests free on the other side.

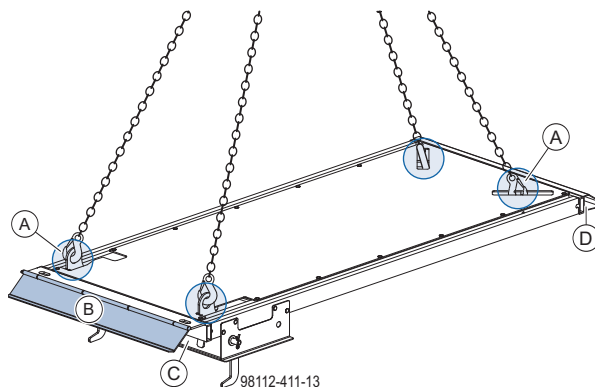


A Crane lifting point

B Deck hatch

C Secured side

D Resting side

Secured side with securing housing in detail

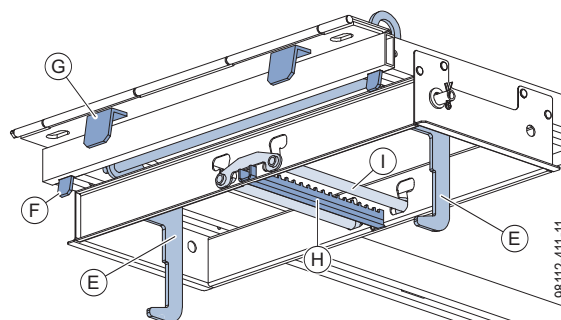

View from below

E Securing element

F Suspension plate for hooking into deck XBS

G Suspension plate for hooking into infill deck XBS


H Toothed strip for securing the position

I Anti-slip guard




NOTICE

- The infill deck must have at least 25 cm contact on the resting side.
- Sufficient contact is assured if the crane attachment openings (J) are completely covered by the deck below.

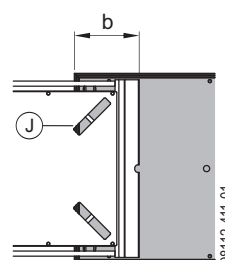

b ... min. 25 cm

Closure in the straight wall

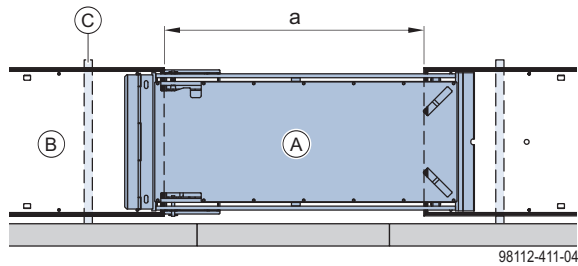

a ... 0.30m - 1.35m

A Infill deck XBS


B Deck XBS

C Bracket XBS

Installation:

First install the standard XBS decks and secure with handrail post, only then install the infill deck.


- Push the securing element towards the frame (1) and swing up (2).

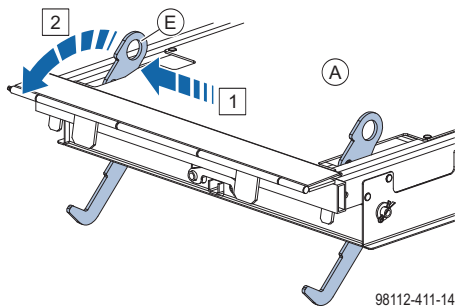


A Infill deck XBS

E Securing element

- Swing the securing element on the crane lifting point down.

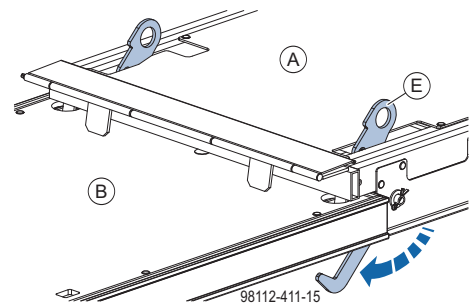

- Close the deck hatch.

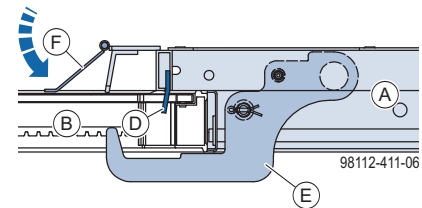

A Infill deck XBS

B Deck XBS

D Suspension plate for hooking into deck XBS

E Securing element


F Deck hatch



Do a sight-check to ensure that the securing element is closed.

- Install Protective grating XP 1.20m.

- Lift the infill deck to its intended location.

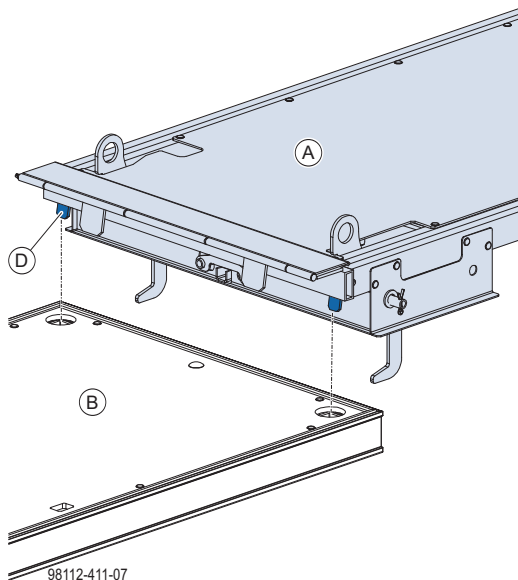

A Infill deck XBS

B Deck XBS

D Suspension plate for hooking into deck XBS

Suspension plates engage in the recesses in the deck XBS.


Inside corners

Note:

- The brackets XBS and decks XBS can be installed on the gang-form while it is laid flat!
- Installation of infill deck XBS is only possible on the upright gang-form after installation of the brackets XBS and decks XBS!
- See the section headed [Erection sequence](#)!

Inside corner with standard XBS decks

2 decks XBS

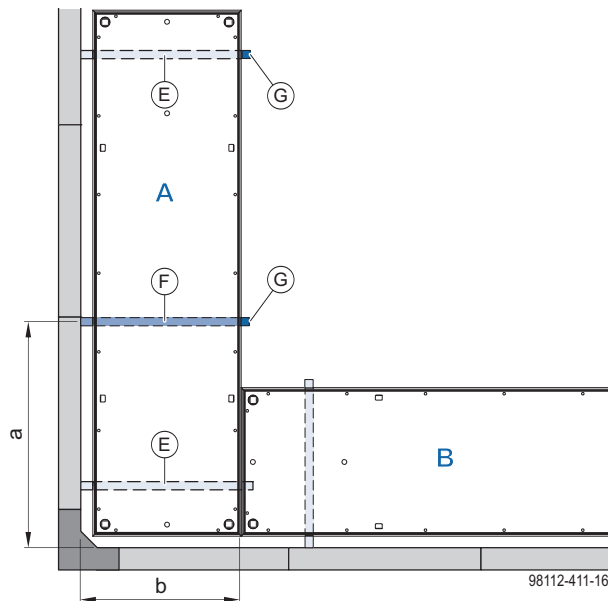

a ... from inside corner to additional bracket XBS: 0.93 m - 1.53 m
b ... 0.92 m

- A** Deck A - Deck XBS
- B** Deck B - Deck XBS
- E** Bracket XBS
- F** Bracket XBS (additionally required)
- G** Handrail post XBS 1.40m




NOTICE

When installing **deck A**, note:

- Install the first bracket XBS as far in the corner as possible (immediately next to the inter-panel connections of the inside corner)!
- An additional bracket XBS with handrail post XBS is required for installation of the edge protection!

Inside corner with closure on one side

1 deck XBS / 1 infill deck XBS

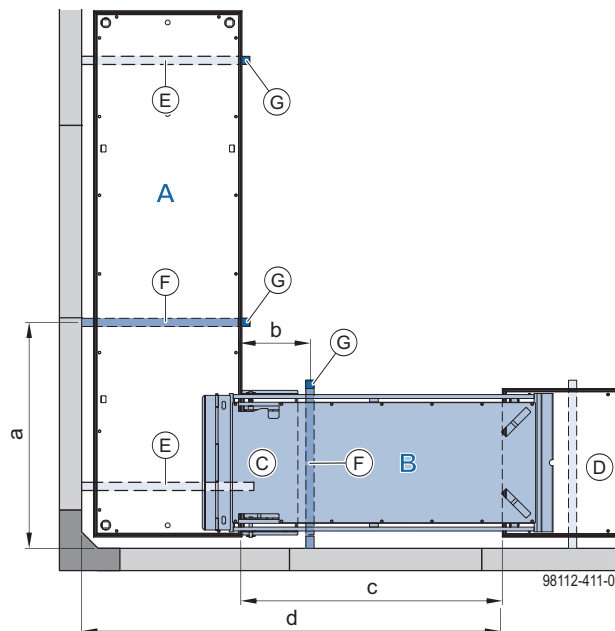

a ... from inside corner to additional bracket XBS: 0.93 m - 1.53 m
b ... from deck A to additional bracket XBS: 0.35 m - 0.60 m
c ... 0.30 m - 1.35 m
d ... 1.20 m - 2.25 m

- A** Deck A - Deck XBS
- B** Deck B - Infill deck XBS
- C** Securing housing of infill deck XBS
- D** Deck XBS (standard deck)
- E** Bracket XBS
- F** Bracket XBS (additionally required)
- G** Handrail post XBS 1.40m

Installation sequence:

1. **Standard XBS deck (D)**
2. **Deck A (A)**
(see the section headed [Inside corner with standard XBS decks](#))
3. **Deck B (B)**

Installation of deck B:



NOTICE


- An additional bracket XBS with handrail post XBS is required for installation of the edge protection!

Exception: The first bracket of the next standard deck is less than 0.60 m from the corner.

- Do not install the additional bracket directly under the securing housing of the infill deck!


- Swing up the securing element of the infill deck XBS (see the section headed [Gap Filler Plank](#)).

- Lift the infill deck XBS to its intended location.

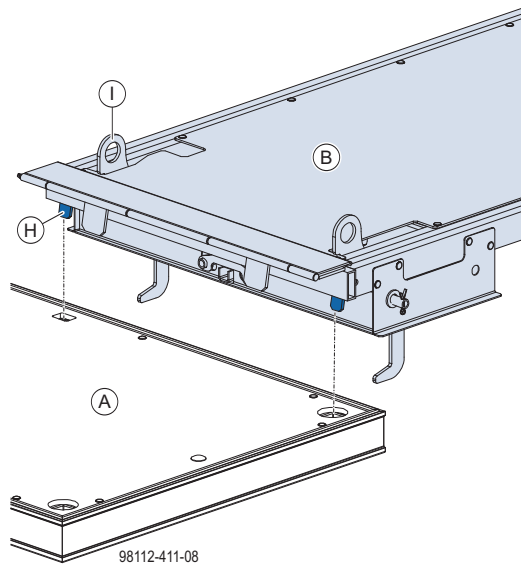

Suspension plates engage in the recesses in deck A - deck XBS.

- Close securing element and deck hatch (see the section headed [Gap Filler Plank](#)).

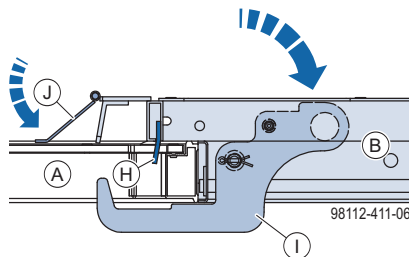

- A** Deck A - Deck XBS
- B** Deck B - Infill deck XBS
- H** Suspension plate for hooking into deck XBS
- I** Securing element
- J** Deck hatch




Do a sight-check to ensure that the securing element is closed.

- Install Handrail post XBS 1.40m and Protective grating XP 1.20m.

Inside corner with closure on both sides

2 infill decks XBS

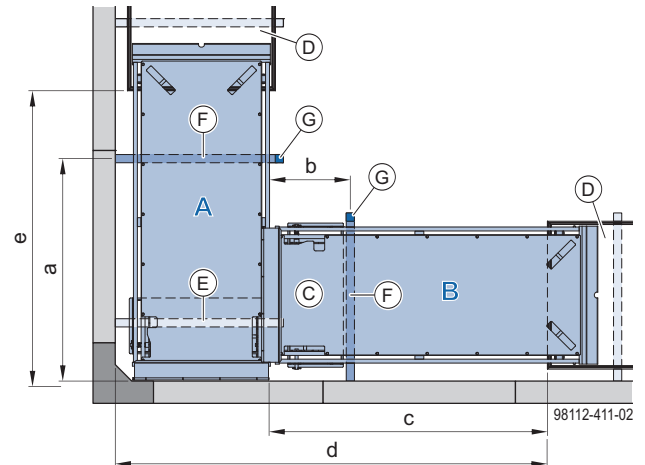

- a ... from inside corner to additional bracket XBS: 0.93 m - 1.53 m
- b ... from deck A to additional bracket XBS: 0.45 m - 0.60 m
- c ... 0.39 m - 1.44 m
- d ... 1.25 m - 2.30 m
- e ... 0.48 m - 1.53 m

- A** Deck A - Infill deck XBS
- B** Deck B - Infill deck XBS
- C** Securing housing of infill deck XBS
- D** Deck XBS (standard deck)
- E** Bracket XBS
- F** Bracket XBS (additionally required)
- G** Handrail post XBS 1.40m

Installation sequence:

1. **Standard XBS deck (D)**
2. **Deck A (A)**
3. **Deck B (B)**

Installation of deck A:




NOTICE

- Install the first bracket XBS as far in the corner as possible (immediately next to the inter-panel connections of the inside corner)!
- An additional bracket XBS with handrail post XBS is required for installation of the edge protection!

Exception: The first bracket of the next standard deck is less than 1.53 m from the corner.

- Lift the infill deck XBS to its intended location.
The distance from the narrow side of the infill deck to the formwork should be as small as possible.
- Lift the anti-slip guard on the formwork side so that the securing hook of the bracket can engage in the toothed strip of the infill deck.

- Actuate the anti-slip guard briefly so that the anti-slip guard closes.

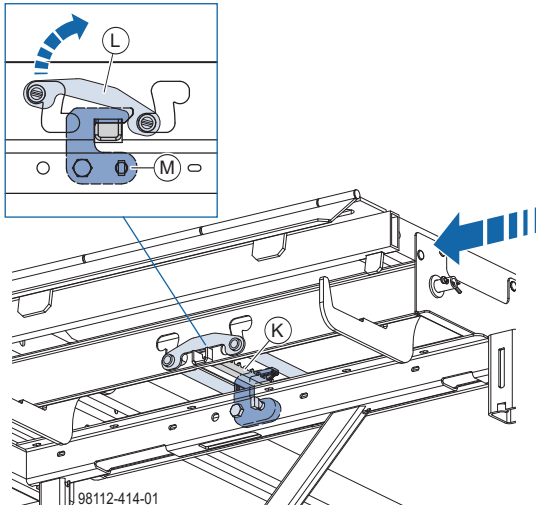

K Toothed strip for securing the position

L Anti-slip guard

M Securing hook

With the anti-slip guard closed, the deck is secured against slipping on the bracket.




Do a sight-check to ensure that the anti-slip guard is closed.

Installation of deck B:

NOTICE


- An additional bracket XBS with handrail post XBS is required for installation of the edge protection!
- Exception:** The first bracket of the next standard deck is less than 0.60 m from the corner.
- Do not install the additional bracket directly under the securing housing of the infill deck!

- Swing up the securing element of the infill deck (see the section headed [Gap Filler Plank](#)).
- Lift the infill deck XBS to its intended location.

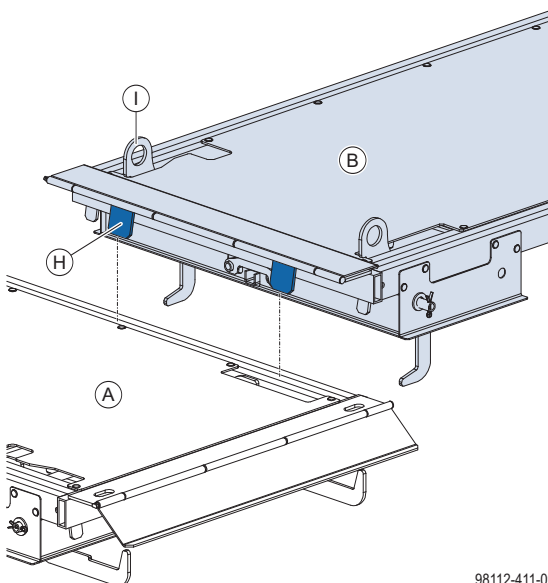

Suspension plates engage in the recess in deck A - infill deck XBS.

- Close the securing element (see [Gap Filler Plank](#)).

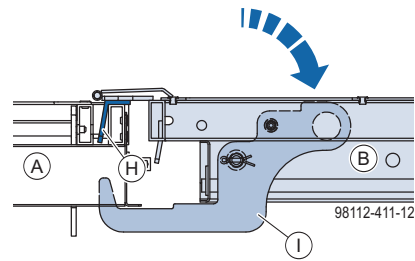

A Deck A - Infill deck XBS

B Deck B - Infill deck XBS

H Suspension plate for hooking into infill deck XBS

I Securing element



Do a sight-check to ensure that the securing element is closed.


- Install Handrail post XBS 1.40m and Protective grating XP 1.20m.

Sideguards on exposed platform-ends


On pouring platforms that do not completely encircle the structure, suitable sideguards must be placed across exposed end-of-platform zones.

Installation:

- Insert Side railing XBS 75cm into deck XBS.

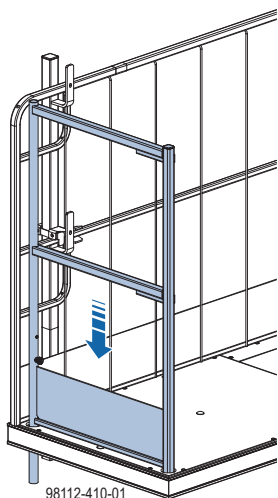


Safety latch **(B)** on post **(C)** must engage on the underside of deck XBS **(A)**.

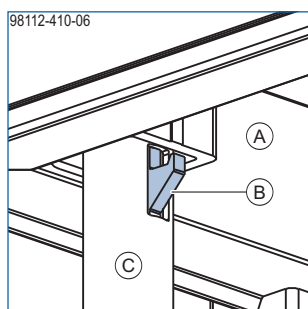


To open the side railing:


- Press the locking button and lift Side railing XBS 75cm by approx. 10 cm.

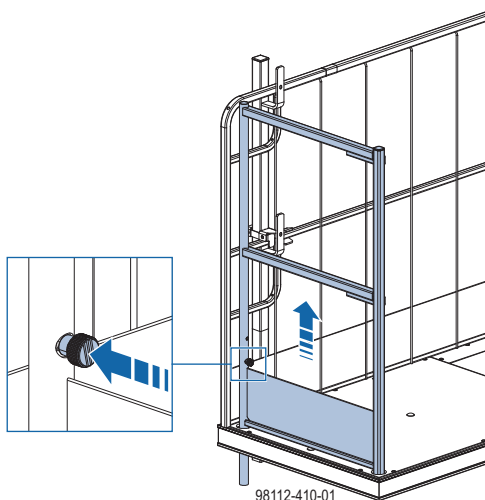

- Swing Side railing XBS 75cm 90° inwards and hook into Handrail post XBS 1.40m.

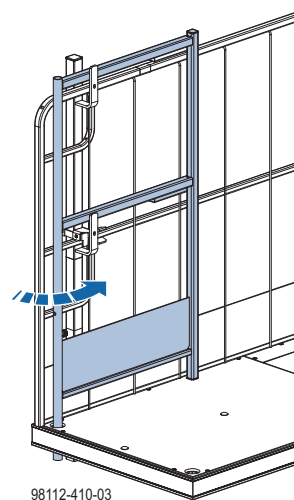

The end-of-platform sideguard can be extended with the **Handrail extension XBS (D)**.

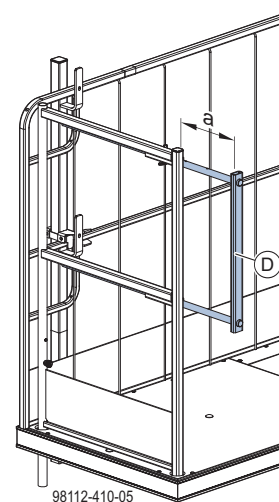

e ... can be telescoped between 15 cm and 60 cm in increments of 5 cm

Framax bracket 90


Note:

The plank and board thicknesses stated comply with the EN 338 C24 timber.

Observe all national regulations applying to deck and guardrail boards.

Framax brackets 90 are easy to assemble by hand and provide a 90 cm wide pouring platform.

Handrail post variants:

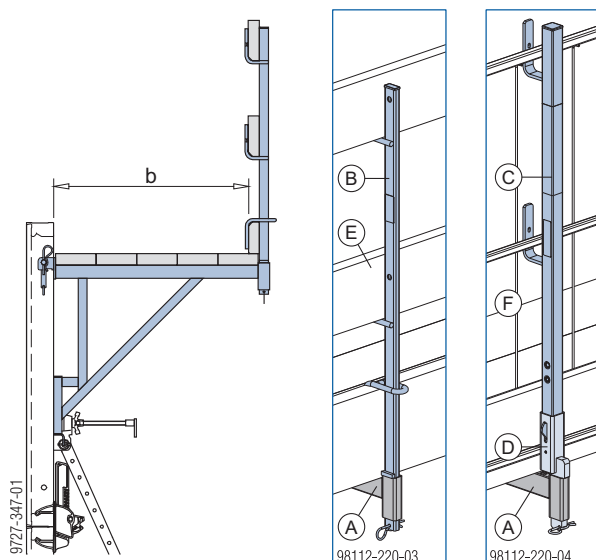

b ... 90 cm

- A** Framax bracket 90 EP
- B** Handrail post 1.00m
- C** Handrail post XP 1.20m
- D** Bracket adapter XP FRR 50/30cm
- E** Guardrail board (or scaffold tube)
- F** Protective grating XP 1.20m (or guardrail boards)

Permitted service load: 1.5 kN/m² (150 kg/m²)

Load Class 2 to EN 12811-1:2003

Max. influence width: 2.00 m



NOTICE

The brackets must be secured against accidental lift-out.

Deck-boards and guardrail boards: Per 1 metre length of platform, 0.9 m² of deck-boards and 0.6 m² of guardrail boards are needed (provided on site).

Board thicknesses for centre-to-centre spans up to 2.50 m:


- Deck-boards min. 20/5 cm
- Guardrail boards min. 15/3 cm

Bolting items required for securing the deck-boards (fasteners per bracket):

- 5 cup square bolts M10x120
- 5 spring washers A10
- 5 hexagon nuts M10

Fixing the guardrail boards: use nails


Using scaffold tubes

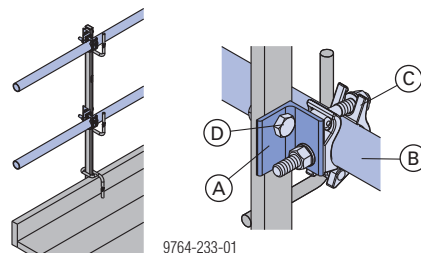


Tools required: Fork wrench 22 for mounting the couplers and scaffold tubes.

- A** Scaffold tube connection
- B** Scaffold tube 48.3mm
- C** Screw-on coupler 48mm 50
- D** Hexagon bolt M14x40 + hexagon nut M14 (Bolting items required)


Possible ways of fixing to upright panels

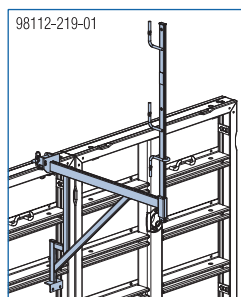

In the frame profile

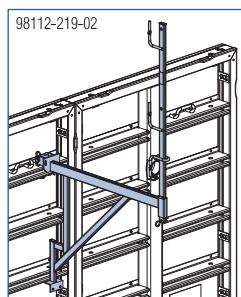

In the function profile

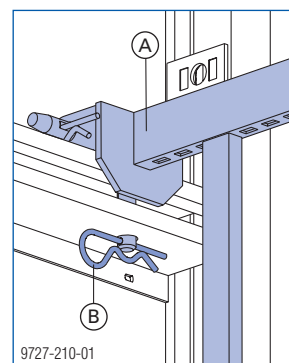


Anti-liftout guard

- A** Framax bracket 90 EP
- B** Spring cotter


Note:

Where brackets need to be fixed to the middle cross profile of upright Framax Xlife universal panels 2.70m and 3.30m (2008 models onward), this can also be done in the left-hand borehole.

Possible ways of fixing to horizontally placed panels

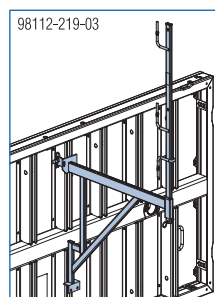

In the function profile

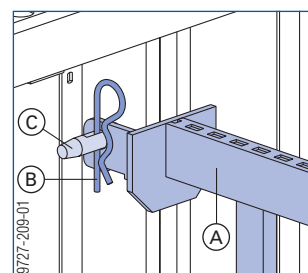

Anti-liftout guard

- A Framax bracket 90 EP
- B Spring cotter
- C Wedge bolt RA 7.5

Erection sequence



NOTICE



- For working at heights that cannot be reached from the floor, use a suitable elevated platform (e.g. Platform stairway 0.97m, Wheel-around scaffold DF or mobile scaffold tower)!
- Always comply with the country-specific safety regulations!
- Do not step on to the pouring platform until an all-round guardrail system (including counter railing) is in place! Otherwise wear a personal fall-arrest system (e.g. safety harness)!

Note:


For details of the procedures for setting up and stripping the formwork, see the sections headed [Instructions for assembly and use for room-high formwork](#) and [Instructions for assembly and use for high formwork](#).

Horizontal assembly

- Pre-assemble the gang-form face-down on a prepared flat area (see the section headed [Inter-panel connections](#)).
- Attach the Tie-off set PPE type A for the personal fall-arrest system to the frame profile or function profile.

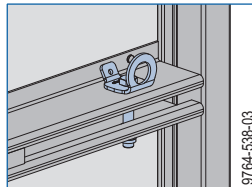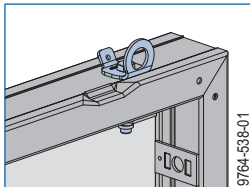


- Install brackets, decking and if applicable, end-of-platform sideguards and Ladder system XS on the gang-form while it is laid flat (see the sections headed [Framax bracket 90](#), [Sideguards on exposed platform-ends](#) and [Ladder system](#)).

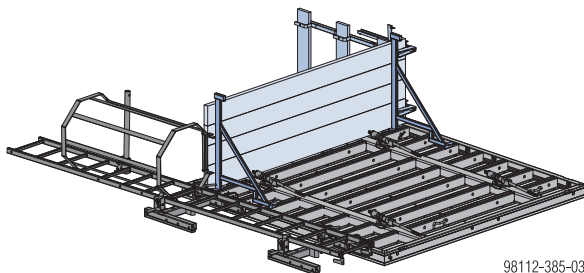


NOTICE

- Do not set down the gang-form on the pouring platform.
- Use the crane to turn the gang-form over so that the pouring platform is accessible from floor level.

- Install the handrail posts and safety barrier (see the section headed [Framax bracket 90](#)).

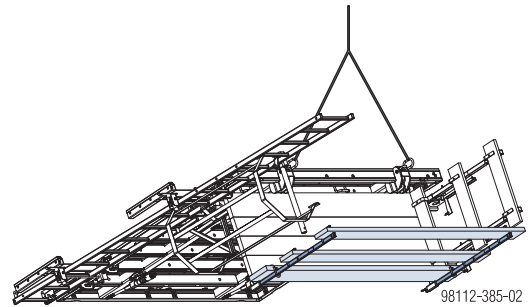

- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Lift the gang-form to its new location.
- Install the panel struts and secure them firmly to the floor. The top strut heads are reached by standing on an elevated platform (e.g. Platform stairway 0.97m).

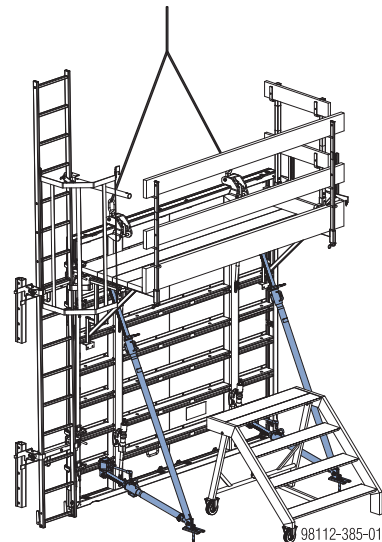

The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.




WARNING

No all-round guardrail system present on the pouring platform!

Danger to life from fatal falls!


- Use a personal fall-arrest system (e.g. safety harness)
The Tie-off set PPE type A (**A**) connected to the framed formwork panel serves as attachment point.

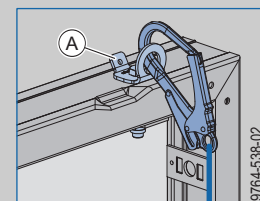

- Detach the gang-form from the crane.
- Dismantling is the reverse of the assembly procedure.

Assembling in the upright

- Pre-assemble the gang-form face-down on a prepared flat area (see the section headed [Inter-panel connections](#)).
- Install panel struts and, if applicable, Ladder system XS (incl. ladder cage, if necessary) on the gang-form while it is lying flat (see the sections headed [Plumbing accessories](#) and [Ladder system](#)).

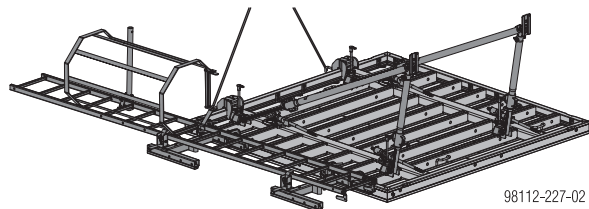

- Raise the gang-form by crane.
- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Fly the gang-form to its new location.
- Fix the panel struts to the ground stably.
The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.
- Use the Framax assembling tool to disengage the Framax lifting hooks from the gang-form (see the section headed [Lifting by crane](#)).


Assembling the pouring platform:

The pouring platform is installed from an elevated platform (e.g. Wheel-around scaffold DF).




NOTICE


- If the formwork height is 3.30m, install the brackets in the second function profile from the top to ensure reachability for installation from the elevated platform.
- Install the brackets and handrail posts (see the section headed [Framax bracket 90](#)).
- Install the guardrail boards (starting at the top) or protective gratings, as applicable (see the section headed [Framax bracket 90](#)).

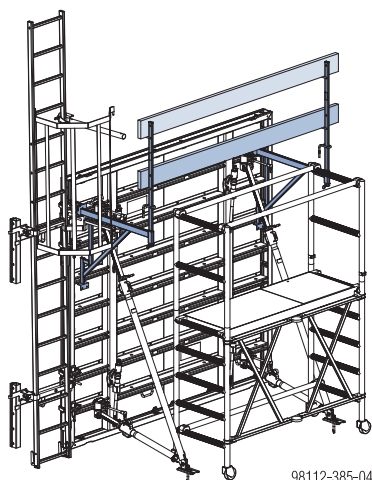


The Alu beam fork H20 (A) is a helpful tool for inserting the guardrail boards.

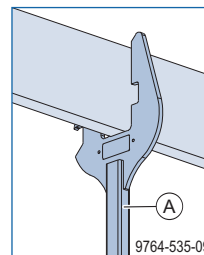

- Install the deck-boards (starting at the formwork side) (see the section headed [Framax bracket 90](#)).

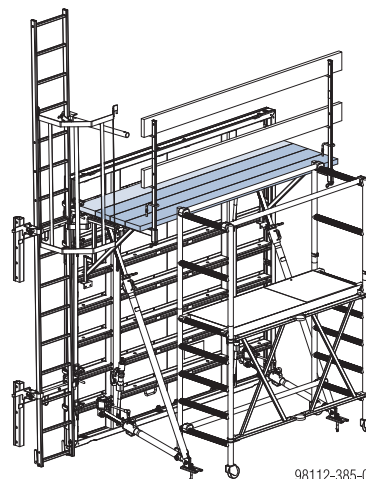



- Install the toeboards and, if applicable, the end-of-platform sideguards (see the sections headed [Framax bracket 90](#) and [Sideguards on exposed platform-form-ends](#)).

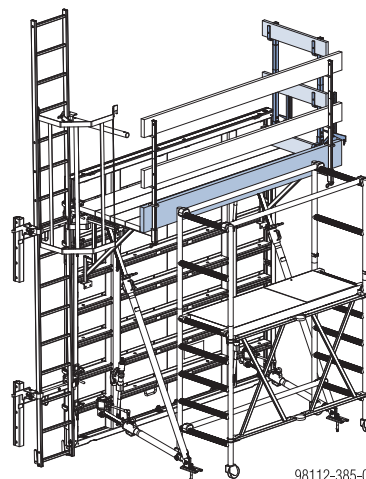

Dismantling is the reverse of the assembly procedure.


Assembly procedure for high formwork

- Pre-assemble gang-forms face-down on an assembly area.
- Attach the Tie-off set PPE type A for the personal fall-arrest system to the frame profile or function profile.

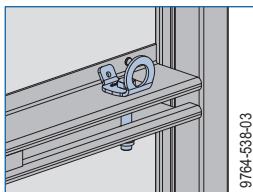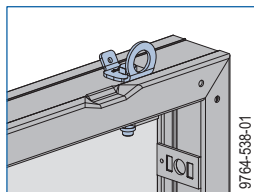

- Only mount the pouring platforms, ladder system and panel struts to the gang-form when this is laid flat on its back.

The topmost guardrail board is not installed until the gang-form is upright - secure it to the decking until then!

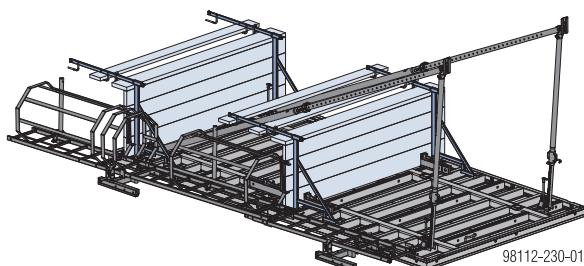


- Raise the gang-form by crane.
 - Spray the formwork sheet with release agent.
 - Lift the gang-form to its new location.
 - Fix the panel struts to the ground stably.
- The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.

**WARNING**

No all-round guardrail system present on the pouring platform!


Danger to life from fatal falls!

- Use a personal fall-arrest system (e.g. safety harness)
- The Tie-off set PPE type A (**A**) connected to the framed formwork panel serves as attachment point.

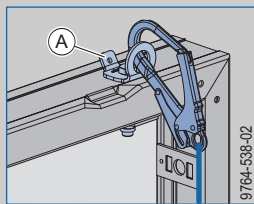

- Detach the gang-form from the crane.

- Mount the top guardrail board.

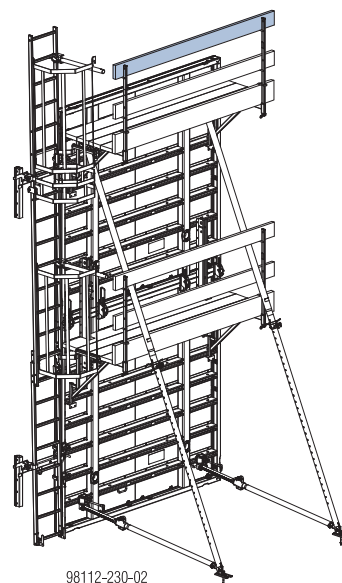


Dismantling is the reverse of the assembly procedure.

Sideguards on exposed platform-ends

On pouring platforms that do not completely encircle the structure, suitable sideguards must be placed across exposed end-of-platform zones.

Edge protection system XP

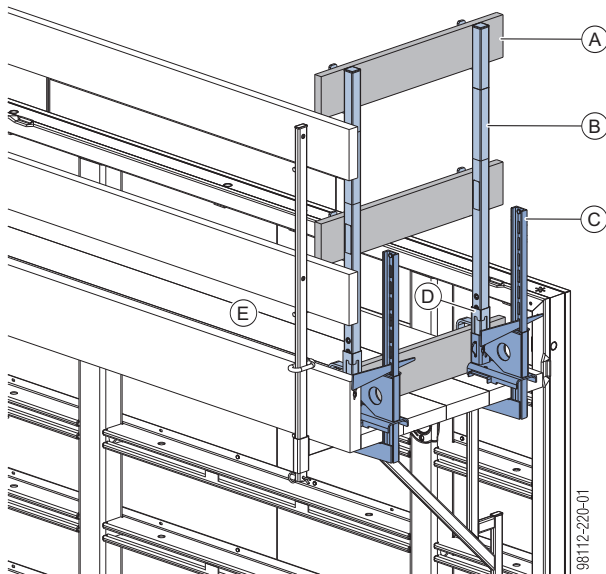

A Guardrail board min. 15/3 cm (site-provided)

B Handrail post XP 1.20m

C Railing clamp XP 40cm

D Toeboard holder XP 1.20m

E Pouring platform

Installation:

- ▶ Fasten Railing clamps XP onto the decking of the pouring platform, by tightening the wedge (clamping range 2 to 43 cm).
- ▶ Working from below, push a Toeboard holder XP 1.20m onto the Handrail post XP 1.20m.
- ▶ Push the Handrail post XP 1.20m into the post-holding fixture on the railing clamps until the locking mechanism engages.
- ▶ Fix guardrail boards to the railing shackles with nails (diam. 5 mm).

Handrail clamp S



Follow the directions in the "Handrail clamp S" User information!

Opposing guardrail


If there are work platforms mounted on one side of the formwork only, then a fall-protection barrier must be mounted to the opposing formwork.

Note:

The plank and board thicknesses stated comply with the EN 338 C24 timber..

Observe all national regulations applying to deck and guardrail boards.

Edge protection system XP

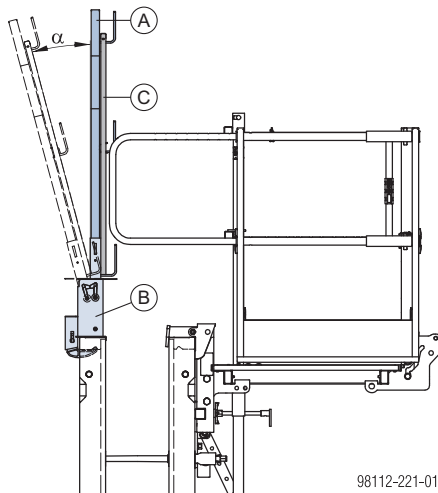

98112-221-01

$\alpha \dots 15^\circ$


A Handrail post XP

B Framax adapter XP

C Protective grating XP or guardrail boards

If necessary (e.g. to enlarge the available work-space during pouring), the safety barrier can be tilted outward by 15° .


- Push up the safety bolt on the Adapters XP until the spring snaps into place (allow for overlap between protective gratings and/or guardrail boards).

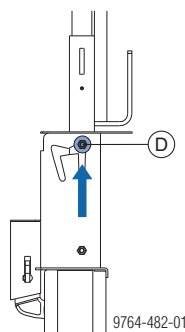

9764-482-01

D Safety bolt

- Tilt the safety barrier outward.

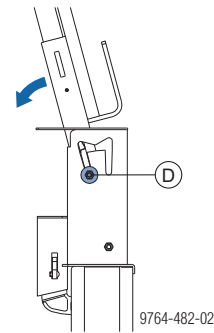

9764-482-02

D Safety bolt

The safety bolt now automatically drops and secures the tilted barrier unit.



Do a sight-check to make sure that the safety bolt is in the correct position!

Types of safety barrier:

| | Protective grating XP | Guardrail boards |
|------------------------|-----------------------|--------------------|
| Handrail post XP 1.20m | <p>9764-480-03</p> | <p>9764-480-04</p> |
| Handrail post XP 0.60m | <p>9764-480-07</p> | <p>9764-540-01</p> |

a ... 143 cm

b ... 93 cm

c ... min. 100 cm

d ... 103 cm

e ... 106 cm

E Handrail post XP 1.20m

F Handrail post XP 0.60m

G Protective grating XP 1.20m

H Protective grating XP 0.60m

I Platform decking

J Guardrail board min. 15 cm (site-provided)

**NOTICE**


- Note the necessary minimum distance of 100 cm from platform decking to top of railing!
- When Handrail posts XP 1.20m and guard-rail boards are used to construct the safety barrier, it is not permissible to install guard-rail boards in the top railing shackles!

Assembly


The opposing guard-rail can be mounted to both upright and face-down (ground-assembled) gang-forms.

**NOTICE**

- ▶ Do not position the Framax adapter XP directly over a lifting edge!

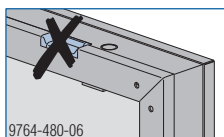



- ▶ Mount the Framax adapter XP on the frame profile and fix it in place with the wedge.

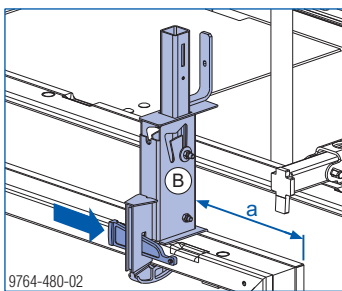

a ... ca. 35 cm (position of the two endmost Framax adapters XP on a gang-form)


B Framax adapter XP

- ▶ Push the handrail post XP into the post-holding fixture on the Framax adapter XP until the locking mechanism engages.
- ▶ Fit on a Protective grating XP or guardrail boards.
- ▶ Use Velcro® fasteners 30x380mm to secure the Protective gratings XP to the Handrail posts XP, or use nails (diam. 5 mm) to secure guardrail boards.

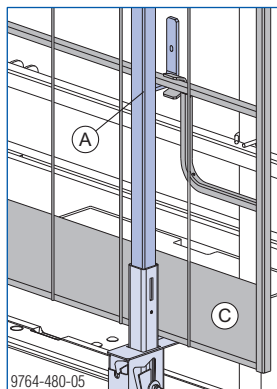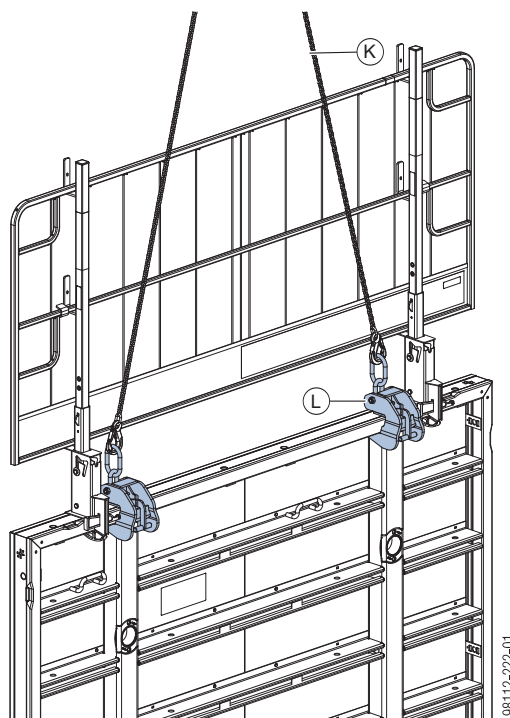**A Handrail post XP****C Protective grating or guardrail boards****Lifting by crane****K Doka 4-part chain 3.20m****L Framax lifting hook**


When lifting gang-forms together with counter railings assembled from the Xsafe edge protection XP, remember the following points:

- The guard rails must be in the vertical position when the gang-form is raised or laid down.
- Elastic deformation of the guard rails may occur because the 4-part chain is resting against the protective grating or guardrail boards while the gang-form is being lifted.
- When a gang-form is lifted, repositioned or laid down, the 4-part chain must not be led around the protective grating or the guardrail board.


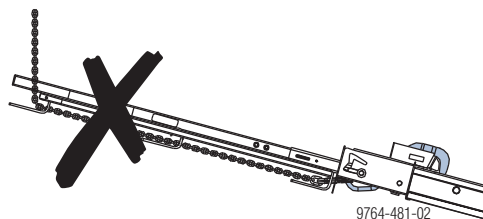


Make sure that the 4-part chain is in the right position:

- Placing down onto the form-ply side
- Picking up from this position

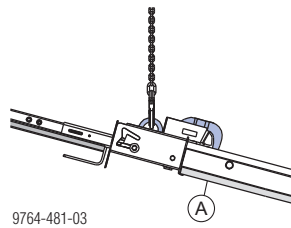

- Placing down onto the back-face of the formwork (e.g. for cleaning the form-facing)
- Picking up from the cleaning position
- Repositioning the upright gang-form

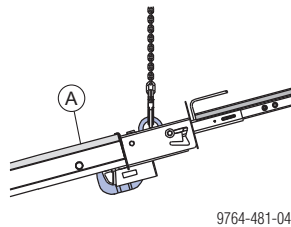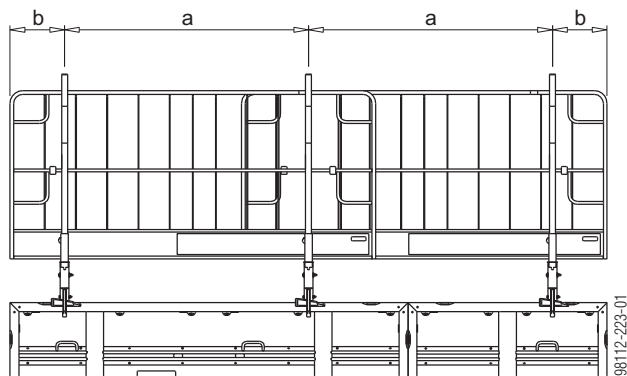**A** Form-ply side**Structural design**

a ... span
b ... cantilever

Note:


The wind conditions likely to be encountered in Europe, in accordance with EN 13374, are largely recognised by the peak velocity pressure $q=0.6 \text{ kN/m}^2$ (highlighted in the tables).

Permitted span (a)

| | | Peak velocity pressure q [kN/m ²] | | | |
|----------------|-----------------------------|-----------------------------------------------|-------|-----|-----|
| | | 0.2 | 0.6 | 1.1 | 1.3 |
| Permitted span | Protective grating XP | | 2.5 m | | — |
| | Guardrail board 2.4 x 15 cm | | 1.9 m | | |
| | Guardrail board 3 x 15 cm | | 2.7 m | | |
| | Guardrail board 4 x 15 cm | | 3.3 m | | |

Permitted cantilever (b)


| | | Peak velocity pressure q [kN/m ²] | | | |
|----------------------|-----------------------------|-----------------------------------------------|-------|-------|-----|
| | | 0.2 | 0.6 | 1.1 | 1.3 |
| Permitted cantilever | Protective grating XP | | 0.6 m | 0.4 m | — |
| | Guardrail board 2.4 x 15 cm | | 0.5 m | | |
| | Guardrail board 3 x 15 cm | | 0.8 m | | |
| | Guardrail board 4 x 15 cm | | 1.4 m | | |

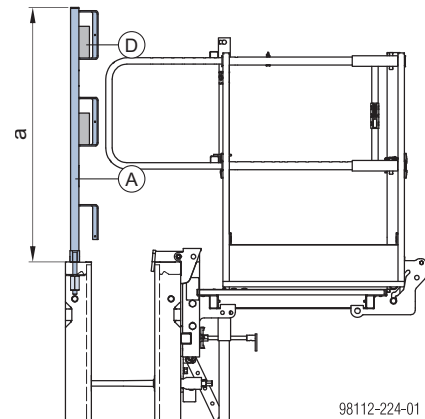Handrail post 1.10m

a ... 120 cm

A Handrail post 1.10m**D** Guardrail board**Installation:**

- Secure the Handrail post 1.10m in the cross bore-hole of the framed formwork panel using the Hexagon nut 20.0.

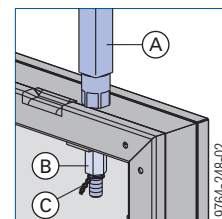**A** Handrail post 1.10m**B** Hexagon nut 20.0**C** Hexagon nut secured in place (e.g. with safety wire)

- Secure the Hexagon nut 20.0 in place.


**NOTICE**

Before the gang-form is repositioned by crane, the guardrail boards must be removed!



Follow the directions in the 'Handrail post 1.10m' User Information booklet.

Wall formwork at the edge of the structure

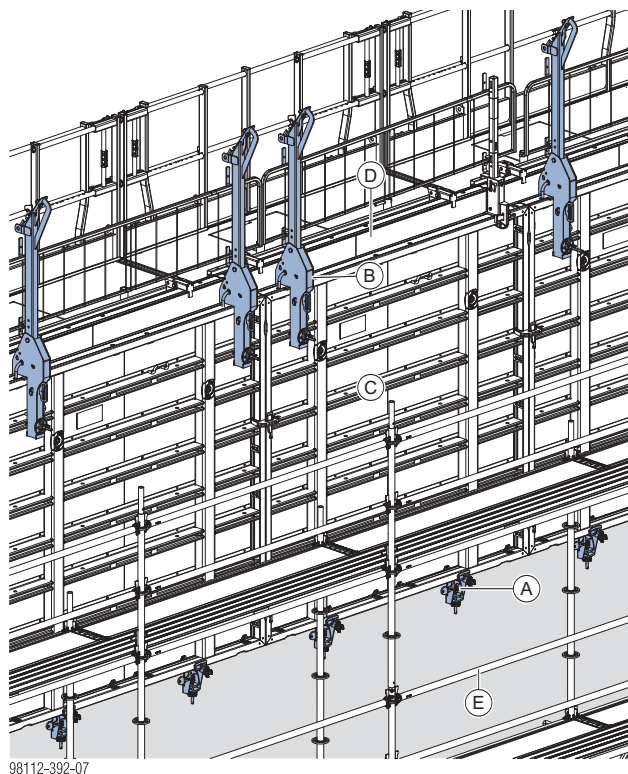


- A** Wall-formwork support angle 2G or Wall-formwork support angle
- B** Framax panel strut connector I
- C** Holding formwork
- D** Opposing formwork
- E** Façade scaffolding (e.g. Working scaffold Modul)

Wall-formwork support angle 2G

The **Wall-formwork support angle 2G** is used for positioning wall formwork at the edge of the structure if there is no suitable load-bearing base (e.g. platform). It offers a dual function with which the support angle can be secured either with a Bridge edge beam anchor 15.0 or alternative anchorages.

Possible anchorages:

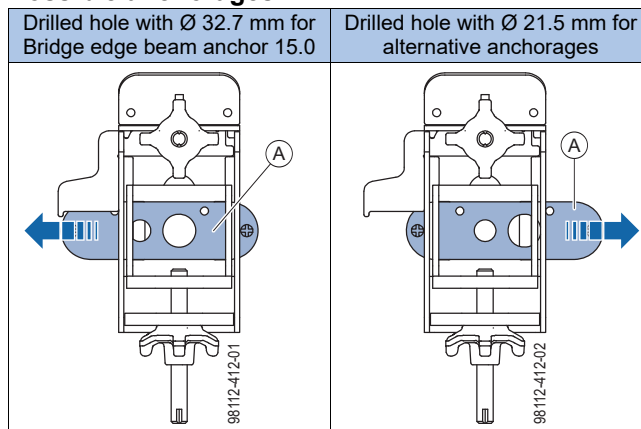

A Plate for pushing to the respective drilled hole

Drilled hole with Ø 32.7 mm for Bridge edge beam anchor 15.0:

| Permissible load-bearing capacity per Wall-formwork support angle 2G: (Values apply to uncracked concrete) | | |
|---------------------------------------------------------------------------------------------------------------|----------------------------------|---------------------------------------------|
| Characteristic cube compressive strength of the concrete $f_{ck, cube, existing}$ | | |
| | 10 N/mm ² (C 8/10) | 15 N/mm ² (C 12/15) or higher |
| Maximum load $F_{permissible}$ | 16.7 kN | 20.0 kN |



NOTICE

- Installation of the support angle is done by crew members working from the leading façade scaffold!

Note:

A **Bridge edge beam anchor 15.0** has to be set into the concrete when the preceding section is poured so that the support angle can be secured to it.



Follow the directions in the 'Bridge edge beam anchor 15.0' User Information booklet.

Drilled hole with Ø 21.5 mm for alternative anchorage:


| Resulting minimum resistances of the alternative anchorage from the load $F_{\text{permissible}}$ | | Maximum load $F_{\text{permissible}}$ [kN] | | | |
|---------------------------------------------------------------------------------------------------------|----------------------------------------|-----------------------------------------------|------|------|------|
| | | 5.0 | 10.0 | 15.0 | 20.0 |
| | Characteristic tensile force $N_{R,k}$ | 4.5 | 9.0 | 13.5 | 17.9 |
| | Design tensile force $N_{R,d}$ | 6.7 | 13.5 | 20.2 | 26.9 |
| | Characteristic shear force $V_{R,k}$ | 5.0 | 10.0 | 15.0 | 20.0 |
| | Design shear force $V_{R,d}$ | 7.5 | 15.0 | 22.5 | 30.0 |

**NOTICE**

- Statical verification is required!
- Installation of the support angle is done by crew members working from the leading façade scaffold!
- The alternative anchorages must be selected not only according to the forces but also according to the compressive strength of the concrete and the minimum distances.

Installation:


- Remove the nailing cone from the bridge edge beam anchor.

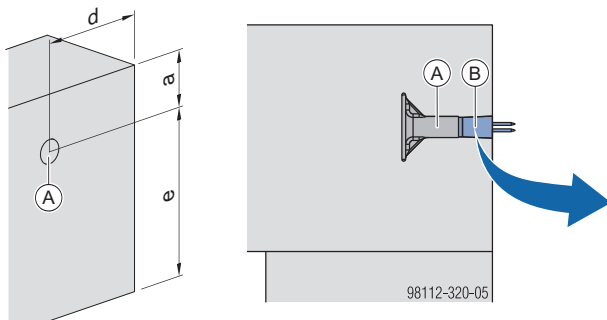

a ... min. 11.0 up to max. 14.0 cm
d ... min. 20 cm
e ... min. 45 cm

A Bridge edge beam anchor 15.0**B** Nailing cone 15.0

- 1) Secure the support angle to the bridge edge beam anchor with a Screw-in cone 15.0 (but do not yet tighten).
- 2) Use the lower vertical star grip nut to adjust to the necessary level (**b**).

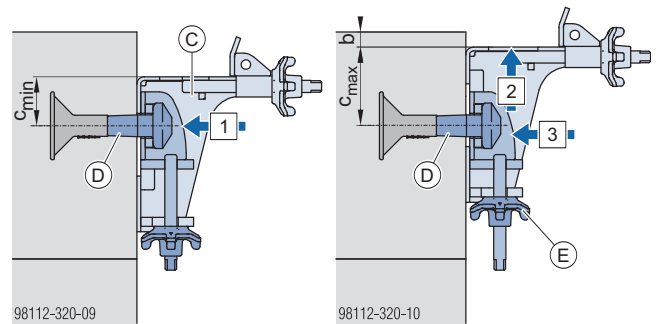3) Tighten the Screw-in cone 15.0.


b ... offset approx. 1.0 cm
(so that the formwork can be tightened against the wall/slab)

| | Bridge edge beam anchor 15.0 | Alternative anchorage |
|---------------------------|------------------------------|-----------------------|
| C_{min} ... | 6.5 cm | 6.0 cm |
| C_{max} ... | 11.5 cm | 12.0 cm |
| Max. adjustment range ... | 5.0 cm | 6.0 cm |


C Wall-formwork support angle 2G**D** Screw-in cone 15.0**E** Star grip nut vertical

Check that the support angle is correctly seated flat against the wall.

- 4) Place the formwork on the support angle.
- 5) Press the formwork against the structure using the upper horizontal star grip nut.

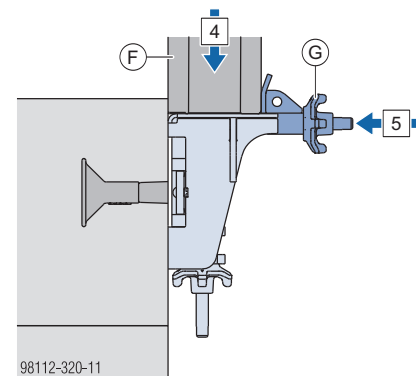**F** Formwork**G** Star grip nut horizontal

- 6) Secure the formwork on the support angle with Framax multi function clamp or Framax adjustable clamp to prevent lifting out.

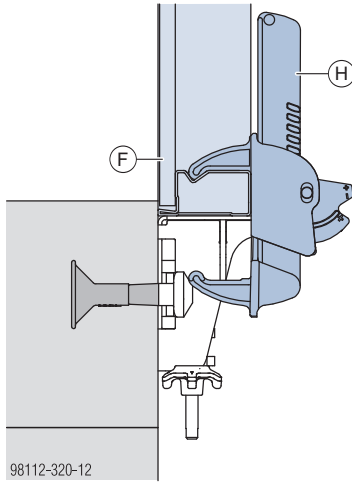

F Formwork

H Framax multi function clamp or Framax adjustable clamp

Wall-formwork support angle

The **Wall-formwork support angle** is a support for positioning wall formwork at the edge of the structure if there is no suitable load-bearing base (e.g. platform).

Drilled hole with Ø 32.7 mm for Bridge edge beam anchor 15.0:

| Maximum load $F_{\text{permissible}}$ | Permissible load-bearing capacity per Wall-formwork support angle 2G: (Values apply to uncracked concrete) | |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------|---------------------------------------------|
| | Characteristic cube compressive strength of the concrete $f_{\text{ck,cube,existing}}$ | |
| | 10 N/mm ² (C 8/10) | 15 N/mm ² (C 12/15) or higher |
| | 16.7 kN | 20.0 kN |



NOTICE

- Installation of the support angle and tying of the panels are jobs undertaken by crew members working from the leading façade scaffolding!

Note:


A **Bridge edge beam anchor 15.0** has to be set into the concrete when the preceding section is poured so that the support angle can be secured to it.



Follow the directions in the 'Bridge edge beam anchor 15.0' Fitting Instructions.

Installation:

- Remove the nailing cone from the bridge edge beam anchor.

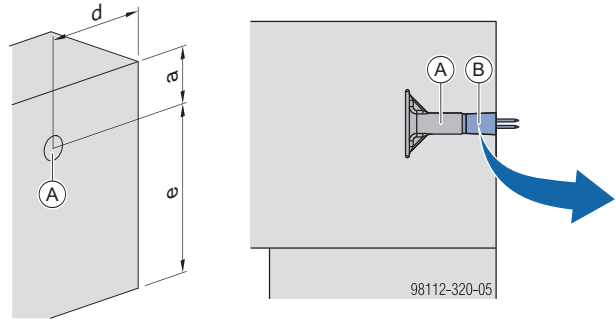

a ... min. 11.0 up to max. 14.0 cm


d ... min. 20 cm

e ... min. 45 cm

A Bridge edge beam anchor 15.0

B Nailing cone 15.0

- Secure the support angle to the bridge edge beam anchor with a Screw-in cone 15.0 (but do not yet tighten).
- Use the star grip nut for adjusting to the necessary level (b).
- Tighten the Screw-in cone 15.0.

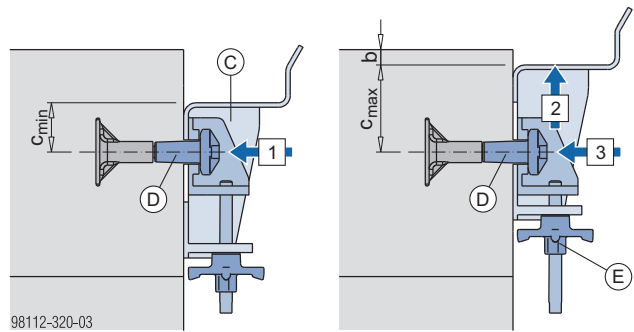

b ... offset approx. 1.0 cm

(so that the formwork can be tightened against the wall/slab)

Adjustment range c_{min} ... 6.5 to c_{max} ... 11.5 cm = 5 cm

C Wall-formwork support angle

D Screw-in cone 15.0


E Star grip nut



Check that the support angle is correctly seated flat against the wall.

- Place the formwork on the support angle.

- 5) Use a wedge to tighten the formwork against the wall/slab.

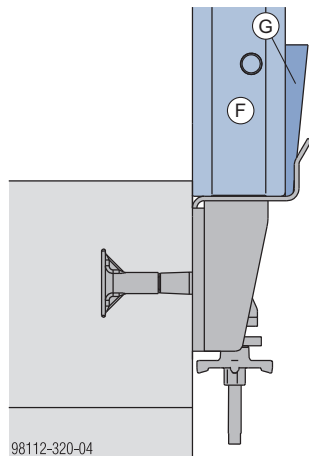


F Opposing formwork

G Wedge

Framax panel strut connector I

The **Framax panel strut connector I** is for connecting panel struts for temporary support of panels in gang-forms at the structure edge and also functions as a handrail post for the counter railing.

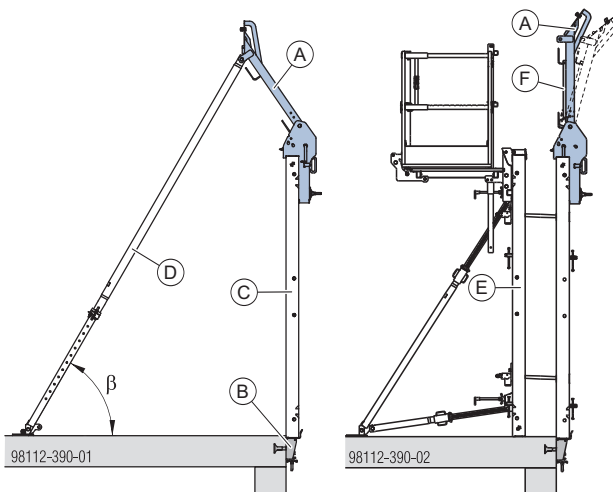

β ... approx. 60°

A Framax panel strut connector I

B Wall-formwork support angle

C Holding formwork


D Panel strut

E Opposing formwork

F Protective grating XP 0.60m

Pin position:

- Pos. (1): panel bracing
- Pos. (2): counter railing
- Pos. (3): counter railing inclined

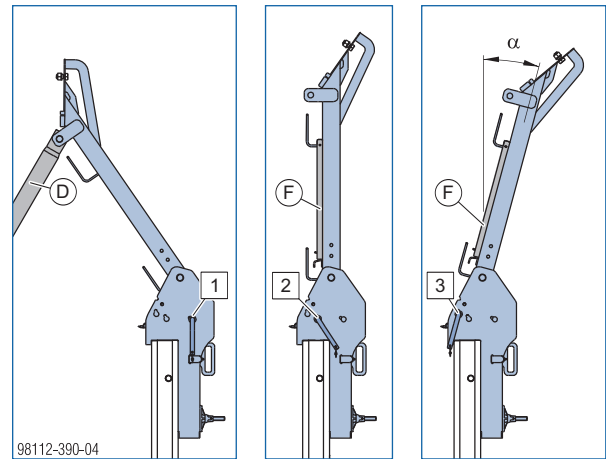

α ... 15°

D Panel strut

F Protective grating XP 0.60m

Plumbing accessory depending on formwork height and permissible influence width

| Formwork height [m] | 2.70 | 3.30 | 4.05 | 4.65 | 5.40 | 6.60 | 7.00 |
|-----------------------|------|------|------|------|------|------|------|
| DokaRex 450 IB | ✓ | — | — | — | — | — | — |
| alignment 750 IB | ✓ | ✓ | ✓ | ✓ | — | — | — |
| 1020 IB | — | — | — | — | ✓ | ✓ | ✓ |
| Plumbing strut 540 IB | ✓ | ✓ | — | — | — | — | — |
| Eurex 60 550 Type 1 | ✓ | ✓ | — | — | — | — | — |
| Type 2 | — | — | ✓ | ✓ | ✓ | — | — |
| Type 3 | — | — | — | — | — | ✓ | ✓ |
| Influence width [m] | 4.05 | 3.30 | 2.70 | 2.30 | 1.90 | 1.50 | 1.35 |

See also the section headed [Plumbing accessories](#)

Note:

- The values apply where the wind pressure $w_e = 0.52 \text{ kN/m}^2$. This results in a peak velocity pressure $q_p = 0.4 \text{ kN/m}^2$ (91 km/h) where $c_{p, \text{net}} = 1.3$. The greater wind loads encountered at exposed formwork-ends must be restrained by additional plumbing accessories (e.g. struts or pipe-braces). In cases where higher wind pressure is encountered, the number of struts must be determined by statical calculation!
- Values apply for an angle α of the plumbing strut of 60°.
- Values do not apply for gang-forms in the edge zone or for free-standing gang-forms.
 - Gang-forms in the edge zone must be supported by at least 2 plumbing accessories.
 - Free-standing gang-forms must be supported by at least 2 plumbing accessories.

Note:


The position can differ from case to case. (Distance when used as panel bracing \neq span when used as handrail post)

In this case additionally use Framax adapter XP + Handrail post XP 0.60m (see the section headed [Opposing guardrail](#))!

Installation of Framax panel strut connector I

Installation on gang-form:

- Lay gang-form flat on supporting timbers (min. 10 cm)
- Position panel strut connector at the top edge of the formwork.
- Close anti-liftout guard and secure with spring cotter.

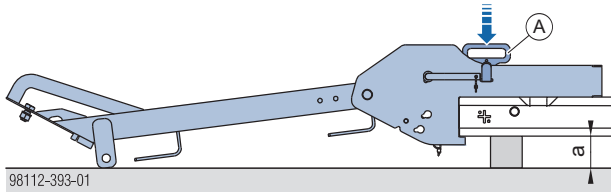


a ... min. 10 cm


A Anti-liftout guard



Check that anti-liftout guard **(A)** is correctly closed and secured with Spring cotter 5mm **(B)** .

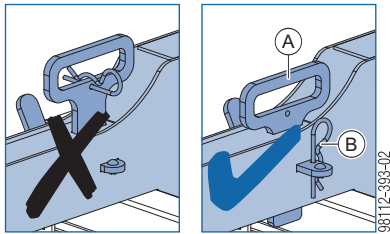

- Fix panel strut connector to function profile with Framax universal fixing bolt and Super plate 15.0.

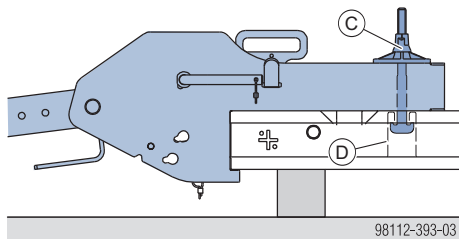


C Framax universal fixing bolt + Super plate 15.0

D Function profile in panel


Installation of panel struts:

- Pin strut into panel strut connector.

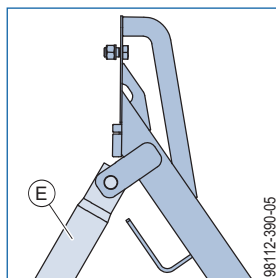

E Panel strut

- Install panel strut in docking head.

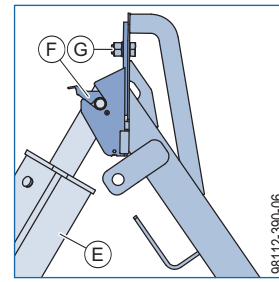

F Docking head or DokaRex docking head M20

G Hexagon bolt M20x40 + hexagon nut M20
(Included in scope of supply of Panel strut connector I)

E Panel strut



Follow the directions in the 'Eurex 60 550' or 'Alignment struts DokaRex' User Information booklet, as applicable.

Installation of panel struts when docking head is used:

- Secure docking head to panel strut connector with bolt and nut.

Formwork set-up at structure edge

Note:


- For details of the procedures for setting up and stripping the formwork, see the section headed [Instructions for assembly and use for room-high formwork](#).
- As an alternative to the procedure shown here, the holding formwork can be positioned first and then the opposing formwork can be lowered by crane without panel struts on to the support angles.




NOTICE

- A mounted-ahead façade scaffold is necessary for work at the structure edge!
- For working at heights that cannot be reached from the floor, use a suitable elevated platform (e.g. Platform stairway 0.97m, Wheel-around scaffold DF or mobile scaffold tower)!
- Always comply with the country-specific safety regulations!
- If adequate fall protection is not available, use personal fall-arrest systems (e.g. safety harness)!
- 2 panel struts must be installed at the first and at the last gang-form.


- Install and align the Wall-formwork support angle (see the section headed [Wall-formwork support angle](#)).
- Install the panel strut connector on the gang-form (see the section headed [Framax panel strut connector I](#)).
- Remove fastening pin of the Panel strut connector I.

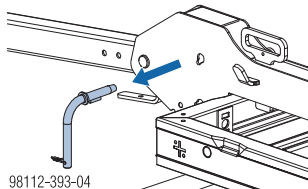

- Attach the gang-form to the crane with Framax lifting hooks (see the section headed [Lifting by crane](#) and the 'Framax lifting hook' Operating Instructions).
- Crane-lift the gang-form approx. 1.50 m.
- Secure fastening pin in pos. (1).

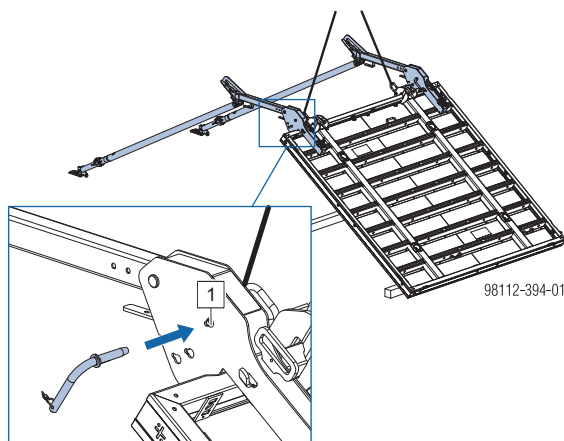

- Spray the formwork sheet with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Lower the gang-form on to the support angle by crane.
- Press formwork against wall/slab.

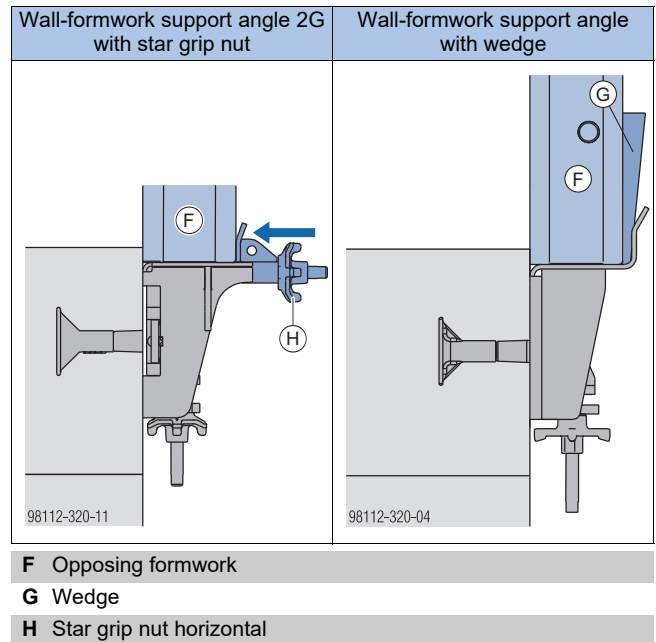


NOTICE

Never use a sledge hammer to plumb and align the panels!

This would damage the profiles of the gangs.


- Use only proper plumbing tools (e.g. a special pry-bar) that cannot cause any damage (see the section headed [Tools for plumbing and aligning and for stripping the formwork](#)).
- Fix the panel struts firmly to the ground (see the section headed [Plumbing accessories](#)).

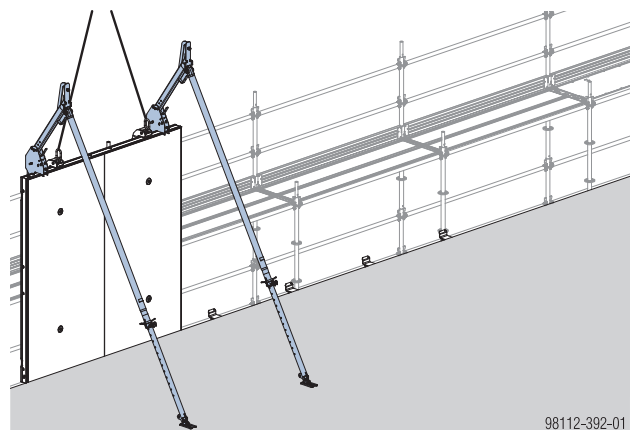

The gang-form is now stable and can be plumbed and aligned exactly, with no need for the crane.

- Working from the façade scaffold, detach gang-form from the crane.

- Continue lining up further gang-forms in this way, and link them together (see the section headed [Inter-panel connections](#)).

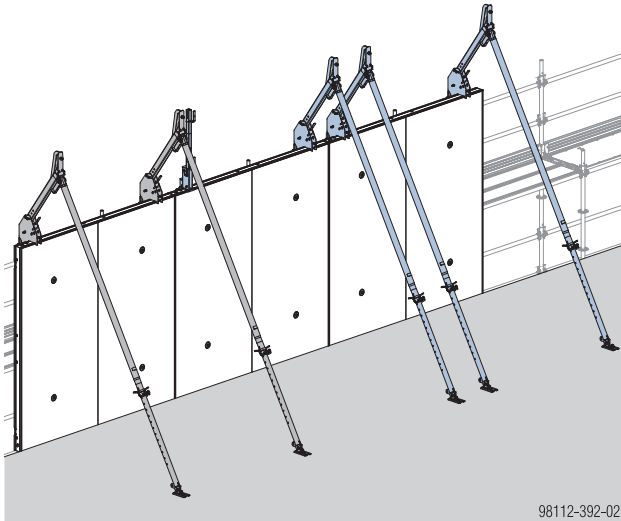

98112-392-02


Erecting the opposing formwork:



NOTICE

- Observe the sequence for erecting the opposing formwork!
- Start at the second-last gang-form!


Example: Sequence for 4 gang-forms

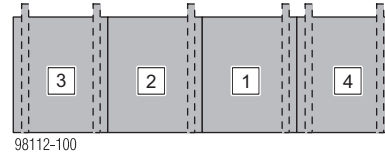

98112-100


Once the reinforcement has been placed, the formwork can be closed.

- Remove panel strut from second-last gang-form of the holding formwork.

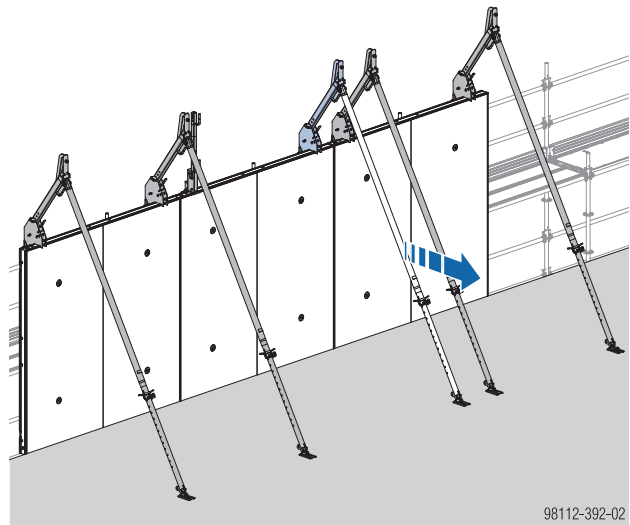

98112-392-02


- Spray the formwork sheet of the opposing formwork with release agent (see the section headed [Cleaning and care of your equipment](#)).
- Lift the opposing formwork (with closed platform) by crane to its next location.
- Fit the form ties (see the section headed [Tie rod system Framax Xlife plus](#)).
- Pin Framax panel strut connector I in pos. (2).

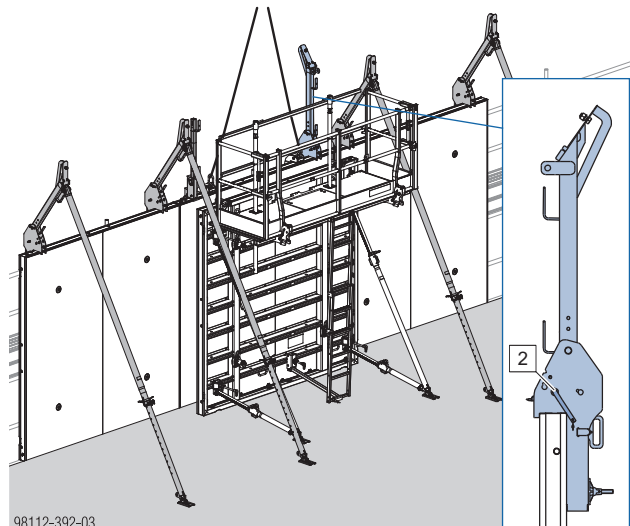


98112-392-03

- Detach the gang-form from the crane.

- Hook Protective grating XP 0.60m into position and retract Xsafe plus counter railing.

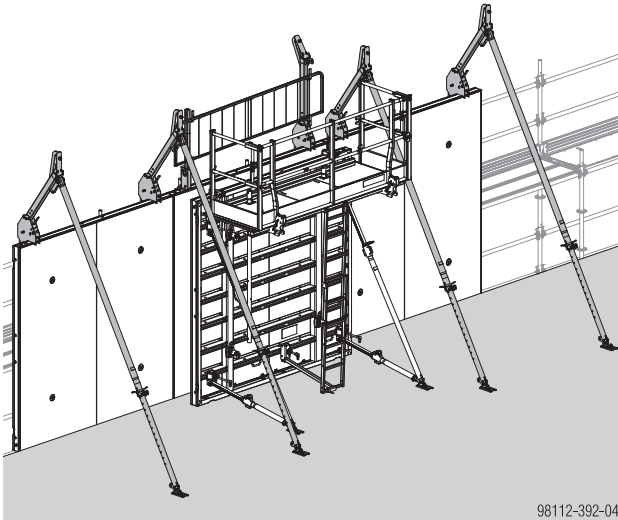

- Continue lining up further gang-forms in this way, and link them together (see the section headed [Inter-panel connections](#)).

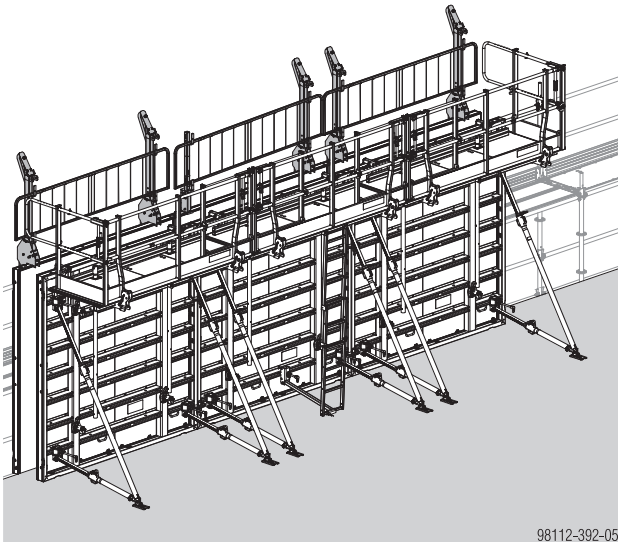

Pouring

Permitted fresh-concrete pressure:

See the sections headed [Framax Xlife plus panel in detail](#) and [Tie rod system Framax Xlife plus](#).

Observe the following **guidelines**:

- The section headed 'Pressure of fresh concrete on vertical formwork, DIN 18218' in the Calculation Guide 'Doka formwork engineering'
- DIN 4235 Part 2 - 'Compacting of concrete by vibrating'



NOTICE

- Do not exceed the maximum permissible rate of placing.
- Pour the concrete.
- Make only moderate use of vibrators, carefully coordinating the times and locations of vibrator use.

Stripping the formwork



NOTICE

- Comply with the stipulated stripping times.
- Remove any loose items from the formwork and platforms, or secure them firmly.
- Attach the gang-form to the crane.
- Raise Xsafe plus counter railing and remove counter railing of the formwork.
- Take out the form ties (see the section headed [Tie rod system Framax Xlife plus](#)) and undo the connectors to the adjacent panels.



WARNING

The formwork tends to adhere to the concrete. When stripping the formwork, do not try to break concrete cohesion using the crane! Risk of crane overload.

- Use suitable tools such as timber wedges or a special pry-bar to detach the formwork from the concrete.
- Lift the gang-form away and to its next location.
- Clean residual concrete off the formwork sheet (see the section headed [Cleaning and care of your equipment](#)).
- Where the gang-form has panel struts and a pouring platform attached to it, fold in the side railing of this platform - attach gang-form to crane - only then detach the floor anchorages of the panel struts.

Ladder system

The Ladder system XS permits safe vertical access to and from the intermediate platforms and pouring platforms:

- when attaching/detaching the formwork to/from the crane tackle
- when opening/closing the formwork
- when placing the reinforcement
- during pouring


Note:

The ladder system must be implemented in such a way that all national regulations are complied with.



CAUTION

- ▶ The Ladders XS may only be used as part of the system, and must NOT be used separately (as 'lean-to' ladders).

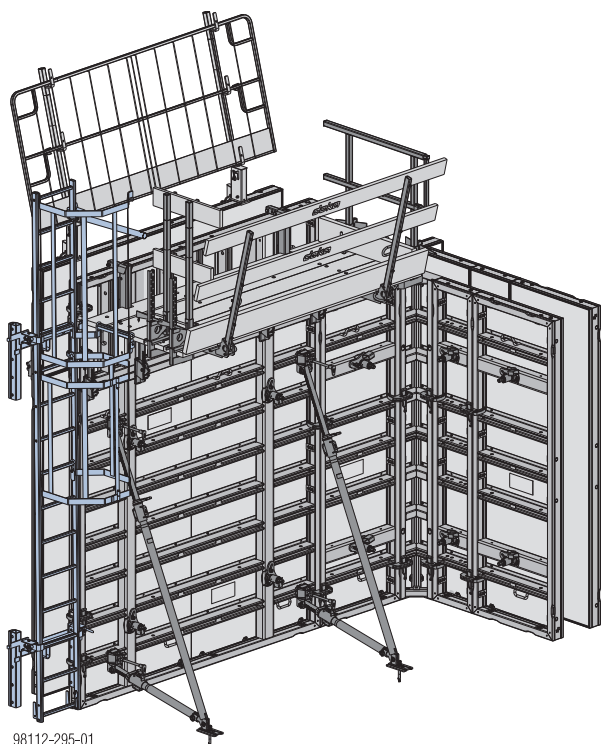


Assembly

Preparing the formwork

- ▶ Pre-assemble gang-forms face-down on a prepared flat area (see the section headed [Inter-panel connections](#)).
- ▶ Install platforms and panel struts on the laid-flat panel (see the sections headed [Pouring platforms](#) and [Plumbing accessories](#)).

Attaching connectors to the formwork


- ▶ Place the Connector XS wall formwork against the frame profile near the top of the formwork.
- ▶ Fasten the Connector XS wall formwork to the frame profile using two Quick acting clamps RU.

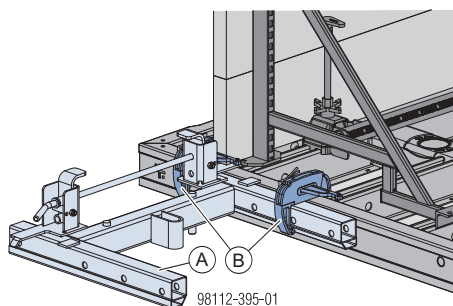

A Connector XS wall formwork

B Quick acting clamp RU

- ▶ Place a Connector XS wall formwork against the frame profile, near the bottom of the formwork.
- ▶ Fasten the Connector XS wall formwork to the frame profile using two Quick acting clamps RU.

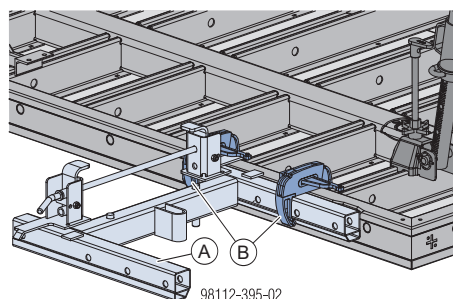

A Connector XS wall formwork


B Quick acting clamp RU

- ▶ For formwork heights above 5.85 m, an extra Connector XS wall formwork must be attached in the same way near the middle of the formwork (i.e. approx. half-way up).
This prevents the ladder from swaying when site crew climb up or down.

Fixing the ladder

to the top Connector XS wall formwork

- Pull out the push-in pin, and pivot the two securing hooks out of the way.
- Place the System ladder XS 4.40m onto the Connector XS, with the hooking brackets facing downwards.
- Close the securing hooks.
- Insert the push-in pin into whichever rung of the ladder is suitable for the height of the formwork, and secure it with a linch pin.

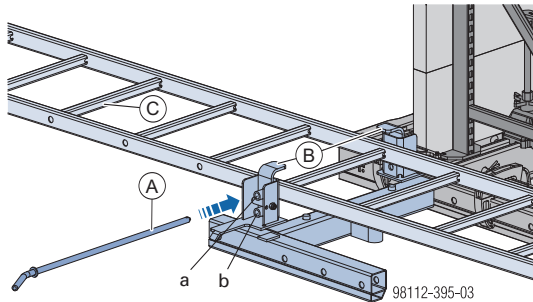

- in the frontmost position (a)


- A** Push-in pin
- B** Securing hook
- C** System ladder XS 4.40m

Animation:

<https://player.vimeo.com/video/274425011>

to the bottom Connector XS wall formwork

- Pull out the push-in pin, pivot both securing hooks out of the way, and place the ladder onto the Connector XS.
- Close the securing hooks, re-insert the push-in pin and secure it with a linch pin.

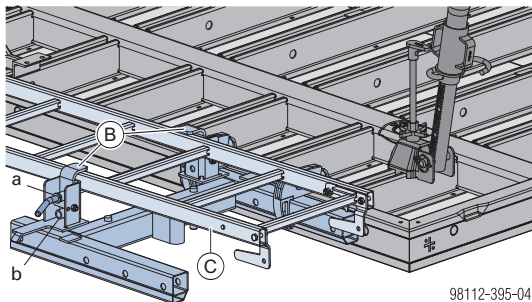


- in the frontmost position (a) for one single ladder
- in the rear position (b) in the telescoping zone (for 2 ladders)

- B** Securing hook
- C** Ladder XS

Animation:

<https://player.vimeo.com/video/274427263>

- Mount the Securing barrier XS to the ladder, with fixing hooks and wing-nuts.

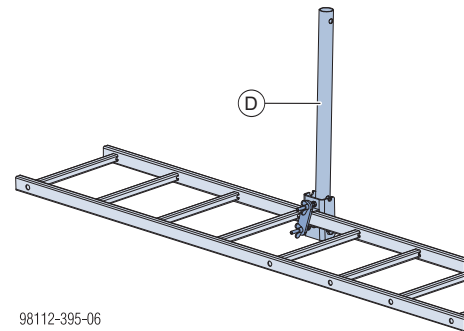


D Securing barrier XS

The components needed for mounting the Securing barrier XS are captively attached to it.


Ladder system XS for heights above 3.75 m

Telescoping ladder extension (for adjusting to ground level)

- To telescope the ladders past one another, lift the safety latch on the ladder and fix the Ladder extension XS 2.30m onto the desired rung of the other ladder.

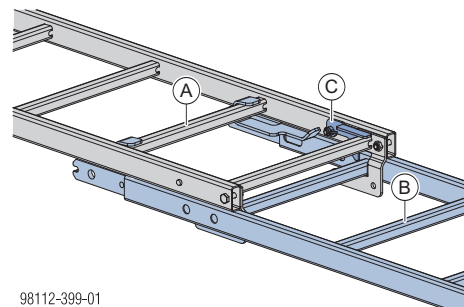

Close-up

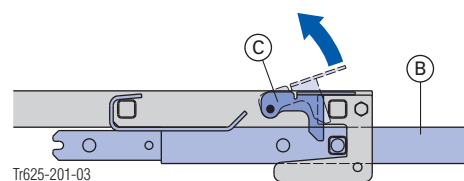


- A** System ladder XS 4.40m
- B** Ladder extension XS 2.30m
- C** Safety latch

A telescoping join between two Ladder extensions XS 2.30m can be made in the same way.

Permanently fixed ladder extension

- Insert the Ladder extension XS 2.30m into the uprights of the System ladder XS 4.40m, with its hooking brackets facing downwards, and fasten it. Tighten the screws only **slightly**!

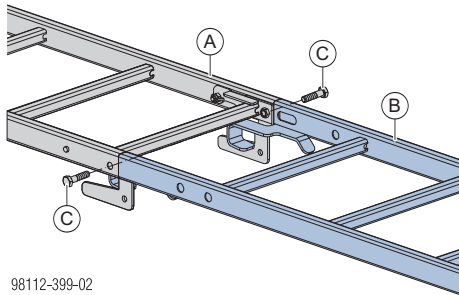

Bolts (C) are included in the scope of supply of the System ladder XS 4.40m and the Ladder extension XS 2.30m.

A System ladder XS 4.40m

B Ladder extension XS 2.30m


C Hexagon bolt M10x40

Two Ladder extensions XS 2.30m can be fixed together in the same way.



NOTICE


- Always observe all relevant safety regulations applying to the use of the ladder cage in the country in which you are operating (e.g. in Germany: BGV D 36).
- Attach the Ladder cage exit XS (the bottom of the cage must always be at the same height as the platform). The safety latches prevent the cage from being accidentally lifted out.

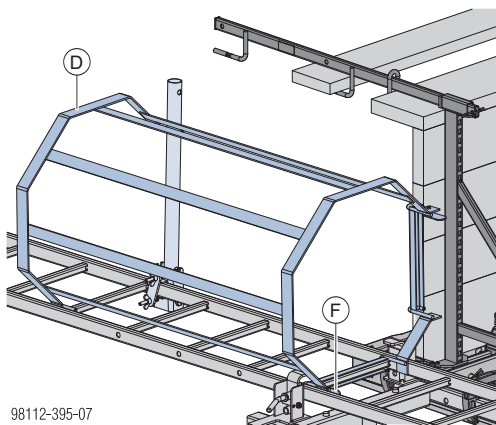

D Ladder cage exit XS

F Safety latch (anti-liftout guard)

- Attach the Ladder cage XS to the next available rung. Attach further ladder cages, in each case to the next available rung.

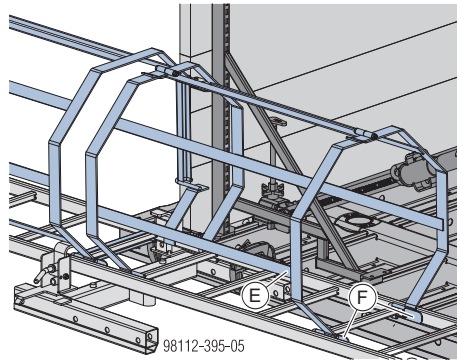

E Ladder cage XS

F Safety latches (anti-liftout guard)

Items needed

| Connectors + ladder | Formwork height | | |
|---------------------------------------------------------------------|-----------------|------------------|------------------|
| | 2.70- 3.75 m | >3.75- 5.85 m | >5.85- 8.10 m |
| Connector XS Wall formwork | 2 | 2 | 3 |
| Quick acting clamp RU or Fixing clamp XS Framax ¹⁾ | 4 | 4 | 6 |
| System ladder XS 4.40m | 1 | 1 | 1 |
| Ladder extension XS 2.30m | 0 | 1 | 2 |

¹⁾ When connected in the function profile

| Ladder cage | Formwork height | | | | | |
|------------------------------------|-----------------|------------------|------------------|------------------|------------------|------------------|
| | 2.70- 3.15 m | >3.15- 4.05 m | >4.05- 5.40 m | >5.40- 6.60 m | >6.60- 7.65 m | >7.65- 8.10 m |
| Ladder cage exit XS ²⁾ | 1 | 1 | 1 | 1 | 1 | 1 |
| Securing barrier XS ²⁾ | 1 | 1 | 1 | 1 | 1 | 1 |
| Ladder cage XS 1.00m ²⁾ | 0 | 1 | 2 | 3 | 4 | 5 |

²⁾ This does not take account of any intermediate exits.



Exit onto an intermediate platform

Basic rule:

- The number of Connectors XS wall formwork and ladder components is shown in the 'Items needed' table.
- For each additional exit, one Ladder cage exit XS and one Securing barrier XS are required.
- Any over-large openings above the intermediate exit must be reduced with a Ladder cage XS 0.25m.

Mounting the Ladder cage XS 0.25m

- Hook the ladder cage into an empty rung and secure it against accidental lift-out.

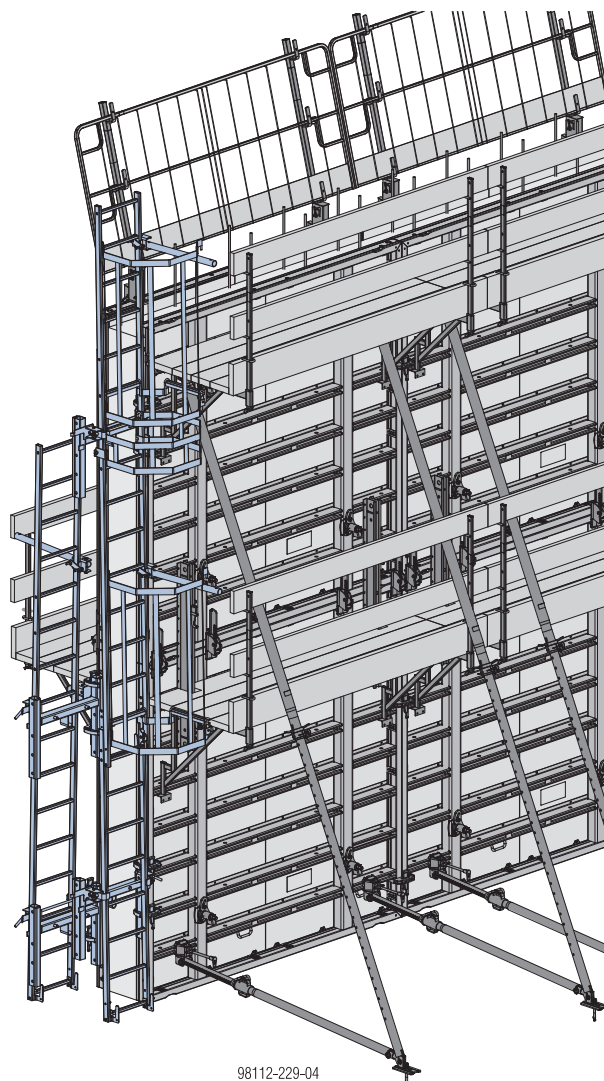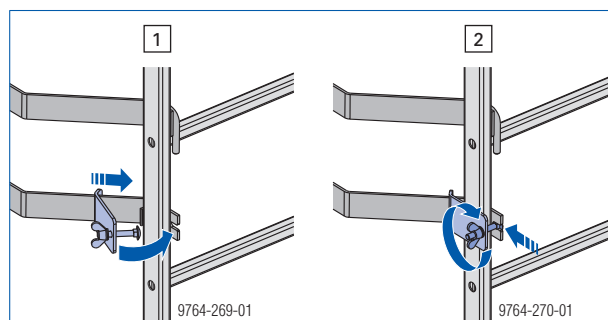

Tools for plumbing and aligning and for stripping the formwork



NOTICE

In preparation for plumbing and aligning or stripping, secure the panel or gang-form so that it cannot tip over (e.g. attach to the crane or secure with panel struts)


Framax positioning lever

The **Framax positioning lever** is a tool for plumbing and aligning the framed formwork and detaching the framed formwork from the hardened concrete.

Note:


Using the positioning lever to detach the formwork leaves impressions in the concrete. If impressions in the concrete are unacceptable: Use the Framax stripping tool!

- Engage the Framax positioning lever in the bottom-most cross borehole of the framed formwork.

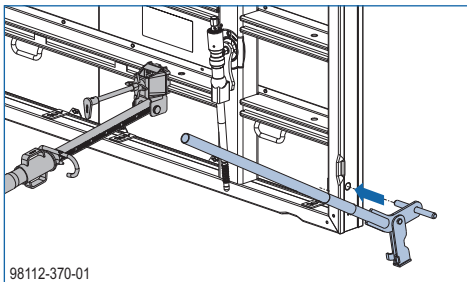


- Plumb and align the framed formwork or lever it away from the concrete, as applicable.

Plumbing and aligning the framed formwork:

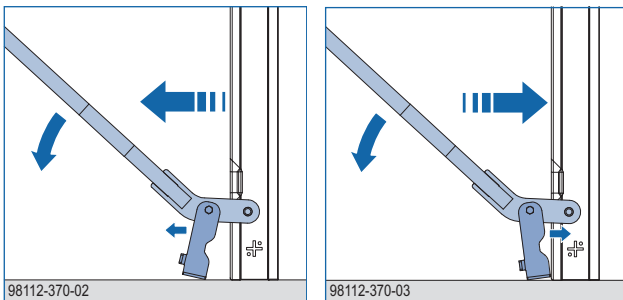


Detaching formwork from the concrete:

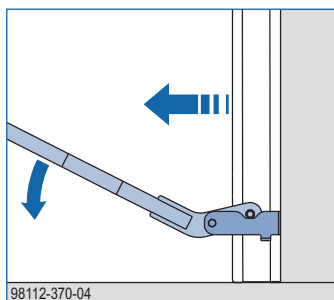


Framax stripping tool

The **Framax stripping tool** is for detaching the framed formwork from the hardened concrete.

- Position the Framax stripping tool into a cross bore-hole of the framed formwork.

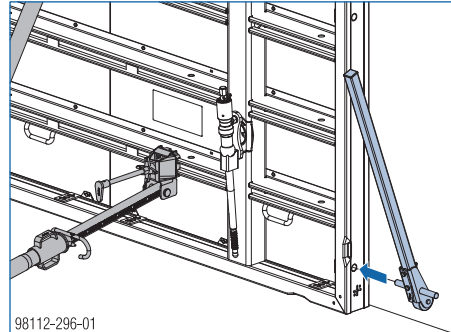

- Lever the framed formwork away from the concrete.

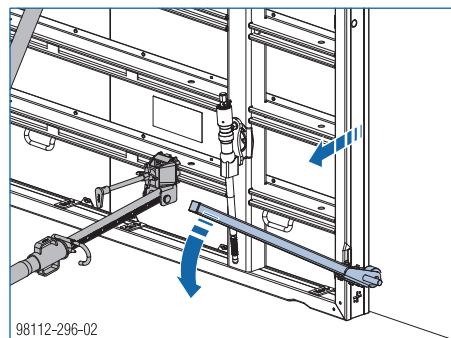

Framax stripping aid

The **Framax stripping aid** is for detaching a framed panel from the hardened concrete by pressing against the neighbouring panel.




NOTICE

- Disengage framed panel uniformly to avoid damaging the function profiles!
- Disengage framed panel approx. 6.0 cm from the concrete. This ensures that the panel cannot be trapped between the adjacent panels on each side on account of the profile geometry.



Start at topmost function profile (1):

- Engage and position two Framax stripping aids in the function profile.

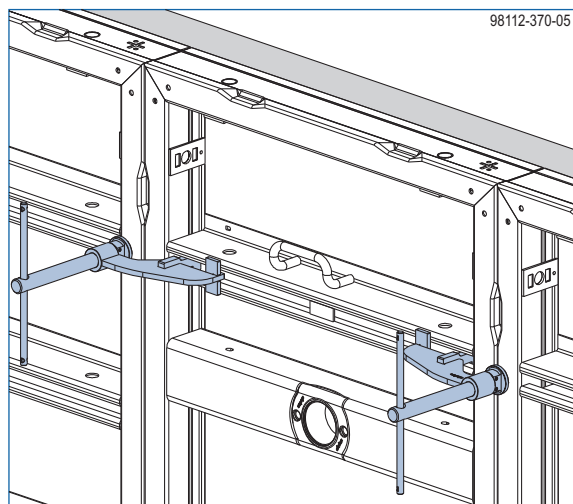

The spindles of the Framax stripping aids act against the frame profile of the neighbouring panel on each side.

- Detach the framed panel from the concrete by tightening both spindles at the same time.
- Repeat the operation at middle function profile (2) and then at the bottom function profile (3).

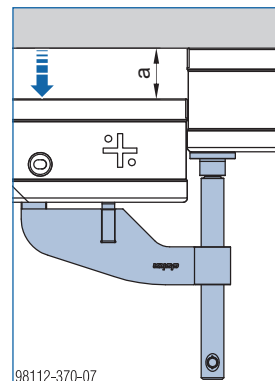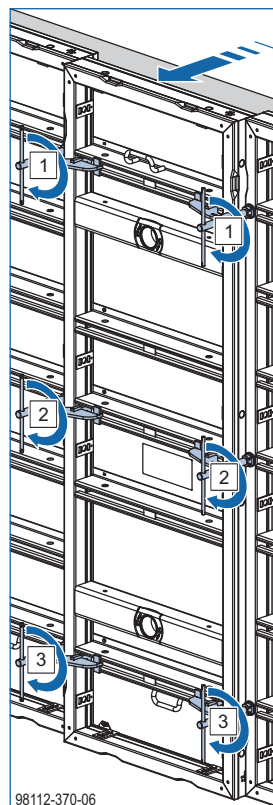


a ... approx. 6.0 cm

- Reposition the detached panel by crane.

Lifting by crane

Safe crane-handling of Framax Xlife plus is possible using the **Doka 4-part chain 3.20m** and the **Framax lifting hook**. The lifting hook locks automatically after being hung into place.

Doka 4-part chain 3.20m

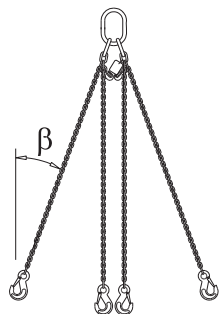

CE


- Attach the Doka 4-part chain 3.20m to the Framax lifting hooks.
- Hang the remaining chain-lengths back in place.

Permissible working load limit (2-part chain):
Up to 30° sling angle β 2400 kg.



Follow the Operating Instructions!

Framax lifting hook

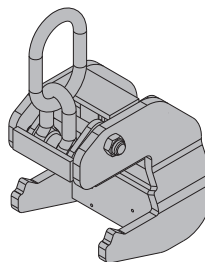

CE

Permitted working load limit:

- Sling angle β up to 30°:
1000 kg (2200 lbs) / Framax lifting hook
- Sling angle β up to 7.5°:
1500 kg (3300 lbs) / Framax lifting hook

Framax lifting hooks with permitted working load limit of 1000 kg (2200 lbs) also meet the requirements for a working load limit of 1500 kg (3300 lbs) max. using a sling angle $\beta \leq 7.5^\circ$.



Follow the Operating Instructions!



NOTICE

On larger gangs, the **Framax lifting hook 20kN** must be used together with a **two-part lifting chain with sufficient working load limit**.

Follow the directions in the 'Framax lifting hook 20kN' Operating Instructions!

Securing the lifting hooks against sliding from side to side



NOTICE

Position the lifting hooks so that they are secured against sideways slippage.

- over **inter-panel joints**
- over **cross profiles** (single panel installed on its side)
- over **centre profiles**
- over **welded-on metal plates**

For other suitable positions see the section headed [Position of the lifting hooks](#).


Position of the lifting hooks

Note:


The positions of the lifting hooks shown here also apply for vertically stacked gang-forms.

Single panel:

Panels up to 60cm wide




Panels over 60cm wide

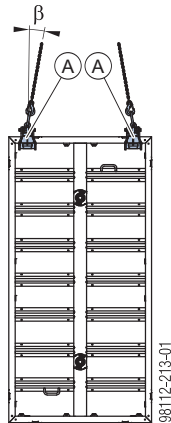


A Welded-on metal plate

Panel 2.70x2.70m / Panel 2.70x3.00m / Panel 2.70x3.30m

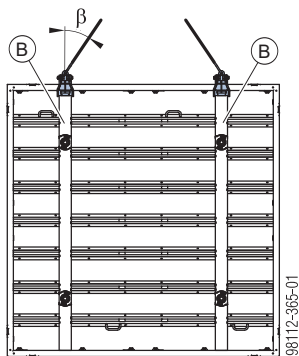


B Centre profile

Gang-form - two panels upright:

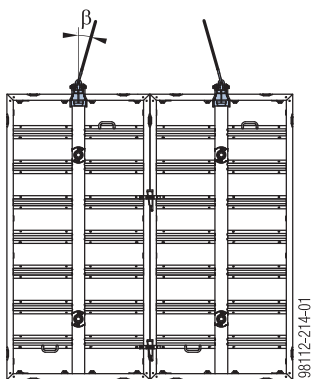


B Centre profile

Gang-form - three (or more) panels upright:

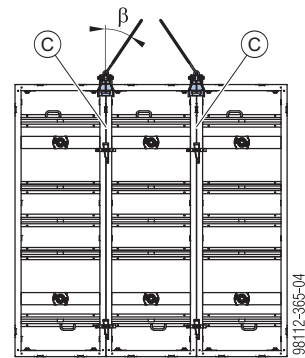

C Inter-panel joint

Gang-form - panel on its side (vertically stacked):

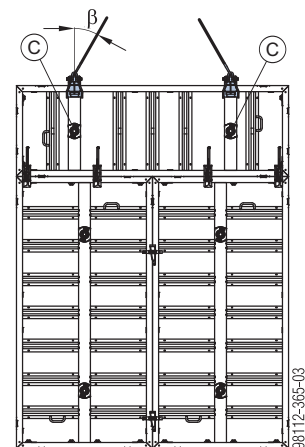

D Cross profile

Assembling tool


For operation of the lifting hook on upright formwork by operator on ground level.



CAUTION

Risk of the lifting hook falling when operated with assembling tool!

- ▶ With the crane, position the lifting hook level with the lifting point.

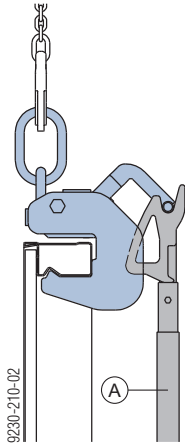


Formwork height

| | |
|-------------------------------------------------------------------------------|--------------|
| A Framax telescopic assembling tool (telescopes from 230 to 400 cm) | 2.70 - 5.40m |
| Framax assembling tool | 2.70 - 3.30m |



In addition to operation of the lifting hook, the **Framax assembling tool** also offers the following functions:

- Pulling out double-headed nails
- Plumbing and aligning the formwork

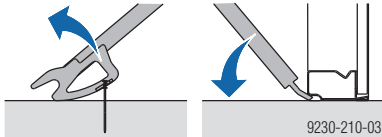

Transporting, stacking and storing

Bundling the Framax Xlife plus panels



NOTICE

Before stacking the panels, dismount the Framax Xlife plus distance protectors NG.

- 1) Position sleepers measuring approx. 8.0 x 10.0 (W x H) underneath the cross profile.
- 2) Strap the sleepers (hardwood blocking) and the bottom panel together with metal banding.



WARNING


The smooth surface of the powder-coated panels reduces the sticking friction.

- It is strictly forbidden to lift stacks of panels without inserting Framax Xlife plus stacking cones (2 cones per layer) first!


Exception: Stacking cones are not required if the stack is lifted using the Framax transport gear.

- 3) Insert Framax Xlife plus stacking cones.

Panels with Form-tie nuts I 20.0

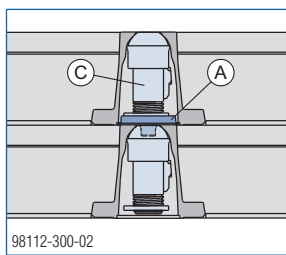


Panels with no form-tie nuts

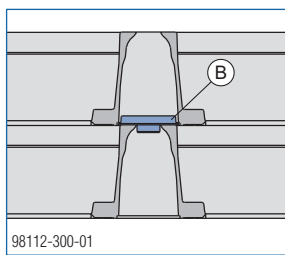

- A Framax Xlife plus stacking cone I
- B Framax Xlife plus stacking cone
- C Framax Xlife plus form-tie nuts I 20.0

The stacking cones stop the panels slipping.

- 4) Strap the whole stack together tightly with strapping tape.

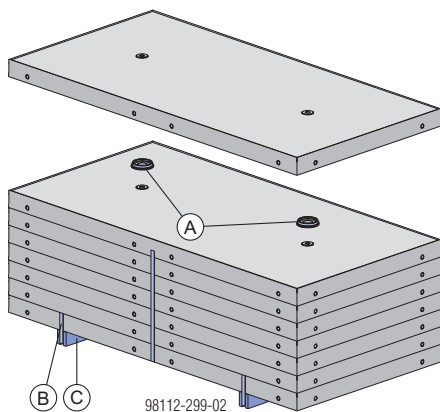

- A Framax Xlife plus stacking cone or Framax Xlife plus stacking cone I
- B Strapping tape
- C Sleeper

Max. number of panels in a stack:

| Panel | Max. number of panels stacked on top of one another | Stacking height incl. sleepers |
|------------------|-----------------------------------------------------|--------------------------------|
| up to 1.35x2.70m | 8 | approx. 110 cm |
| 2.70x2.70m | 4 | approx. 60 cm |
| up to 0.90x3.30m | 8 | approx. 110 cm |
| 1.35x3.00m | 8 *) | approx. 110 cm |
| 2.70x3.00m | 4 | approx. 60 cm |
| up to 0.90x3.30m | 8 | approx. 110 cm |
| 1.35x3.30m | 5 | approx. 75 cm |
| 2.70x3.30m | 4 *) | approx. 60 cm |


*) Stack weight in excess of 2000 kg:

Consequently, the Framax transport bolts have to be used with a Doka 4-part chain 3.20m for lifting by crane.

Transporting the Framax Xlife plus panels

Dokamatic lifting strap 13.00m

The Lifting strap 13.00m is a practical tool for **offloading and loading trucks**, and for **lifting and setting down stacks of panels**.

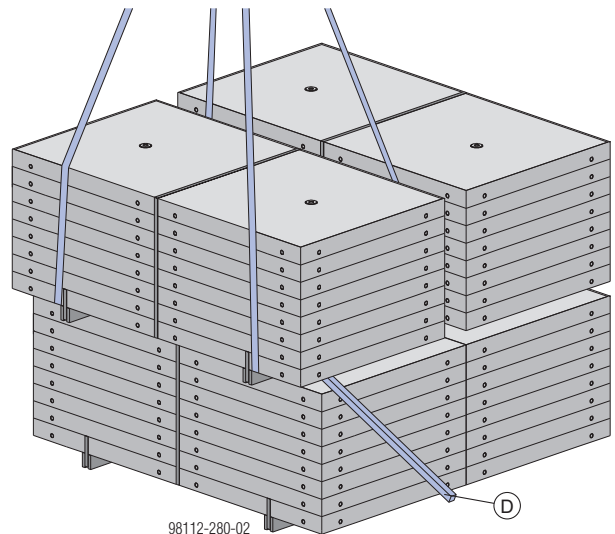

With closely stacked panel bundles:

- lever-up a panel bundle (e.g. with a squared timber (D)), to make a space for threading in the slings.

Caution!

Always make sure that the panel bundle remains stable!



WARNING

- The Lifting straps 13.00m may only be used as shown if there is no risk of the straps sliding towards one another, or of the load being displaced.

Permitted working load limit:


2000 kg / Dokamatic lifting strap 13.00m



Follow the Operating Instructions!

Framax transport gear

For safe crane transport of stacked panels at construction sites, depots etc.

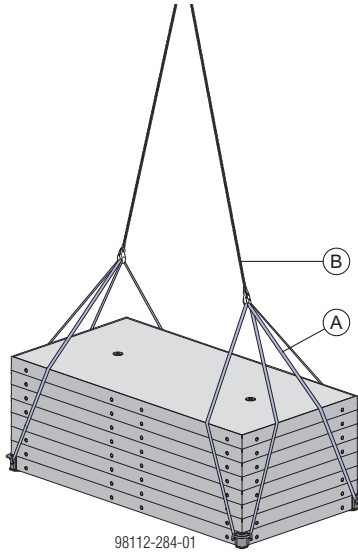

A Framax transport gear (consisting of 4 round slings)

B Chain suspension gear or Doka 4-part chain 3.20m

The four round slings of the transport gear hold the stack together on all four sides, in such a way that it is impossible for individual panels to slip out.

Benefits:

- Spring-loaded slinging hooks reach from underneath into the beads of the panel frame and prevent the transport gear accidentally detaching itself when the cable tension slackens.
- The automatic length compensation feature of the Framax transport gear ensures that the load is distributed evenly.
- The Framax transport gear can easily be suspended and detached by just one person working on their own.

Permitted working load limit:

2000 kg / 4 round slings

Precondition for use

The stacks must always be of panels of equal width.



Follow the Operating Instructions!


Doka 4-part chain 3.20m

The Doka 4-part chain 3.20m is a multi-functional slinging means:

- used with the integrated **eye hooks** for hoisting formwork, platforms and multi-trip packaging containers.

For more information, see the section headed [Lifting by crane](#).

- used in conjunction with **Framax transport bolts** for hoisting stacks of panels and individual panels.

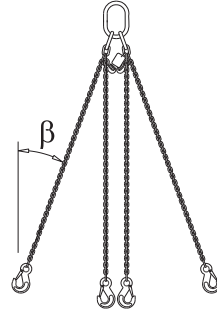

The Doka 4-part chain 3.20m can be adjusted to the centre-of-gravity position by shortening the length of individual chains.

Permissible working load limit:


| | Sling angle β | | | |
|-----------------------|---------------------|---------|---------|---------|
| | 0° | 0°-30° | 30°-45° | 45°-60° |
| Using one chain | 1400 kg | - | - | - |
| Using two chains | - | 2400 kg | 2000 kg | 1400 kg |
| Using all four chains | - | 3600 kg | 3000 kg | 2120 kg |



Follow the Operating Instructions!

Framax transport bolts with Doka 4-part chain 3.20m

The Framax transport bolts (A), in combination with the Doka 4-part chain 3.20m (B), are for moving panels either individually or in stacks.

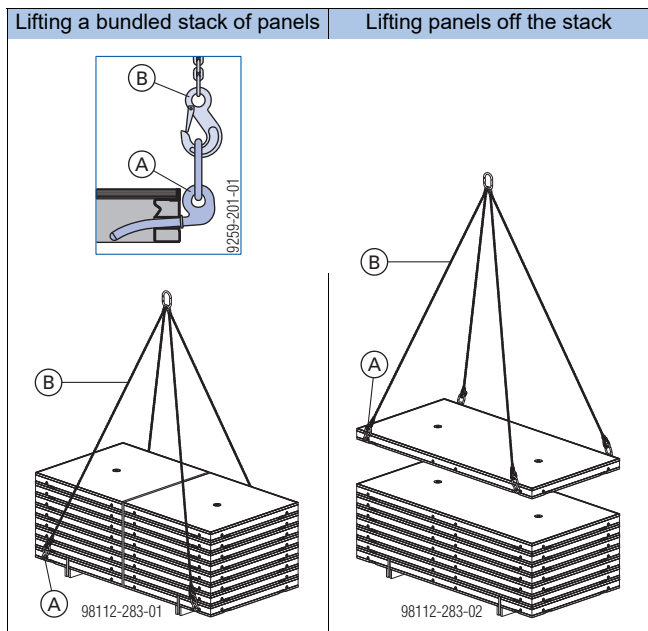

Permitted working load limit:

800 kg / Framax transport bolt


Framax transport bolts manufactured until 2015, with a stated working load limit of 500 kg, are also capable of a working load limit of 800 kg.



Follow the Operating Instructions!

Lifting panels upright / turning panels over

- Use **Framax transport bolts** to lay the framed panel flat on squared timbers 20x20 cm

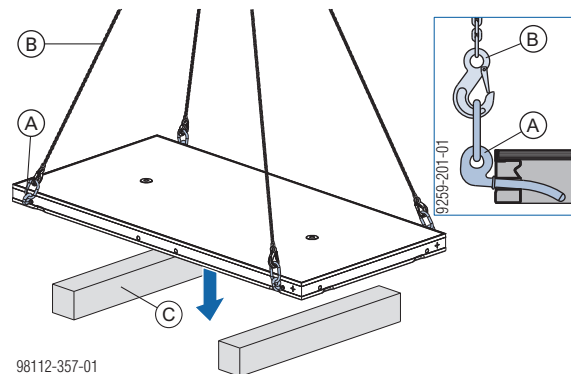

A Framax transport bolt

B Doka 4-part chain 3.20m

C Squared timber 20x20 cm




WARNING

Using Framax transport bolts to lift the framed panels upright or turn them over is prohibited!

- Use Framax lifting hooks!

- Position the Framax lifting hooks. Lift the framed panel upright with **Framax lifting hooks** and, if applicable, lay it flat with the sheeting side down.

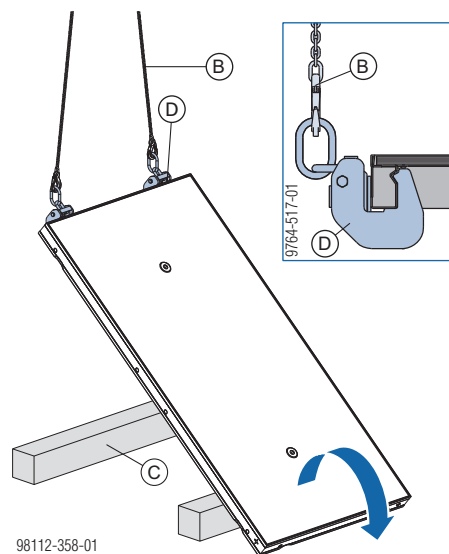

B Doka 4-part chain 3.20m

C Squared timber 20x20 cm

D Framax lifting hook




Follow the Operating Instructions!

Utilise the benefits of Doka multi-trip packaging on your site.

Multi-trip packaging such as containers, stacking pallets and skeleton transport boxes keep everything in place on the site, minimise time wasted searching for parts, and streamline the storage and transport of system components, small items and accessories.

Doka skeleton transport box 1.70x0.80m

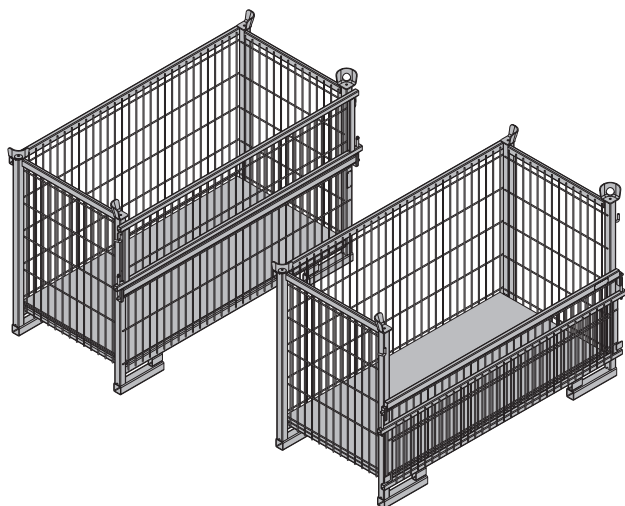

Storage and transport device for small items.
To make the Doka skeleton transport box easier to load and unload, one of its sidewalls can be opened.

Permitted load-bearing capacity: 700 kg (1540 lbs)
Permitted imposed stacking load: 3150 kg (6950 lbs)

Using Doka skeleton transport boxes 1.70x0.80m as storage units

Max. n° of units on top of one another

| Outdoors (on the site) Floor gradients up to 3% | Indoors Floor gradients up to 1% |
|-----------------------------------------------------------------|-------------------------------------|
| 2 | 5 |
| It is not allowed to stack empty pallets on top of one another! | |



NOTICE

Stacked multi-trip boxes or pallets must have the heaviest boxes at the bottom and the lightest at the top.


Using Doka skeleton transport boxes 1.70x0.80m as transport devices

Lifting by crane



NOTICE

- Multi-trip packaging items must be lifted individually.
- Only lift the boxes when their sidewalls are closed!
- Use suitable lifting chains:
 - e.g. Doka 4-part chain 3.20m
 - Do not exceed the permitted working load limit of the lifting chains.
- Sling angle β max. 30°!

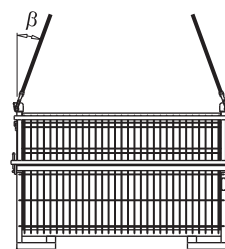

9234-203-01


Repositioning by forklift truck or pallet stacking truck

The forks can be inserted under either the broadside or the narrowside of the containers.

Doka multi-trip transport box


Storage and transport device for small items

Doka multi-trip transport box 1.20x0.80m

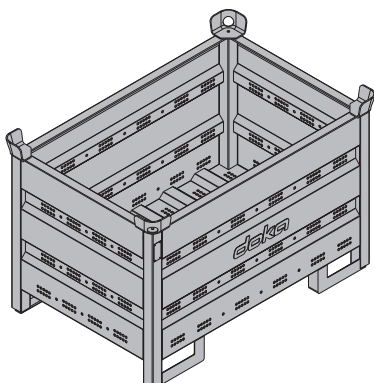

Permitted load-bearing capacity: 1500 kg (3300 lbs)
Permitted imposed stacking load: 7850 kg (17300 lbs)

Different items in the Doka multi-trip transport box can be kept separate with the **Multi-trip transport box partitions 1.20m or 0.80m**.

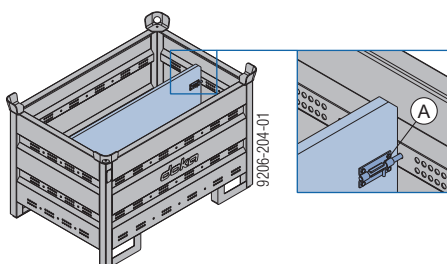

A Slide-bolt for fixing the partition


Possible ways of dividing the box

| Multi-trip transport box partition | in the longitudinal direction | in the transverse direction |
|------------------------------------|-------------------------------|-----------------------------|
| 1.20m | max. 3 | - |
| 0.80m | - | max. 3 |

9206-204-02

9206-204-03

Doka multi-trip transport box 1.20x0.80mx0.41m

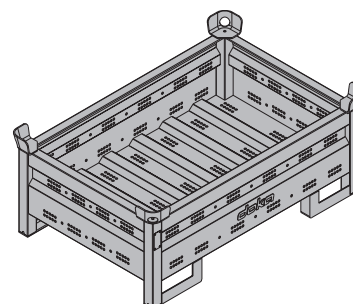

Permitted load-bearing capacity: 750 kg (1650 lbs)
Permitted imposed stacking load: 7200 kg (15870 lbs)

Using Doka multi-trip transport boxes as storage units

Max. n° of units on top of one another

| Outdoors (on the site) | | Indoors | |
|-----------------------------------------------------------------|-----------------------------------------------|------------------------------------------|-----------------------------------------------|
| Floor gradients up to 3% | | Floor gradients up to 1% | |
| Doka multi-trip transport box 1.20x0.80m | Doka multi-trip transport box 1.20x0.80x0.41m | Doka multi-trip transport box 1.20x0.80m | Doka multi-trip transport box 1.20x0.80x0.41m |
| 3 | 5 | 6 | 10 |
| It is not allowed to stack empty pallets on top of one another! | | | |



NOTICE

Stacked multi-trip boxes or pallets must have the heaviest boxes at the bottom and the lightest at the top.


Using Doka multi-trip transport boxes as transport devices

Lifting by crane



NOTICE

- Multi-trip packaging items must be lifted individually.
- Use suitable lifting chains:
 - e.g. Doka 4-part chain 3.20m
 - Do not exceed the permitted working load limit of the lifting chains.
- Sling angle β max. 30°!

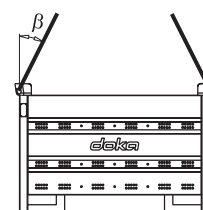


9206-202-01

Repositioning by forklift truck or pallet stacking truck

The forks can be inserted under either the broadside or the narrowside of the containers.

Doka stacking pallet 1.55x0.85m and 1.20x0.80m

Storage and transport device for long items.

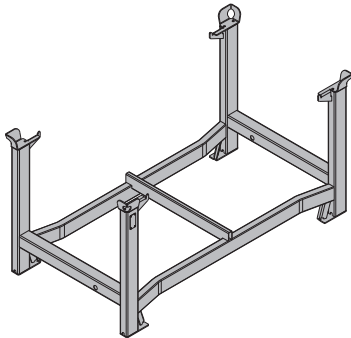

Permitted load-bearing capacity: 1100 kg (2420 lbs)
Permitted imposed stacking load: 5900 kg (13000 lbs)

Using Doka stacking pallets as storage units

Max. n° of units on top of one another

| Outdoors (on the site) Floor gradients up to 3% | Indoors Floor gradients up to 1% |
|-----------------------------------------------------------------|-------------------------------------|
| 2 | 6 |
| It is not allowed to stack empty pallets on top of one another! | |



NOTICE

- Stacked multi-trip boxes or pallets must have the heaviest boxes at the bottom and the lightest at the top.
- How to use with Bolt-on castor set B:
 - Always apply the fixing brake when the container is 'parked'.
 - When Doka stacking pallets are stacked, the bottom pallet must NOT be one with a bolt-on castor set mounted to it.


Using Doka stacking pallets as transport devices

Lifting by crane



NOTICE

- Multi-trip packaging items must be lifted individually.
- Use suitable lifting chains:
 - e.g. Doka 4-part chain 3.20m
 - Do not exceed the permitted working load limit of the lifting chains.
- Load the items centrally.
- Fasten the load to the stacking pallet (e.g. with strapping tape or lashing strap) so that it cannot slide or tip out.
- Sling angle β max. 30°!

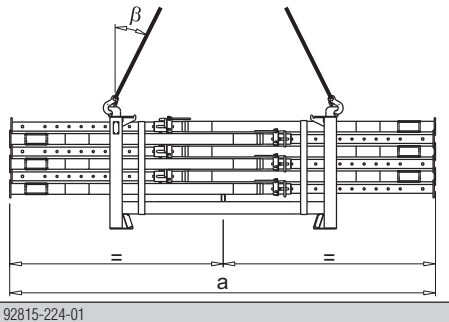

92815-224-01

| | a |
|---------------------------------|------------|
| Doka stacking pallet 1.55x0.85m | max. 4.5 m |
| Doka stacking pallet 1.20x0.80m | max. 3.0 m |

Repositioning by forklift truck or pallet stacking truck




NOTICE

- Load the items centrally.
- Fasten the load to the stacking pallet (e.g. with strapping tape or lashing strap) so that it cannot slide or tip out.

Doka accessory box

Storage and transport device for small items.

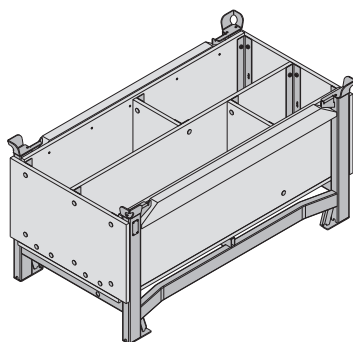

Permitted load-bearing capacity: 1000 kg (2200 lbs)
Permitted imposed stacking load: 5530 kg (12190 lbs)

Doka accessory boxes as storage units

Max. n° of units on top of one another

| Outdoors (on the site) Floor gradients up to 3% | Indoors Floor gradients up to 1% |
|-----------------------------------------------------------------|-------------------------------------|
| 3 | 6 |
| It is not allowed to stack empty pallets on top of one another! | |



NOTICE

- Stacked multi-trip boxes or pallets must have the heaviest boxes at the bottom and the lightest at the top.
- How to use with Bolt-on castor set B:**
 - Always apply the fixing brake when the container is 'parked'.
 - When Doka stacking pallets are stacked, the bottom pallet must NOT be one with a bolt-on caster set mounted to it.


Doka accessory box as transport devices

Lifting by crane



NOTICE

- Multi-trip packaging items must be lifted individually.
- Use suitable lifting chains:
 - e.g. Doka 4-part chain 3.20m
 - Do not exceed the permitted working load limit of the lifting chains.
- When lifting units to which Bolt-on castor sets B have been attached, you must also follow the directions in the 'Bolt-on castor set B' User information booklet!
- Sling angle β max. 30°!

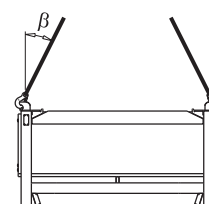

92816-206-01

Repositioning by forklift truck or pallet stacking truck

The forks can be inserted under either the broadside or the narrowside of the containers.


Universal castor wheel for transport pallet

The Universal castor wheel for transport pallet turns multi-trip packaging items into fast and manoeuvrable transport devices.

- 4 castor wheels needed per multi-trip packaging item.
- Compatible multi-trip packaging items:
 - Doka stacking pallets (all sizes)
 - Doka multi-trip transport box 1.20x0.80m
 - Doka skeleton transport box 1.70x0.80m
 - DokaXdek panel pallets (all sizes)
 - Superdek beam pallet 1.22x1.10m




Follow the directions in the 'Universal castor wheel for transport pallet' User Information booklet.

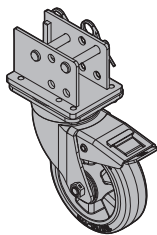

Bolt-on castor set B

The Bolt-on castor set B turns multi-trip packaging items into fast and manoeuvrable transport devices. Suitable for drive-through access openings > 90 cm.

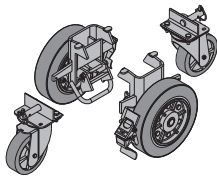

The Bolt-on castor set B can be mounted to the following multi-trip packaging items:

- Doka accessory box
- Doka stacking pallets
- Protective barrier Z pallets



Follow the directions in the 'Bolt-on castor set B' User Information booklet!

General

Areas of use

Bottom joist

| Framax Xlife plus panel (on its side) | Number of Framax head anchors |
|---------------------------------------|-------------------------------|
| 1.35x3.30m | 3 |
| 1.35x3.00m | 3 |
| 0.30 up to 0.90x3.30m | 2 |
| 0.30 up to 0.90x3.00m | 2 |
| 0.30 up to 1.35x2.70m | 2 |

| Framax Xlife plus panel (upright) | Number of Framax head anchors |
|-----------------------------------|-------------------------------|
| 1.35x1.35m | 1 |
| 0.30 up to 0.90x1.35m | 1* |

* ... only at every second panel

Framax head anchor:


Permitted tensile force: 10 kN

Permitted compressive force: 10 kN

Note:

For directions on installing the Framax head anchor see the section headed [Framax head anchor 15-40cm](#).

Example with 0.90x2.70m panel

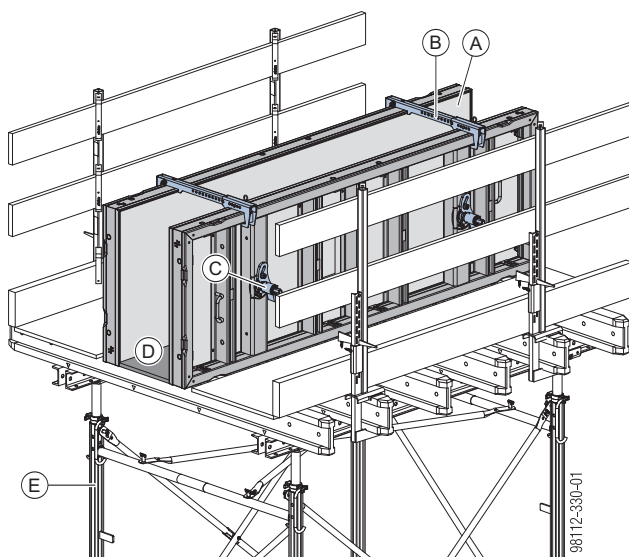

Shown here without ladderways.

A Framax Xlife plus panel 0.90x2.70m


B Framax head anchor

C Tie rod system Framax Xlife plus

D Formwork sheet

E Load-bearing tower (e.g. Staxo eco)

Foundation formwork

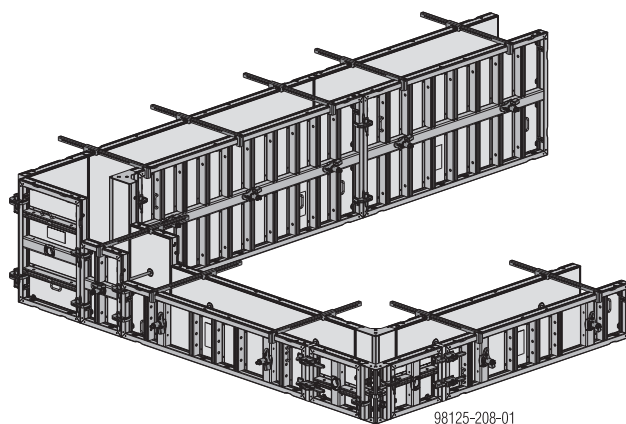


Follow the directions in the 'Foundation formwork Framax Xlife plus' User Information booklet.

Framax Xlife plus combined with . . .

Climbing formwork MF240

Climbing formwork MF240 proves its versatility on all tall structures. The formwork and climbing scaffold are linked together as a single unit which can be repositioned in one single crane cycle.

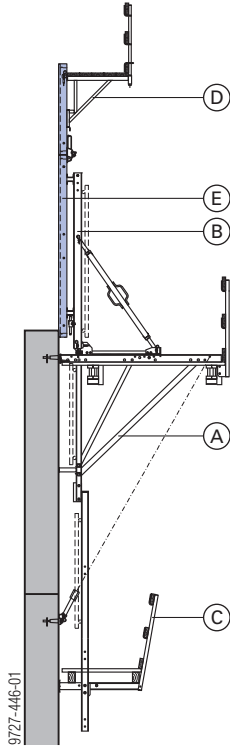

- A Climbing bracket MF240
- B Travelling unit MF
- C Suspended platform MF75 5.00m
- D Framax bracket 90
- E Framax Xlife plus panel



Follow the directions in the 'Climbing formwork MF240' User Information booklet!

Doka automatic climbing formwork

With their modular design concept, these crane-independent automatic climbing formwork systems provide an efficient solution for every type of structure.

The formwork and climbing scaffold are linked together as a single unit which can be lifted and reset hydraulically.




Follow the directions in the relevant User Information booklet.

Doka folding platforms

The high capacity of these working and safety scaffolds means that the formwork can safely be stood on the folding platforms.

Adding a few standard parts converts a working platform into a climbing formwork unit which can be shifted as a complete form and access-platform in one single operation.

This makes work at great heights faster and more efficient.

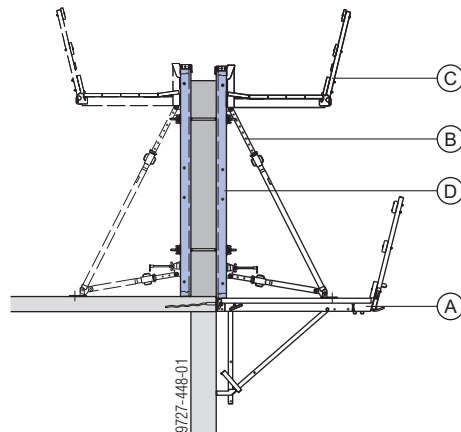

- A Doka folding platform
- B Panel strut
- C Framax pouring platform
- D Framax Xlife plus panel




Follow the directions in the "Folding platform K" and "Climbing formwork K" User Information booklets!

Doka supporting construction frames

The Doka supporting construction frames also enable the sturdy Framax Xlife plus panels to be used as single-sided wall formwork.

Supporting construction frame "Variable"

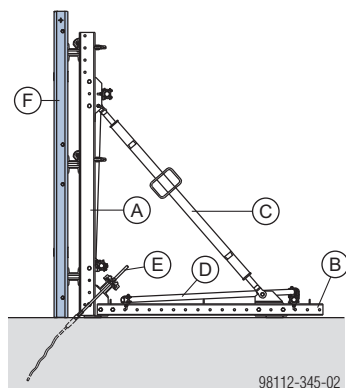


- A** Waling WU14 for supporting construction frame
- B** Multi-purpose walings WS10 Top50 2.00m
- C** Spindle strut 12 3.00m
- D** Bracing
- E** Tension anchoring
- F** Framax Xlife plus panel



Follow the directions in the 'Supporting construction frame "Variable"' User Information booklet.

Supporting construction frame "Universal"

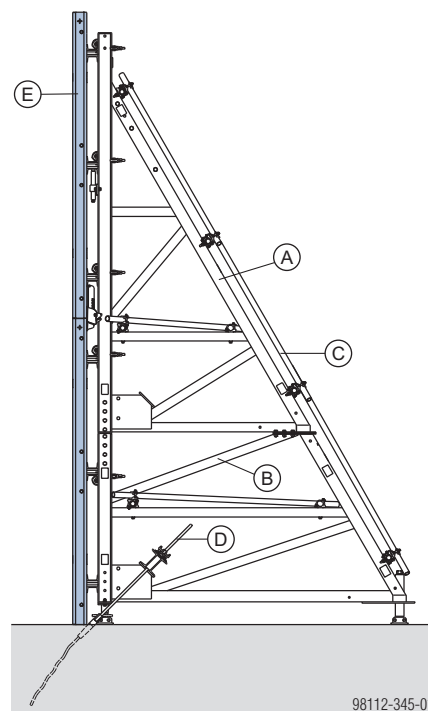

- A** Supporting construct. frame Universal F 4.50m
- B** Attachable frame F 1.50m
- C** Bracing
- D** Tension anchoring
- E** Framax Xlife plus panel




Follow the directions in the 'Supporting construction frame "Universal"' User Information booklet.

Cleaning and care of your equipment

Release agents

Doka-Trenn or Doka-OptiX is applied using the Doka release-agent sprayer.



Follow the directions in the 'Doka release-agent sprayer' Operating Instructions and on the containers of release agent.



NOTICE

- Before every pour:
 - Apply release agent to the formwork sheet and the end faces **extremely thinly, evenly** and **in a continuous layer**.
- Make sure there are no drips of release-agent running down the formwork sheet.
- Applying too much release agent will spoil the concrete finish.




To determine the right dosage and to make sure that you are using the agent correctly, test it on less important parts of the structure first.

Cleaning



NOTICE

- Immediately after pouring:
 - Remove any blobs of concrete from the back-face of the formwork, using water (without any added sand).
- Immediately after stripping out the formwork
 - Clean the formwork with a high-pressure washer and a concrete scraper.
- Do not use any chemical cleaning agents!

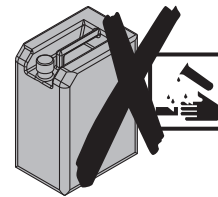


Cleaning high formwork:

Provide a service tower at a suitable cleaning location.

- Wheel-around scaffold DF (up to a formwork height of 3.90 m)
- Working scaffold Modul (up to a formwork height of 6,70 m)
- Load-bearing tower Staxo 40 (for formwork of over 6.70 m in height)

Cleaning equipment

High-pressure spray cleaner

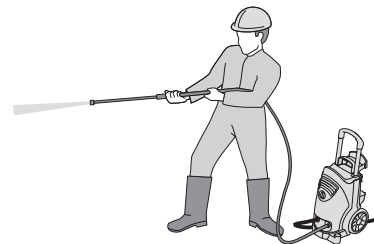


NOTICE



- Appliance pressure rating: 200 to max. 300 bar
- Keep the water-jet the correct distance from the formwork, and move it at the right speed:
 - The higher the pressure, the further away from the formwork you must keep the jet and the faster you must move it across the surface.
- Do not aim the jet at one place for too long.
- Make only moderate use of the jet around the silicone sealing strip:
 - If the pressure is too high, this will damage the silicone sealing strip.
 - Do not aim the jet at one place for too long.

Concrete scraper

For removing any concrete remnants, we recommend using a **Double scraper Xlife** and a spatula.

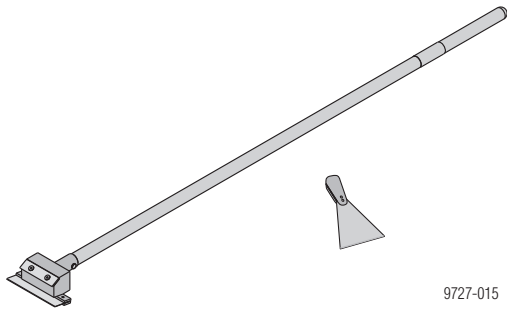

Functional description:

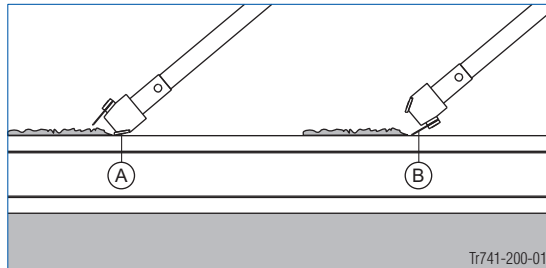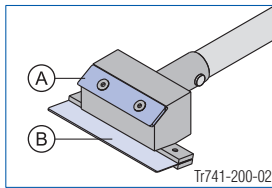


A Blade for dealing with heavy soiling

B Blade for dealing with slight soiling




NOTICE

Do not use pointed or sharp objects, wire brushes, abrasive disks or cup brushes.

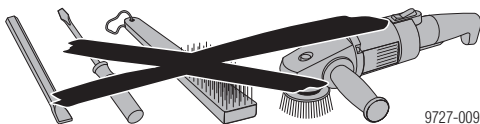


Anchoring-sleeve cleaner

Clean the form-tie sleeve with the Framax Xlife plus anchoring sleeve cleaner.

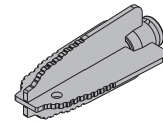

- ▶ Snap the anchoring sleeve cleaner on to the Framax Xlife plus ratchet and turn the cleaner in the sleeve.

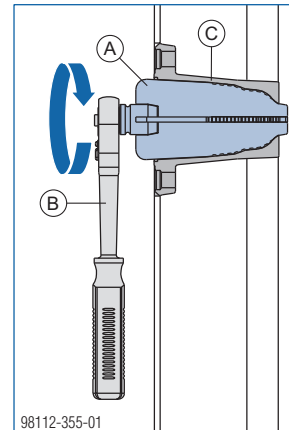

A Framax Xlife plus anchoring-sleeve cleaner

B Framax Xlife plus ratchet 1/2" SW24 L

C Form-tie sleeve inside the Framax Xlife plus panel




NOTICE


Do not use with an impact wrench! That can cause damage to the form-tie sleeve.

Care

- No hammer-blows to the frame profiles

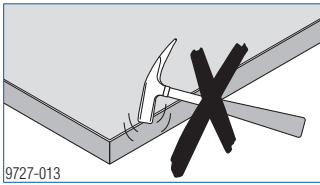


- Do not use nails on the formwork that are longer than 60 mm

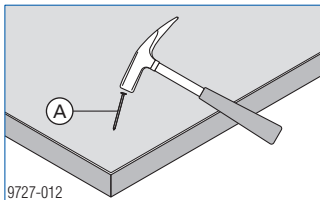


A max. l=60 mm

- Never push over panels or allow them to fall

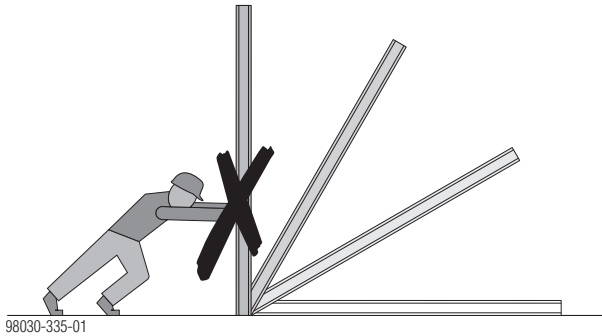

- Only stack panel gangs on top of one another with timber battens (**A**) between each layer.

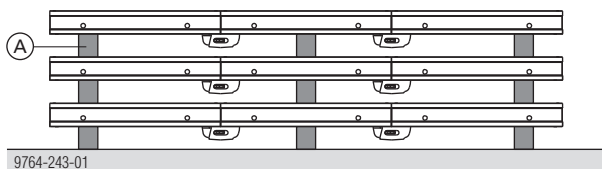


This prevents the formwork sheets from being damaged by the connector components.

Fall protection on the structure

Xsafe edge protection XP

- Attached with screw-on shoe, railing clamp, hand-rail-post shoe or Step bracket XP
- Protective grating XP, guardrail boards or scaffold tubes can be used as the safety barrier

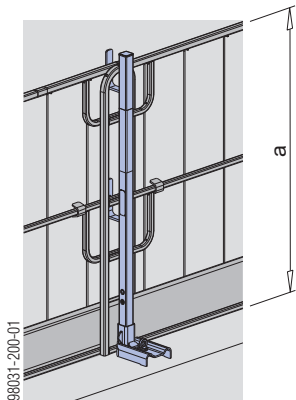


a ... > 1.00 m



Follow the directions in the 'Xsafe edge protection XP' User Information booklet.

Handrail clamp S

- Attached with integral clamp
- Guard-rail boards or scaffold tubes can be used as the safety barrier

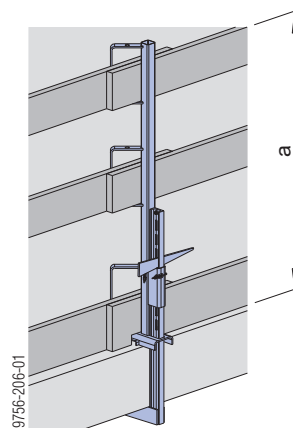


a ... > 1.00 m



Follow the directions in the "Handrail clamp S" User information!

Xsafe edge protection Z

- Attachment by integral screw-on shoe
- Protective barrier Z can be used as the safety barrier

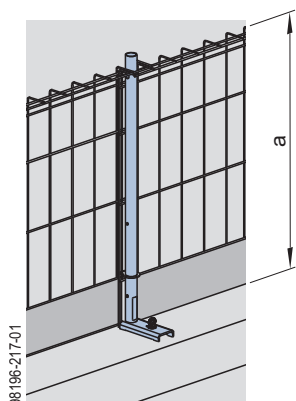


a ... > 1.17 m



Follow the directions in the 'Xsafe edge protection Z' User Information booklet.

Handrail post 1.10m



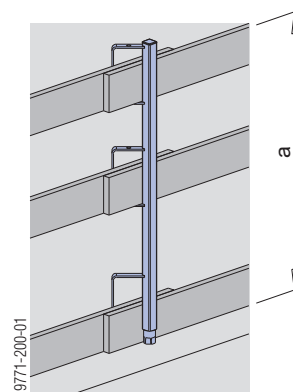




- Fixed in a Screw sleeve 20.0 or Attachable sleeve 24mm
- Guard-rail boards or scaffold tubes can be used as the safety barrier

























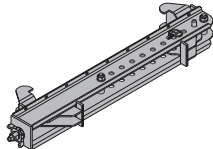

a ... > 1.00 m











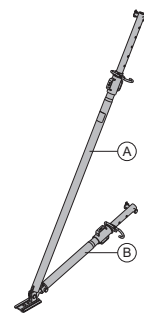
















Follow the directions in the 'Handrail post 1.10m' User Information!



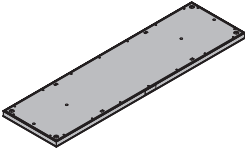

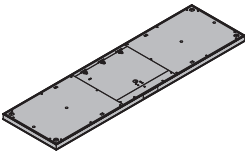
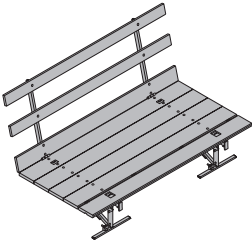


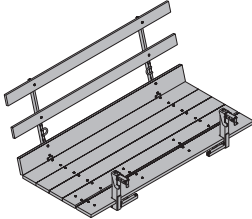





| | [kg] | Article N° | | [kg] | Article N° |
|-------------------------------------------------------------------------------------|-------|------------|-------------------------------------------------------------------------------------|-------|------------|
| Framax Xlife plus panel 2.70x3.30m | 521.5 | 589290600 | Framax Xlife plus panel 1.35x1.35m | 114.0 | 589267600 |
| Framax Xlife plus panel 1.35x3.30m | 273.0 | 589291600 | Framax Xlife plus panel 0.90x1.35m | 78.3 | 589268000 |
| Framax Xlife plus panel 0.90x3.30m | 196.6 | 589292600 | Framax Xlife plus panel 0.75x1.35m | 71.0 | 589269000 |
| Framax Xlife plus panel 0.75x3.30m | 174.7 | 589293600 | Framax Xlife plus panel 0.60x1.35m | 57.5 | 589270000 |
| Framax Xlife plus panel 0.60x3.30m | 137.7 | 589294600 | Framax Xlife plus panel 0.55x1.35m | 53.0 | 589334000 |
| Framax Xlife plus panel 0.55x3.30m | 128.3 | 589330600 | Framax Xlife plus panel 0.50x1.35m | 49.8 | 589335000 |
| Framax Xlife plus panel 0.50x3.30m | 121.2 | 589331600 | Framax Xlife plus panel 0.45x1.35m | 46.0 | 589271000 |
| Framax Xlife plus panel 0.45x3.30m | 114.5 | 589295600 | Framax Xlife plus panel 0.30x1.35m | 35.5 | 589272000 |
| Framax Xlife plus panel 0.30x3.30m | 91.5 | 589296600 | Framax Xlife plus-Element 1,35m | | |
| Framax Xlife plus-Element 3,30m | | | Galvanised | | |
| | | | Powder-coated grey | | |
| | | | Custom sizes on enquiry! | | |
|  | | |  | | |
| | | | | | |
| Framax Xlife plus panel 2.70x3.00m | 480.0 | 589350000 | Framax Xlife plus panel 0.90x0.60m | 42.8 | 589313000 |
| Framax Xlife plus panel 1.35x3.00m | 252.0 | 589352000 | Framax Xlife plus panel 0.75x0.60m | 38.8 | 589314000 |
| Framax Xlife plus panel 0.90x3.00m | 182.3 | 589353000 | Framax Xlife plus panel 0.60x0.60m | 33.0 | 589315000 |
| Framax Xlife plus panel 0.75x3.00m | 158.6 | 589354000 | Framax Xlife plus panel 0.55x0.60m | 27.5 | 589336000 |
| Framax Xlife plus panel 0.60x3.00m | 119.8 | 589355000 | Framax Xlife plus panel 0.50x0.60m | 26.2 | 589337000 |
| Framax Xlife plus panel 0.55x3.00m | 110.2 | 589356000 | Framax Xlife plus panel 0.45x0.60m | 24.5 | 589316000 |
| Framax Xlife plus panel 0.50x3.00m | 103.5 | 589357000 | Framax Xlife plus panel 0.30x0.60m | 18.4 | 589317000 |
| Framax Xlife plus panel 0.45x3.00m | 98.5 | 589358000 | Framax Xlife plus-Element 0,60m | | |
| Framax Xlife plus panel 0.30x3.00m | 77.0 | 589359000 | Galvanised | | |
| Framax Xlife plus-Element 3,00m | | | Powder-coated grey | | |
| | | | Custom sizes on enquiry! | | |
|  | | |  | | |
| | | | | | |
| Framax Xlife plus panel 2.70x2.70m | 435.5 | 589260600 | Framax Xlife plus panel C 2.70x3.30m | 521.5 | 589290000 |
| Framax Xlife plus panel 1.35x2.70m | 222.5 | 589261600 | Framax Xlife plus panel C 1.35x3.30m | 273.0 | 589291000 |
| Framax Xlife plus panel 0.90x2.70m | 163.7 | 589262600 | Framax Xlife plus panel C 0.90x3.30m | 196.6 | 589292500 |
| Framax Xlife plus panel 0.75x2.70m | 145.0 | 589263600 | Framax Xlife plus panel C 0.75x3.30m | 174.7 | 589293500 |
| Framax Xlife plus panel 0.60x2.70m | 110.1 | 589264600 | Framax Xlife plus panel C 0.60x3.30m | 137.7 | 589294500 |
| Framax Xlife plus panel 0.55x2.70m | 95.0 | 589332600 | Framax Xlife plus panel C 0.55x3.30m | 128.3 | 589330500 |
| Framax Xlife plus panel 0.50x2.70m | 93.6 | 589333600 | Framax Xlife plus panel C 0.50x3.30m | 121.2 | 589331500 |
| Framax Xlife plus panel 0.45x2.70m | 90.5 | 589265600 | Framax Xlife plus panel C 0.45x3.30m | 114.5 | 589295500 |
| Framax Xlife plus panel 0.30x2.70m | 69.5 | 589266600 | Framax Xlife plus panel C 0.30x3.30m | 89.3 | 589296500 |
| Framax Xlife plus-Element 2,70m | | | Framax Xlife plus panel C 2.70x2.70m | 435.5 | 589260000 |
| | | | Framax Xlife plus panel C 2.40x2.70m | 399.0 | 589275000 |
| | | | Framax Xlife plus panel C 1.35x2.70m | 222.5 | 589261000 |
| | | | Framax Xlife plus panel C 0.90x2.70m | 151.0 | 589262000 |
| | | | Framax Xlife plus panel C 0.75x2.70m | 135.5 | 589263000 |
| | | | Framax Xlife plus panel C 0.60x2.70m | 107.0 | 589264000 |
| | | | Framax Xlife plus panel C 0.55x2.70m | 96.0 | 589332000 |
| | | | Framax Xlife plus panel C 0.50x2.70m | 93.6 | 589333000 |
| | | | Framax Xlife plus panel C 0.45x2.70m | 87.0 | 589265000 |
| | | | Framax Xlife plus panel C 0.30x2.70m | 67.5 | 589266000 |
| | | | Framax Xlife plus panel C 1.35x1.35m | 114.0 | 589267000 |
| | | | Framax Xlife plus-Element | | |
| | | | Galvanised, powder-coated | | |
| | | | manufactured between 2019 and 2021 | | |
|  | | |  | | |
| | | | | | |
| Framax Xlife plus panel 2.70x2.70m | 435.5 | 589260600 | Framax Xlife plus panel B 0.90x3.30m | 215.0 | 589292000 |
| Framax Xlife plus panel 1.35x2.70m | 222.5 | 589261600 | Framax Xlife plus panel B 0.75x3.30m | 193.3 | 589293000 |
| Framax Xlife plus panel 0.90x2.70m | 163.7 | 589262600 | Framax Xlife plus panel B 0.60x3.30m | 140.6 | 589294000 |
| Framax Xlife plus panel 0.75x2.70m | 145.0 | 589263600 | Framax Xlife plus panel B 0.45x3.30m | 113.9 | 589295000 |
| Framax Xlife plus panel 0.60x2.70m | 110.1 | 589264600 | Framax Xlife plus panel B 0.30x3.30m | 88.5 | 589296000 |
| Framax Xlife plus panel 0.55x2.70m | 95.0 | 589332600 | | | |
| Framax Xlife plus panel 0.50x2.70m | 93.6 | 589333600 | Galvanised, powder-coated | | |
| Framax Xlife plus panel 0.45x2.70m | 90.5 | 589265600 | manufactured between 2015 and 2021 | | |
| Framax Xlife plus panel 0.30x2.70m | 69.5 | 589266600 | | | |
| Framax Xlife plus-Element 2,70m | | |  | | |
| | | | | | |













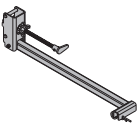

| | [kg] | Article N° | | [kg] | Article N° |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Framax Xlife plus frame hole plug 32mm NG Framax Xlife plus-Ankerstopfen 32mm NG Black Diameter: 3.5 cm | 0.004 | 589280500 |  | | |
| Framax Xlife universal panel 0.90x3.30m Framax Xlife universal panel 0.90x2.70m Framax Xlife universal panel 0.90x1.35m | 182.6 148.0 79.3 | 588228500 588122500 588124500 |  Galvanised, powder-coated Corners marked in blue | | |
| Framax Xlife plus universal panel 0.90x3.00m Framax Xlife plus-Uni-Element 0,90x3,00m Galvanised Powder-coated grey | 178.5 | 589368000 |  | | |
| Framax Xlife plus inside corner 30/30cm 3.30m Framax Xlife plus inside corner 30/30cm 3.00m Framax Xlife plus inside corner 30/30cm 2.70m Framax Xlife plus inside corner 30/30cm 1.35m Framax Xlife plus inside corner 30/30cm 0.60m Framax Xlife plus-Innenecke 30/30cm Galvanised Powder-coated grey | 123.0 102.0 95.5 53.3 26.4 | 589299600 589360000 589239600 589240600 589318000 |  | | |
| Framax Xlife plus ins. corner C 30/30cm 3.30m Framax Xlife plus ins. corner C 30/30cm 2.70m Framax Xlife plus ins. corner C 30/30cm 1.35m | 126.0 95.5 51.0 | 589299000 589239000 589240000 |  Galvanised, powder-coated manufactured between 2015 and 2021 | | |
| | | |  Galvanised, powder-coated | Framax Xlife inside corner 3.30m Framax Xlife inside corner 2.70m Framax Xlife inside corner 1.35m Framax Xlife-Innenecke | 117.9 97.0 51.2 588229500 588130500 588132500 |
| | | |  Galvanised, powder-coated | Framax Xlife plus outs. corner 10/10cm 3.30m Framax Xlife plus outs. corner 10/10cm 3.00m Framax Xlife plus outs. corner 10/10cm 2.70m Framax Xlife plus outs. corner 10/10cm 1.35m Framax Xlife plus outs. corner 10/10cm 0.60m Framax Xlife plus-Außenecke 10/10cm | 87.4 81.5 72.5 39.5 19.8 589310000 589361000 589311000 589312000 589320000 |
| | | |  Galvanised | Framax outside corner 3.30m Framax outside corner 3.00m Framax outside corner 2.70m Framax outside corner 1.35m Framax outside corner 0.60m Framax-Außenecke | 58.0 52.2 47.0 23.5 11.1 588227000 588964500 588126000 588128000 589319000 |
| | | |  Galvanised, powder-coated | Framax hinged inside corner I galv. 2.70m Framax hinged inside corner I galv. 1.35m Framax hinged inside corner I galv. 3.30m Framax-Scharnierecke I | 105.8 57.2 129.2 588136500 588137500 588610500 |
| | | |  Powder-coated blue | Framax hinged inside corner I 2.70m Framax hinged inside corner I 1.35m Framax hinged inside corner I 3.30m Framax-Scharnierecke I | 102.3 55.4 125.5 588136000 588137000 588610000 |


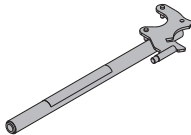



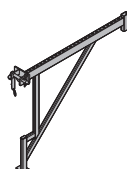
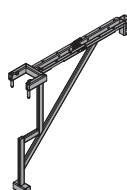
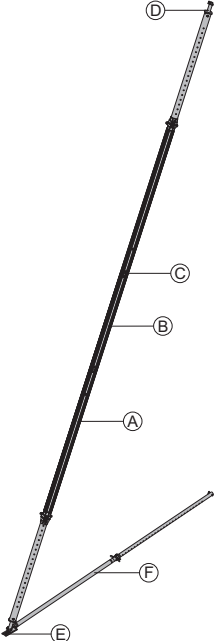




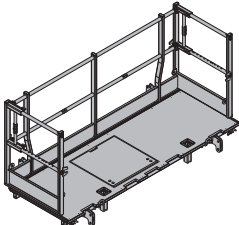

| | [kg] | Article N° | | [kg] | Article N° |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|------|------------|
| Framax hinged outside corner A galv. 3.30m Framax hinged outside corner A galv. 2.70m Framax hinged outside corner A galv. 1.35m Framax-Scharnierecke A verzinkt Galvanised, powder-coated | 64.0 52.8 27.5 | 588975000 588942000 588943000 |  | | |
| Framax hinged outside corner A 2.70m Framax hinged outside corner A 1.35m Framax-Scharnierecke A Powder-coated blue | 52.8 27.4 | 588134000 588135000 |  | | |
| Framax Xlife pilaster panel 1.35m left Framax Xlife pilaster panel 1.35m right Framax Xlife pilaster panel 3.30m left Framax Xlife pilaster panel 3.30m right Framax Xlife-Stützenvorlageelement Galvanised | 97.7 97.7 234.5 233.5 | 588973000 588974000 588971000 588972000 |  | | |
| Framax stripping corner I 2.70m Framax stripping corner I 1.35m Framax stripping corner I 3.30m Framax-Ausschalecke I Galvanised, powder-coated | 171.0 90.0 209.9 | 588675000 588614000 588676000 |  | | |
| Framax stripping spindle I Framax-Ausschalsspindel I Galvanised Height: 25 cm | 3.2 | 588618000 |  | | |
| Framax stripping spindle I with ratchet Framax-Ausschalsspindel I mit Ratsche Galvanised Height: 24.8 cm | 5.5 | 588653000 |  | | |
| | | | | | |
| Framax stripping cylinder I NG2 Framax-Ausschalzylinder I NG2 Painted yellow Width: 16 cm Height: 45.2 cm Follow the directions in the "Operating Instructions"! | 30.0 | 588980500 |  | | CE |
| Framax stripping cylinder I Framax-Ausschalzylinder I Painted yellow Width: 16 cm Height: 45.2 cm Follow the directions in the "Operating Instructions"! | 29.0 | 588980000 |  | | CE |
| Framax quick acting clamp RU Framax-Schnellspanner RU Galvanised Length: 20 cm | 3.1 | 588153400 |  | | |
| Framax multi function clamp Framax-Uni-Spanner Galvanised Length: 40 cm | 5.8 | 588169000 |  | | |
| Framax adjustable clamp Framax-Ausgleichsspanner Galvanised Length: 48 cm | 5.3 | 588168000 |  | | |
| Framax aligning clamp Framax-Richtspanner Galvanised | 8.0 | 589244000 |  | | |
| Framax stop-end waler tie 15-45cm Framax stop-end waler tie 15-75cm Framax-Stirnabschalzwinge Galvanised | 15.0 20.6 | 588940000 588941000 |  | | |
| Framax universal fixing bolt 10-16cm Framax-Universalverbinder 10-16cm Galvanised Length: 26 cm | 0.6 | 588158000 |  | | |
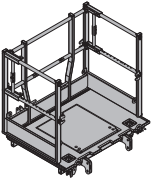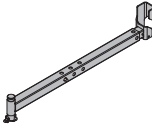
| | [kg] | Article N° | | [kg] | Article N° |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------------|
| Framax universal fixing bolt 10-25cm Framax-Universalverbinder 10-25cm  Galvanised Length: 36 cm | 0.69 | 583002000 | Framax head anchor 15-40cm Length: 72 - 81 cm Framax head anchor 15-100cm Length: 131 - 141 cm Framax-Kopfanker  Galvanised, powder-coated | 4.2 | 588969000 |
| Star grip nut 15.0 G Sternmutter 15,0 G  Galvanised Width: 10 cm Height: 5 cm Width-across: 27 mm | 0.43 | 587544000 | Framax floor fixing plate Framax-Bodenhalter  Galvanised Length: 17.6 cm Width: 7.7 cm | 0.87 | 588628000 |
| Framax stop-end tie Framax-Stirnanker  Galvanised Length: 29 cm | 1.5 | 588143000 | Wall-formwork support angle Auflagewinkel Wandschalung  Galvanised Length: 15.8 cm Width: 12 cm Height: 28 cm | 6.6 | 588967000 |
| Rod connector 15.0 Verbindungsmuffe 15,0  Non-treated Length: 10.5 cm Diameter: 3.2 cm  | 0.49 | 581981000 | Wall-formwork support angle 2G Auflagewinkel Wandschalung 2G  Galvanised | 7.0 | 589251000 |
| Framax universal waling 0.60m Framax universal waling 0.90m Framax universal waling 1.50m Framax-Klemmschiene  Painted blue | 6.6 10.6 16.8 | 588689000 588150000 588148000 | Panel strut 340 IB Elementstütze 340 IB consisting of: (A) Plumbing strut 340 IB Galvanised Length: 190.8 - 341.8 cm (B) Adjusting strut 120 IB Galvanised Length: 81.5 - 130.6 cm  Galvanised Delivery condition: folded closed | 24.3 | 580365000 |
| Framax universal corner waling Framax-Eckklemmschiene  Painted blue Leg length: 60 cm | 12.8 | 588151000 | (A) Plumbing strut 340 IB Galvanised Length: 190.8 - 341.8 cm (B) Adjusting strut 120 IB Galvanised Length: 81.5 - 130.6 cm | 16.7 | 588696000 |
| Framax wedge clamp Framax-Spannklemme  Galvanised Length: 21 cm | 1.5 | 588152000 | (B) Adjusting strut 120 IB Galvanised Length: 81.5 - 130.6 cm | 7.6 | 588248500 |
| Universal clamp 5-10cm Universalklemme 5-10cm  Galvanised Length: 28 cm | 1.9 | 589184000 | | | |
| Framax tensioning wedge R Framax-Spannkeil R  Galvanised Height: 11 cm | 0.2 | 588155000 | | | |
| Framax wedge bolt RA 7.5 Framax-Keilbolzen RA 7,5  Galvanised Length: 15 cm | 0.34 | 588159000 | | | |

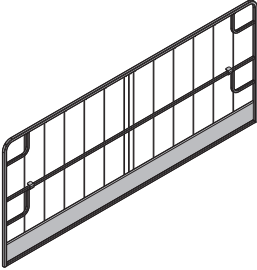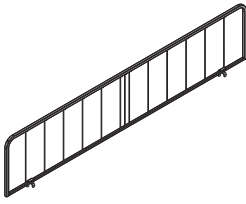





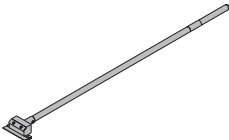

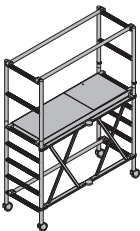

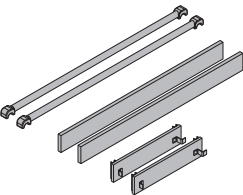



| | [kg] | Article N° | | [kg] | Article N° | | | |
|------------------------------------------------------------------------------------|------|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|------------|--|--|--|
| Eurex 60 550 | | | | | | | | |
| Eurex 60 550 | | | | | | | | |
| depending on length, comprising: | | | | | | | | |
| (A) Plumbing strut Eurex 60 550 | 42.5 | 582658000 |  <div>Galvanised Length: 75.5 cm</div> | | | | | |
| Powder-coated blue | | | | | | | | |
| Aluminium | | | | | | | | |
| Length: 343 - 553 cm | | | | | | | | |
| (B) Extension Eurex 60 2.00m | 21.3 | 582651000 |  <div>Galvanised Length: 18 cm</div> | | | | | |
| Powder-coated blue | | | | | | | | |
| Aluminium | | | | | | | | |
| Length: 250 cm | | | | | | | | |
| (C) Coupler Eurex 60 | 8.6 | 582652000 |  <div>Galvanised Diameter: 1.6 cm</div> | | | | | |
| Aluminium | | | | | | | | |
| Length: 100 cm | | | | | | | | |
| Diameter: 12.8 cm | | | | | | | | |
| (D) Connector Eurex 60 IB | 4.2 | 582657500 |  <div>PS Width: 8 cm Height: 7.5 cm</div> | | | | | |
| Galvanised | | | | | | | | |
| Length: 15 cm | | | | | | | | |
| Width: 15 cm | | | | | | | | |
| Height: 30 cm | | | | | | | | |
| (E) Plumbing strut shoe Eurex 60 EB | 8.0 | 582660500 |  <div>Galvanised Length: 103 cm Height: 84 cm</div> | | | | | |
| Galvanised | | | | | | | | |
| Length: 31 cm | | | | | | | | |
| Width: 12 cm | | | | | | | | |
| Height: 33 cm | | | | | | | | |
| (F) Adjusting strut 540 Eurex 60 IB | 27.8 | 582659500 |  <div>Galvanised Height: 32 cm</div> | | | | | |
| Galvanised | | | | | | | | |
| Length: 303.5 - 542.2 cm | | | | | | | | |
| Delivery condition: separate parts | | | | | | | | |
|  | | | | | | | | |
| Prop head EB | | | | | | | | |
| Stützenkopf EB | 3.1 | 588244500 |  <div>Galvanised Length: 40.8 cm Width: 11.8 cm Height: 17.6 cm</div> | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| Framax panel strut connector I | | | | | | | | |
| Framax-Elementstützenanschluss I | 29.0 | 589250000 |  <div>Galvanised</div> | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| Universal dismantling tool | | | | | | | | |
| Universal-Lösewerkzeug | | | 3.6 | 582768000 | | | | |
| Doka express anchor 16x125mm | | | | | | | | |
| Doka-Expressanker 16x125mm | | | 0.31 | 588631000 | | | | |
| Doka coil 16mm | | | | | | | | |
| Doka-Coil 16mm | | | 0.009 | 588633000 | | | | |
| Information plate for express anchor | | | | | | | | |
| Plakette Expressanker | | | 0.1 | 588630000 | | | | |
| Framax bracket 90 EP | | | | | | | | |
| Framax-Konsole 90 EP | | | 9.0 | 588979000 | | | | |
| Bracket XBS 90 EP | | | | | | | | |
| Konsole XBS 90 EP | | | 10.2 | 588700000 | | | | |
| Handrail post 1.00m | | | | | | | | |
| Geländer 1,00m | | | 3.8 | 584335000 | | | | |
| Bracket adapter XP FRR 50/30 | | | | | | | | |
| Konsolenadapter XP FRR 50/30 | | | 2.4 | 586486000 | | | | |

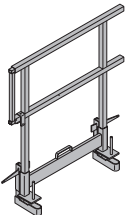
















| | [kg] | Article N° | | [kg] | Article N° |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Framax adapter XBS Framax-Adapter XBS  | 5.2 | 588701000 | Scaffold tube 48.3mm 0.50m Scaffold tube 48.3mm 1.00m Scaffold tube 48.3mm 1.50m Scaffold tube 48.3mm 2.00m Scaffold tube 48.3mm 2.50m Scaffold tube 48.3mm 3.00m Scaffold tube 48.3mm 3.50m Scaffold tube 48.3mm 4.00m Scaffold tube 48.3mm 4.50m Scaffold tube 48.3mm 5.00m Scaffold tube 48.3mm 5.50m Scaffold tube 48.3mm 6.00m Scaffold tube 48.3mmm Gerüstrohr 48,3mm  | 1.7 3.6 5.4 7.2 8.4 10.8 12.6 14.4 16.2 18.0 19.8 21.6 3.6 | 682026000 682014000 682015000 682016000 682017000 682018000 682019000 682021000 682022000 682023000 682024000 682025000 682001000 |
| Deck XBS 75/270cm Deck XBS 75/135cm Belag XBS  | 23.0 8.0 | 588702000 588710000 | Galvanised  | 0.8 | 682002000 |
| Hatch deck XBS 75/270cm Durchstiegsbelag XBS 75/270cm  | 24.9 | 588703000 | Framax pouring platform O 1.25/2.70m Framax-Betonierbühne O 1,25/2,70m  | 117.0 | 588360000 |
| Infill deck XBS 75cm Ausgleichsbelag XBS 75cm  | 25.0 | 588704000 | Timber parts varnished yellow Steel parts galvanised Delivery condition: folded closed | | |
| Handrail post XBS 1.40m Geländersteher XBS 1,40m  | 4.0 | 588705000 | Framax pouring platform U 1.25/2.70m Framax-Betonierbühne U 1,25/2,70m  | 127.5 | 588377000 |
| Side railing XBS 75cm Seitengeländer XBS 75cm  | 10.0 | 588706000 | Steel parts galvanised Timber parts varnished yellow Delivery condition: folded closed | | |
| Handrail extension XBS Geländerverlängerung XBS  | 6.3 | 588707000 | Xsafe plus lifting adapter Framax Xsafe plus-Umsetzadapter Framax  | 6.6 | 586436000 |
| Scaffold tube connection Gerüstrohranschluss  | 0.27 | 584375000 | Galvanised Height: 7 cm | | |
| | | | Xsafe plus platform 2.70m with side railing Xsafe plus-Bühne 2,70m mit Seitengeländer  | 189.0 | 586401000 |















| | [kg] | Article N° | | [kg] | Article N° |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------------|
| Xsafe plus platform 1.35m with side railing Xsafe plus-Bühne 1,35m mit Seitengeländer  Steel parts galvanised Timber parts varnished yellow Height: 136 cm Delivery condition: folded closed | 131.5 | 586438000 | Xsafe universal ladder holder Xsafe-Uni-Leiternhalter  Galvanised Galvanised, powder-coated | 3.3 | 586447000 |
| Xsafe plus handrail extension Xsafe plus-Geländerverlängerung  Galvanised Length: 81 cm Width: 53 cm | 4.3 | 586420000 | Framax adapter XP Framax-Adapter XP  Galvanised Height: 56 cm | 8.0 | 586475000 |
| Xsafe plus counter railing 1.35m Xsafe plus counter railing 2.70m Xsafe plus-Gegengeländer  Galvanised Height: 200 cm Delivery condition: folded closed | 17.0 23.5 | 586429000 586425000 | Railing clamp XP 40cm Geländerzwinge XP 40cm  Galvanised Height: 73 cm | 7.7 | 586456000 |
| Xsafe plus supporting strut EB Xsafe plus-Stützenstrebe EB  Galvanised Length: 91 - 99 cm | 8.0 | 586412500 | Handrail post XP 1.20m Geländersteher XP 1,20m  Galvanised Height: 118 cm | 4.1 | 586460000 |
| Xsafe plus telescopic ladder Xsafe plus-Teleskopleiter  Galvanised Height: 158 - 274 cm | 15.0 | 586421000 | Toeboard holder XP 1.20m Fußwehrhalter XP 1,20m  Galvanised Height: 21 cm | 0.64 | 586461000 |
| Xsafe plus ladder extension 1.15m Xsafe plus-Leiternverlängerung 1,15m  Galvanised Height: 126 cm | 7.0 | 586422000 | Handrail post XP 0.60m Geländersteher XP 0,60m  Galvanised Height: 68 cm | 5.0 | 586462000 |
| Xsafe plus ladder starter piece Xsafe plus-Leiternhalter  Galvanised Length: 95 cm | 6.8 | 586424000 | Toeboard holder XP 0.60m Fußwehrhalter XP 0,60m  Galvanised Height: 21 cm | 0.77 | 586463000 |


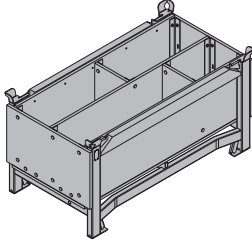
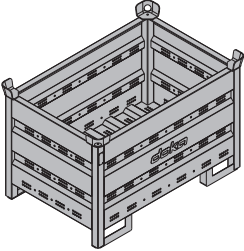

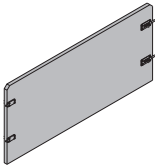
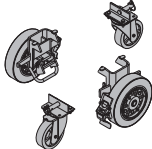
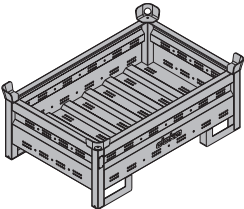
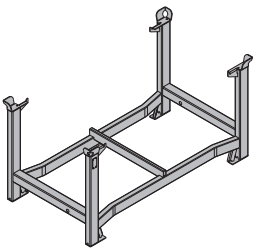
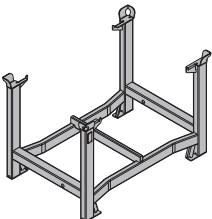
| | [kg] | Article N° | | [kg] | Article N° |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------------|
| Protective grating XP 2.70x1.20m Protective grating XP 2.50x1.20m Protective grating XP 2.00x1.20m Protective grating XP 1.20x1.20m Schutzgitter XP | 22.2 20.5 17.4 12.0 | 586450000 586451000 586452000 586453000 |  Galvanised | | |
| Protective grating XP 2.70x0.60m Protective grating XP 2.50x0.60m Protective grating XP 2.00x0.60m Protective grating XP 1.20x0.60m Schutzgitter XP | 10.1 9.5 8.0 5.0 | 586466000 586472000 586473000 586491000 |  Galvanised | | |
| Velcro fastener 30x380mm Klettverschluss 30x380mm | 0.02 | 586470000 |  Yellow | | |
| Handrail clamp S Schutzgeländerzwinge S | 11.5 | 580470000 |  Galvanised Height: 123 - 171 cm | | |
| Handrail post 1.10m Schutzgeländer 1,10m | 5.5 | 584384000 |  Galvanised Height: 134 cm | | |
| Side handrail clamping unit T Seitenschutzgeländer T | 29.1 | 580488000 |  Galvanised Length: 115 - 175 cm Height: 112 cm | | |
| Framax lifting hook Framax-Umsetzbügel | 10.6 | 588149000 |  Galvanised Height: 22 cm Follow the directions in the "Operating Instructions"! | CE | |
| Framax lifting hook 20kN Framax-Umsetzbügel 20kN | 12.8 | 588526000 |  Galvanised Height: 30 cm Follow the directions in the "Operating Instructions"! | CE | |
| Framax Xlife plus stacking cone Framax Xlife plus-Stapelkonus | 0.03 | 589285000 |  Blue Diameter: 8 cm | | |
| Framax Xlife plus stacking cone I Framax Xlife plus-Stapelkonus I | 0.03 | 589286000 |  Black Diameter: 8 cm | | |
| Doka 4-part chain 3.20m Doka-Vierstrangkette 3,20m | 15.0 | 588620000 |  Follow the directions in the "Operating Instructions"! | CE | |
| Framax transport bolt Framax-Transportbolzen | 1.9 | 588621000 |  Follow the directions in the "Operating Instructions"! | CE | |
| Framax transport gear Framax-Transportgehänge | 13.3 | 588232000 |  Galvanised Follow the directions in the "Operating Instructions"! | CE | |
| Dokamatic lifting strap 13.00m Dokamatic-Umsetzgurt 13,00m | 10.5 | 586231000 |  Green Follow the directions in the "Operating Instructions"! | CE | |

182 999811202 - 06/2025
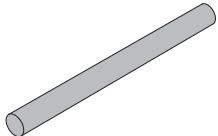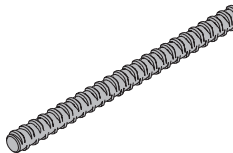
| | [kg] | Article N° | | [kg] | Article N° |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------|
| Framax stripping aid Framax-Ausschalhilfe  Galvanised | 3.2 | 589246000 | Tie-off set PPE type A Anhängeset PSA Typ A  | 0.49 | 589199500 |
| Framax telescopic assembling tool Framax-Teleskop-Montagestange  Aluminium Length: 230 - 400 cm | 3.8 | 588651000 | Tie rod system Framax Xlife plus 20.0  Galvanised | | |
| Framax assembling tool Framax-Montagestange  Galvanised Length: 193 cm | 4.2 | 588678000 | Framax Xlife plus form tie 20.0 15-30cm Length: 70 cm Framax Xlife plus form tie 20.0 25-40cm Length: 80 cm Framax Xlife plus form tie 20.0 45-60cm Length: 100 cm Framax Xlife plus-Anker 20,0 | 5.0 5.4 6.2 | 589277000 589278000 589298000 |
| Framax Xlife plus anchoring-sleeve cleaner Framax Xlife plus-Ankerhülsenreiniger  Painted blue Length: 16.6 cm | 0.85 | 589328000 | Framax Xlife plus tie rod 20.0 15-30cm Length: 70 cm Framax Xlife plus tie rod 20.0 25-40cm Length: 80 cm Framax Xlife plus tie rod 20.0 45-60cm Length: 100 cm Framax Xlife plus-Ankerstab 20,0 | 2.7 3.1 4.0 | 589324000 589325000 589326000 |
| Double scraper Xlife 100/150mm 1.40m Doppelschaber Xlife 100/150mm 1,40m  | 2.8 | 588674000 | Framax Xlife plus form-tie nut I 20.0 Framax Xlife plus-Ankermutter I 20,0  Length: 12 cm | 1.2 | 589216500 |
| Wheel-around scaffold DF Mobilgerüst DF  Aluminium Length: 185 cm Width: 80 cm Height: 255 cm Delivery condition: separate parts | 44.0 | 586157000 | Framax Xlife plus parking bolt Framax Xlife plus-Parkbolzen  Galvanised Length: 20 cm | 0.42 | 589327000 |
| Wheel-around scaffold DF accessory set Zubehörset Mobilgerüst DF  Aluminium Timber parts varnished yellow Length: 189 cm | 13.3 | 586164000 | Framax Xlife plus distance protector NG Framax Xlife plus-Distanzsicherung NG  Galvanised Height: 22 cm Width-across: 24 mm | 1.3 | 589217500 |
| | | | Framax Xlife plus reducer I 20.0 Framax Xlife plus-Reduzierstück I 20,0  Galvanised Length: 12.5 cm | 0.56 | 589329000 |
| | | | Framax Xlife plus ratchet 1/2" SW24 L Framax Xlife plus-Knarre 1/2" SW24 L  Length: 30 cm | 0.92 | 589221000 |

| | [kg] | Article N° | | [kg] | Article N° |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Framax Xlife plus ratchet 3/4" SW24 Framax Xlife plus-Knarre 3/4" SW24 Length: 100 cm  | 4.4 | 589220000 | Framax Xlife plus screw plug 25mm Framax Xlife plus-Schraubstopfen 25mm Black Width-across: 16 mm  | 0.1 | 589308000 |
| Framax Xlife plus fair-faced concr. cone 87mm Framax Xlife plus-Sichtbetonkonus 87mm Blue  | 0.09 | 589282000 | Framax Xlife plus sealing plug 25mm Framax Xlife plus-Dichtstopfen 25mm Yellow  | 0.02 | 589248000 |
| Sealing disc 20/43 20.0/26.5 Dichtscheibe 20/43 20,0/26,5 Black  | 0.002 | 581836000 | Framax Xlife plus sealing plug 28mm Framax Xlife plus-Dichtstopfen 28mm Blue  | 0.02 | 589249000 |
| Screw sleeve 20.0 Schraubhülse 20,0 PP Yellow Length: 20 cm Diameter: 3.1 cm  | 0.03 | 584386000 | Fibre concrete plug D24 21mm Faserbetonstopfen D24 21mm Grey  | 0.02 | 588922000 |
| Framax Xlife plus cone spanner Framax Xlife plus-Konusschlüssel Galvanised Length: 5.5 cm  | 0.28 | 589284000 | Framax Xlife plus plug 24mm with hole Framax Xlife plus-Stopfen 24mm mit Loch PE Colourless  | 0.004 | 589223000 |
| Countersink concrete D12-35mm Kegelsenker Beton D12-35mm  | 0.41 | 589247000 | Expanding mortar EM 0-0.4 E1 25kg Expansiv-Mörtel EM 0-0,4 E1 25kg | 25.0 | 699136109 |
| Framax Xlife plus plug 38mm Framax Xlife plus-Verschlussstopfen 38mm PE Grey  | 0.006 | 589288000 | KarPox Double cartridge 2K Duo 2x310ml KarPox Doppelkartusche 2K Duo 2x310ml | 0.9 | 699136090 |
| Framax Xlife plus plug 24mm Framax Xlife plus-Verschlussstopfen 24mm PE Grey  | 0.005 | 589219000 | Tie rod system 20.0 | | |
| Framax Xlife plus concrete cone 28/25 300mm Framax Xlife plus-Betonkonus 28/25 300mm Grey  | 0.36 | 589338000 | Tie rod 20.0mm galvanised 0.50m Tie rod 20.0mm galvanised 0.75m Tie rod 20.0mm galvanised 1.00m Tie rod 20.0mm galvanised 1.25m Tie rod 20.0mm galvanised 1.50m Tie rod 20.0mm galvanised 2.00m Tie rod 20.0mm galvanised 2.50m Tie rod 20.0mm galvanisedm Tie rod 20.0mm non-treated 0.50m Tie rod 20.0mm non-treated 0.75m Tie rod 20.0mm non-treated 1.00m Tie rod 20.0mm non-treated 1.50m Tie rod 20.0mm non-treated 2.00m Tie rod 20.0mm non-treatedm Ankerstab 20,0mm  | 1.3 1.9 2.5 3.2 3.8 5.0 6.3 2.5 1.3 1.9 2.5 3.8 5.0 2.5 | 581411000 581417000 581412000 581418000 581413000 581414000 581430000 581410000 581405000 581416000 581406000 581407000 581408000 581403000 |
| Framax Xlife plus fair-faced concr. plug 87mm Framax Xlife plus-Sichtbetonstopfen 87mm Grey  | 0.19 | 589283000 | Super plate 20.0 B Superplatte 20,0 B Galvanised Height: 7 cm Diameter: 14 cm Width-across: 34 mm  | 2.0 | 581424000 |
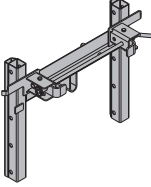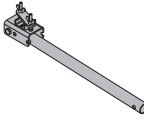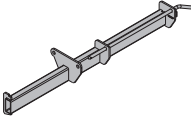
| | [kg] | Article N° | | [kg] | Article N° |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|------------------------|
| Hexagon nut 20.0 Sechskantmutter 20,0  Galvanised Length: 7 cm Width-across: 41 mm  | 0.4 | 581420000 | System ladder XS 4.40m System-Leiter XS 4,40m  Galvanised | 33.2 | 588640000 |
| Plastic tube 26mm 2.00m Kunststoffrohr 26mm 2,00m  PVC Grey Diameter: 3.1 cm | 0.59 | 581463000 | | | |
| Universal cone 26/10mm Universal-Konus 26/10mm  Grey Diameter: 5 cm | 0.008 | 581464000 | | | |
| Plug 26mm Verschlussstopfen 26mm  PE Grey | 0.006 | 581465000 | Ladder extension XS 2.30m Leiternverlängerung XS 2,30m  Galvanised | 19.1 | 588641000 |
| Ladder system XS | | | | | |
| Connector XS wall formwork Anschluss XS Wandschalung  Galvanised Width: 89 cm Height: 63 cm | 20.8 | 588662000 | Securing barrier XS Sicherungsschranke XS  Galvanised Length: 80 cm | 4.9 | 588669000 |
| Fixing clamp XS Framax Befestigungsklemme XS Framax  Galvanised Length: 20 cm Width-across: 27 mm | 1.5 | 588677000 | Ladder cage XS 1.00m Ladder cage XS 0.25m Rückenschutz XS  Galvanised | 16.5 10.5 | 588643000 588670000 |
| Connector XS Framax/Alu-Framax Anschluss XS Framax/Alu-Framax  Galvanised Length: 115 cm | 11.2 | 588639000 | | | |
| Connector XS column formwork platform Anschluss XS Stützenbühne  Galvanised Length: 123 cm | 10.0 | 588637000 | Ladder cage exit XS Rückenschutz-Ausstieg XS  Galvanised Height: 132 cm | 17.0 | 588666000 |

| | [kg] | Article N° | | [kg] | Article N° |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|------------|
| Multi-trip packaging | | | | | |
| Doka skeleton transport box 1.70x0.80m Doka-Gitterbox 1,70x0,80m  Galvanised Height: 113 cm | 87.0 | 583012000 | Doka accessory box Doka-Kleinteilebox  Timber parts varnished yellow Steel parts galvanised Length: 154 cm Width: 83 cm Height: 77 cm | 106.4 | 583010000 |
| Doka multi-trip transport box 1.20x0.80m Doka-Mehrwegcontainer 1,20x0,80m  Galvanised Height: 78 cm | 70.0 | 583011000 | Universal castor wheel for transport pallet Universal-Lenkrolle Transportgebinde  Galvanised Height: 28.8 cm | 6.0 | 584043000 |
| Multi-trip transport box partition 0.80m Multi-trip transport box partition 1.20m Mehrwegcontainer Unterteilung  Steel parts galvanised Timber parts varnished yellow | 3.7 5.5 | 583018000 583017000 | Bolt-on castor set B Anklemm-Radsatz B  Painted blue | 33.6 | 586168000 |
| Doka multi-trip transport box 1.20x0.80x0.41m Doka-Mehrwegcontainer 1,20x0,80x0,41m  Galvanised | 42.5 | 583009000 | | | |
| Doka stacking pallet 1.55x0.85m Doka-Stapelpalette 1,55x0,85m  Galvanised Height: 77 cm | 41.0 | 586151000 | | | |
| Doka stacking pallet 1.20x0.80m Doka-Stapelpalette 1,20x0,80m  Galvanised Height: 77 cm | 38.0 | 583016000 | | | |



Formwork & Scaffolding.
We make it work.



www.doka.com/framax-xlife-plus